User Manual

Model: FI9818W

Indoor HD Pan/Tilt Wireless IP Camera

Black

White

Table of Contents

1 Overviews....3
1.1 Key Features....3
1.2 Read Before Use....4
1.3 Packing Contents....4
1.4 Physical Description....4
2 Surveillance Software GUI....6
2.1 Login Window....7
2.2 Surveillance Window....8
3 Advanced Camera Settings....17
3.1 Device Status....17
3.1.1 Device Information....17
3.1.2 Device Status....18
3.1.3 Session status....18
3.1.4 Log....19
3.2 Basic Settings....19
3.2.1 Camera Name....19
3.2.2 Camera Time....20
3.2.3 Mail Settings....20
3.2.4 User Accounts....23
3.2.5 Multi-Camera....25
3.3 Network....31
3.3.1 IP Configuration....31
3.3.2 PPPoE....33
3.3.3 DDNS....33
3.3.4 WiFi....37
3.3.5 UPnP....40
3.3.6 Port....40
3.4 Video....42
3.4.1 Settings....43
3.4.2 On Screen Display....43
3.4.3 Snapshot Settings....45
3.5 Alarm....45
3.6 Record....49
3.7 PTZ....50
3.7.1 Pan/Tilt Speed....50
3.7.2 Preset Settings....50
3.7.3 Pan/ Tilt Start Mode....54
3.8 Path Settings....54
3.9 Firewall....55
3.10 System....56
3.10.1 Back up& Restore settings....56
3.10.2 System upgrade....57
3.10.3 Factory reset....59
3.10.4 Reboot System....59

4 Phone APPs..... 60
4.1 APP for Android cell phones..... 60
4.2 APP for iPhones..... 68
5 APPENDIX..... 75
5.1 Frequently Asked Questions..... 75
5.1.1 How to download and installl the ActiveX for Firefox users..... 75
5.1.2 How to download and installl the ActiveX for Google Chrome users..... 76
5.1.3 I have forgotten the administrator password..... 78
5.1.4 Camera can not record when I click Record button or I can't change the manually record path..... 78
5.1.5 Subnet doesn't match..... 78
5.1.6 No Pictures Problems..... 78
5.1.7 Can't access IP camera in internet..... 79
5.1.8 UPnP always failed..... 80
5.1.9 Camera can not connect wireless..... 80
5.1.10 Can't see other cameras listed in multi-device when using remote access..... 80
5.2 Default Parameters..... 80
5.3 Specifications..... 81
5.4 CE & FCC..... 82
Electromagnetic Compatibility (EMC)..... 82
5.5 WARRANTY..... 82
6 OBTAINING TECHNICAL SUPPORT..... 86

1 Overviews

FOSCAM FI9818W is an integrated wireless IP Camera with a color CMOS sensor enabling viewing resolution 1280*720. It combines a high quality digital video camera, with a powerful web server, to bring clear video to your desktop from anywhere on your local network or over the Internet.

With flexible 300-degree pan and 120-degree tilt, FI9818W gives users more comprehensive control over a monitored site. The FI9818W supports the industry-standard H.264 compression technology, drastically reducing file sizes and conserving valuable network bandwidth.

The IPCAM is based on the TCP/IP standard. There is a WEB server inside which could support Internet Explore. Therefore the management and maintenance of your device is simplified by using the network to achieve the remote configuration and start-up.

The camera is designed for indoor surveillance applications such as retail stores, offices or banks. Controlling the IPCAM and managing images are simplified by using the provided web interface across the network utilizing wireless connectivity.

FOSCAM provides Phone APPs for Android and iPhone users, please search “Foscam ip cam viewer” and install it through APP Store, then you can view your camera directly as a computer.

1.1 Key Features

- Standard H.264 video compression algorithm to satisfy the transmission of high definition video in narrow bandwidth network
- 1.0 Mega Pixel
- Pan 300 degree, tilt 120 degree
- Supports IE/Firefox/Google/Safari browser or any other standard browsers
- Supports WEP,WPA and WPA2 Encryption
- Wi-Fi compliant with wireless standards IEEE 802.11b/g/n
- IR night vision (Range:8m)
- Supports image snapshot
- Supports dual-stream
- Supports IR-Cut and the filter change automatically
- Embedded FOSCAM DDNS(dynamic domain name service) Service
- Supports two-way audio / remote viewing & record from anywhere anytime
- Multi-level users management with password protection
- Supports Gmail as sender on Mail Service Settings
- Motion detection alert via email or upload image to FTP
- Supporting Third Party Domain Name Service
- Providing Phone APPs for Android and iPhone users
- Supports multiple network protocols: HTTP /TCP /IP /UDP /FTP /DHCP /DDNS / UPNP
- Providing Central Management Software to manage or monitor multi-cameras

1.2 Read Before Use

Please first verify that all contents received are complete according to the Package Contents listed below. Before the Network Camera is installed, please carefully read and follow the instructions in the Quick Installation Guide to avoid damage due to faulty assembly and installation. This also ensures the product is used properly as intended.

1.3 Packing Contents

● IPCAM×1	● CD×1
● Wi-Fi Antenna×1 (only available for wireless model)	● Quick Installation Guide ×1
● DC Power Supply×1	● Warranty Card×1
● Mounting bracket×1(option)	
● Network Cable×1	

1.4 Physical Description

Front Panel

Figure 1.1

Infrared LED: 11 IR LEDs

LENS: CMOS sensor with fixed focus lens.

WIFI Antenna: Wireless Antenna

Microphone: Built-in microphone

Speaker: Built-in speaker

Rear Panel

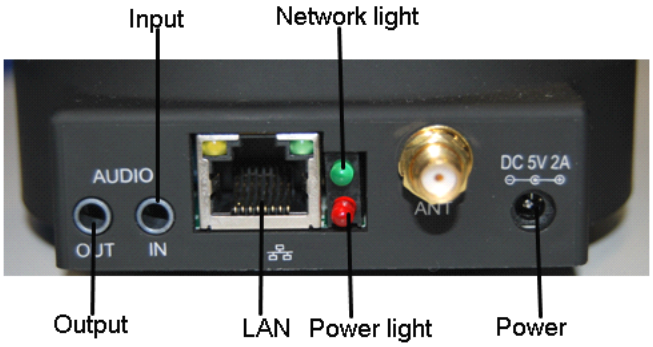

Figure 1.2

LAN: RJ-45/10-100 Base T

Power: DC 5V/2A Power supply

Power Light: If the power adapter works well, the light will turn on.

Network Light: The LED will blink when power and network cable are plugged in

Audio Input: This jack is used to plug an external microphone

Audio Output: This jack is used to plug an external speaker

Bottom View

There are up to three labels located at the bottom of the camera; this is an important feature of original Foscam cameras. If your camera does not have labels as shown in Figure 1.3, it may be a clone. Cloned Foscam cameras can not use original firmware and are not eligible for warranty or technical services.

Figure 1.3

Reset button: Press and hold down the RESET BUTTON for 5 seconds. Wait for 20 seconds after released, the IP camera will reboot and it will be reset back to factory default settings. You must power on the camera before reset.

2 Surveillance Software GUI

Please refer to the Quick Installation Guide if you install the camera at first time. After finishing quick installation, you can take time to learn the operation of the software.

2.1 Login Window

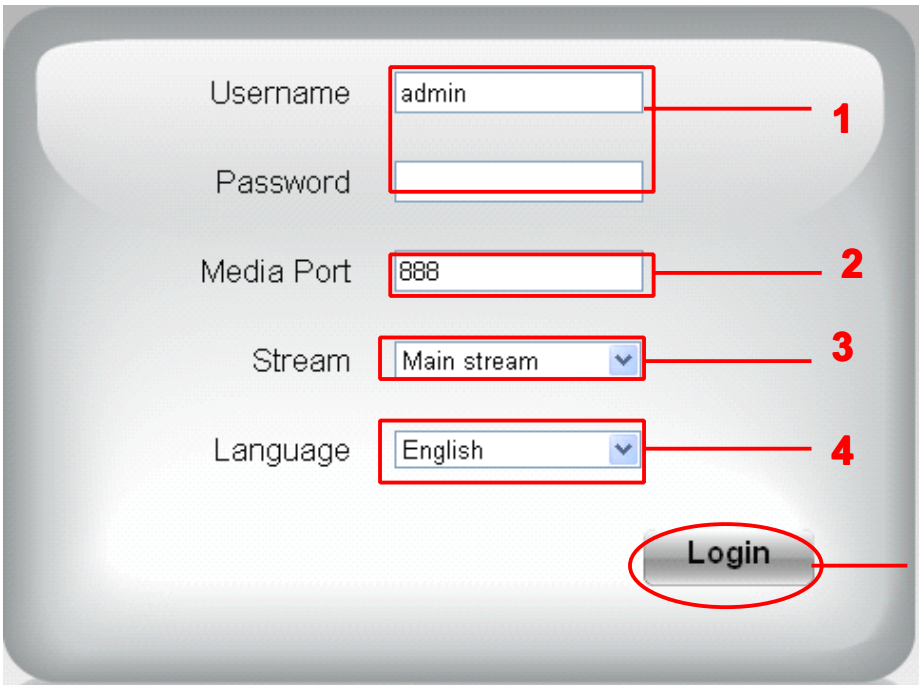

Figure 2.1

Please check the login window above, it was divided to 5 sections from no. 1 to 5.

Section1 Enter the User name and password

The default administrator username is admin with a blank password, please reset the password at first using and prevent unauthorized users login the camera (read chapter 3.2.4 about how to change password).

Section2 Media port

The Media port is used to transfer video stream, and the default port no. is 888, you can reset the port no. between 1 ~65535 on the **Settings**->**Network**->**Port** page. The camera will obtain the port no. automatically, you need not to fill it manually.

Section3 Stream

The camera supports two stream modes: Main stream and sub stream. If you want to access the camera form LAN, here you can select Main stream. If you want to access the camera from Internet, here we recommend sub stream.

Note: When the network bandwidth is badly you'd better select Sub Stream and the video will be more fluency.

Section4 Select the language

You can select the language you need via click on the language dropdown list to switch.

Section5 Login the camera

Click Login button and you will see the surveillance windows.

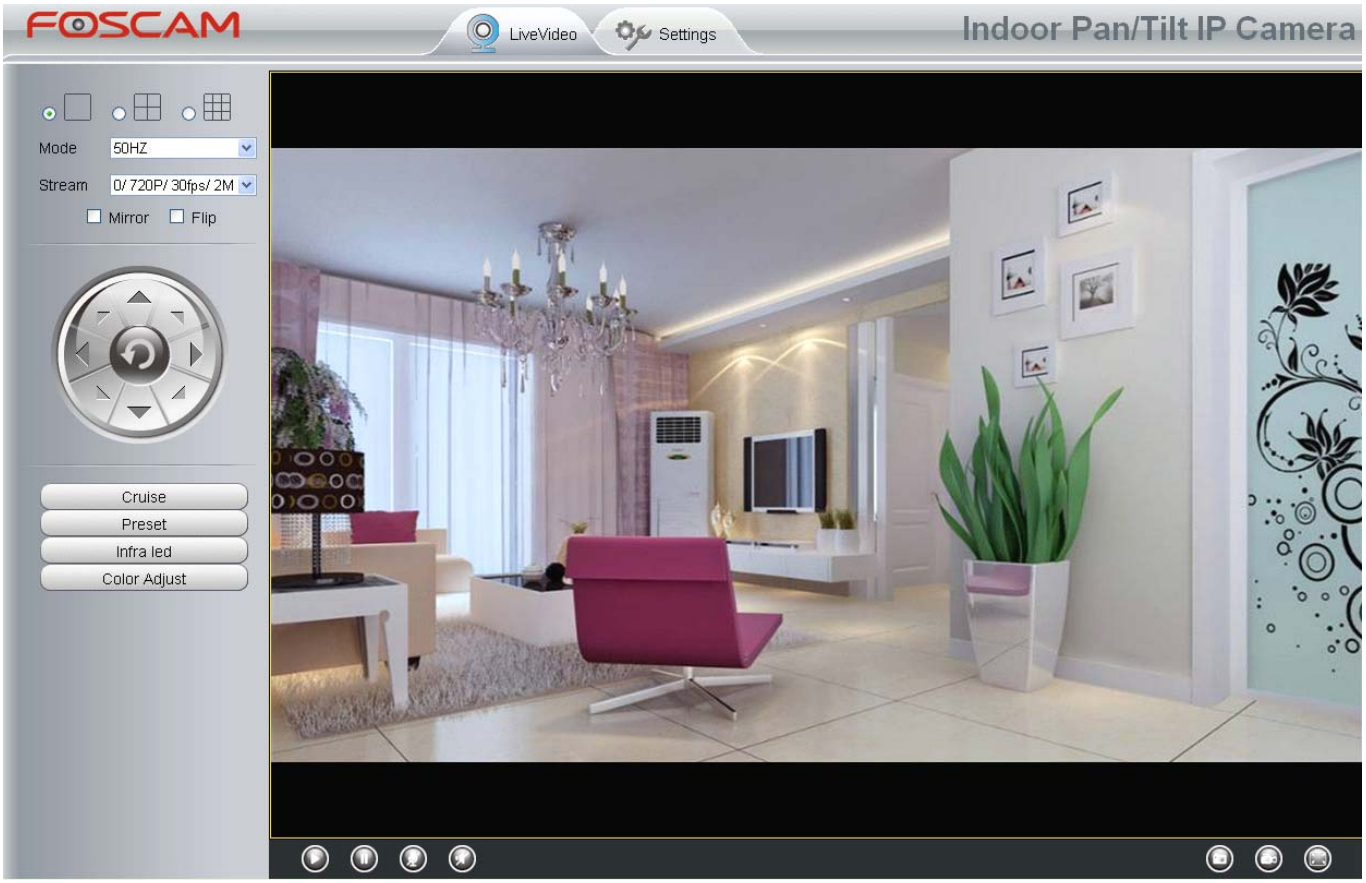

Figure 2.2

2.2 Surveillance Window

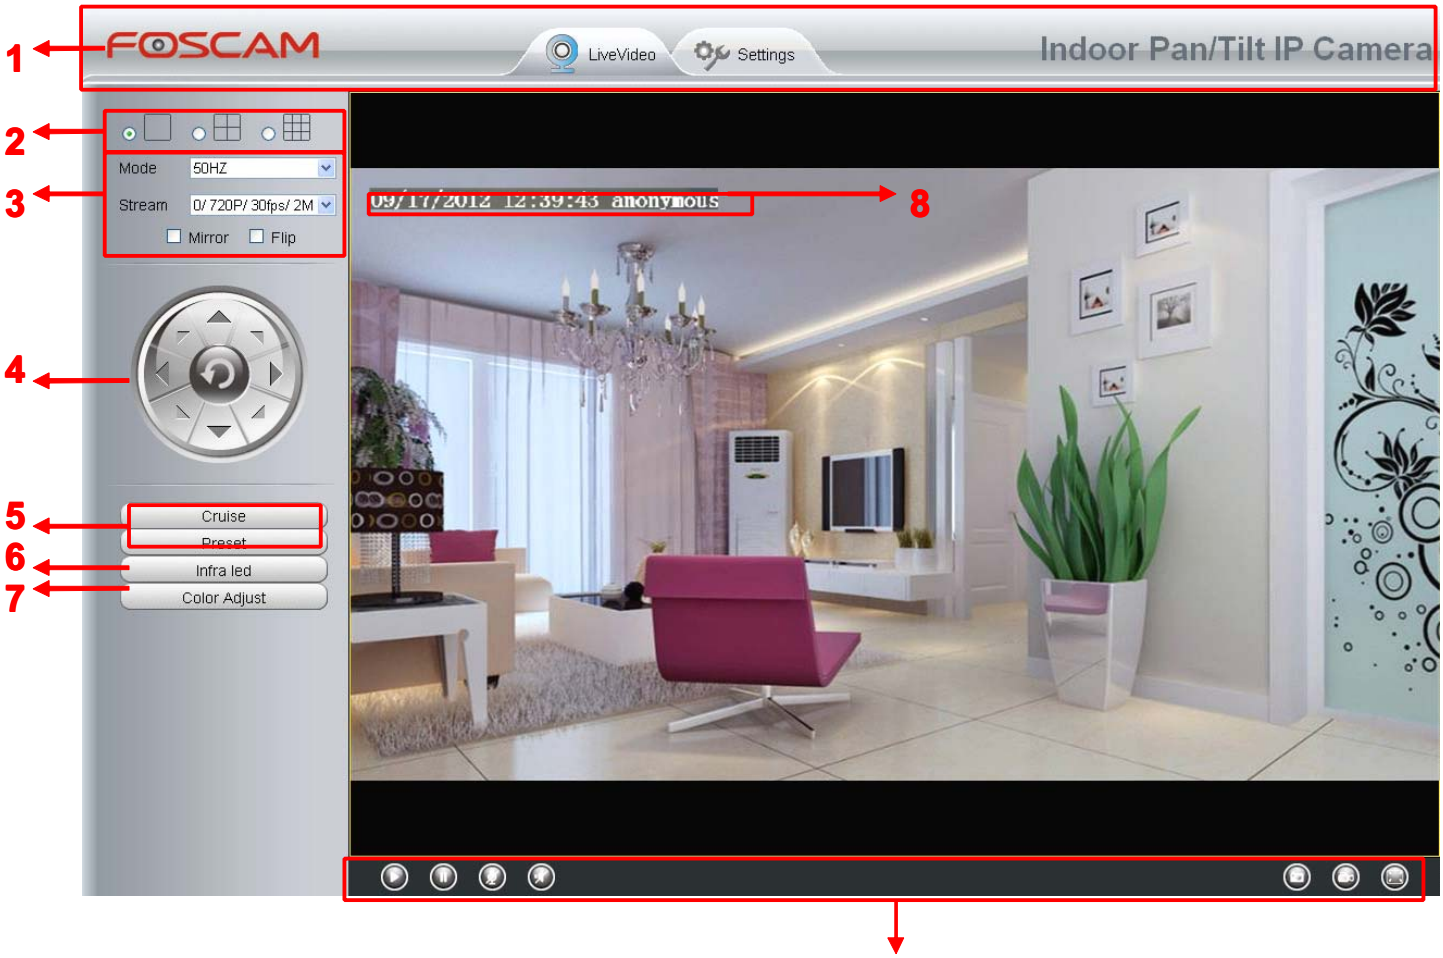

Figure 2.3

Section1 FOSCAM Logo/ LiveVideo / Settings buttons

FOSCAM: FOSCAM LOGO

LiveVideo: Path to surveillance window. Click this button and back to the surveillance window

Settings: Path to Administrator Control Panel, Click it, and it will lead to Administrator Control Panel and do advanced settings.

Section2 Multi-Device Window

The firmware inside the camera supports up to maximum of 9 cameras being monitoring at the same time. You can add other cameras in multi-device setting (read chapter 3.2.5).

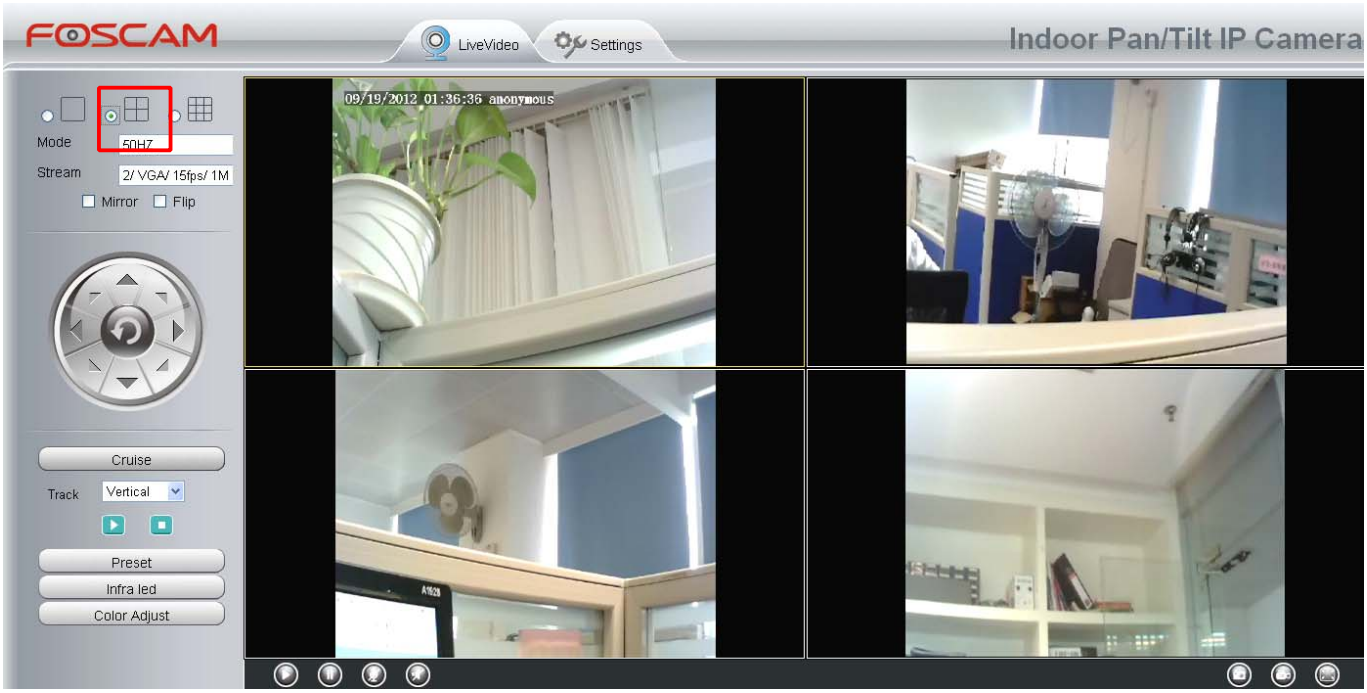

Figure 2.4

Section3 Mode/ Stream / Mirror/ Flip buttons

Mode

1) 50HZ ---------Indoor surveillance (Region: Europe, China)
2) 60HZ ---------Indoor surveillance (Region: USA, Canada)

Stream

The default Stream supports four modes: 0/720P/30fps/2M, 1/VGA/25fps/2M, 2/VGA/ 15fps/ 1M and 3/ VGA/10fps/200 The format of the stream type is **Stream type no. / Resolution / Maximum frame rate/ Bit rate**

1) Stream type no. : The number is used to identify the stream type.

2) 720P/ VGA

There are two resolutions, the bigger one is 720P, and the smaller one (VGA) is 640x480 pixels. The bigger the resolution, the better of the image quality is. If you are accessing the camera via internet and want to get more fluent video streaming, please select resolution VGA.

3) Maximum frame rate

When the video format is 50Hz, the maximum frame rate is 25 fps. When the video format is 60Hz, the maximum frame rate is 30 fps. You should lower frame rate when the bandwidth is limited. Normally, when the frame rate above 15, you can achieve fluently video.

4) Bit rate

Generally speaking, the larger the bit rate is, the clearer video will become. But the bit rate

configuration should combine well with the network bandwidth. When the bandwidth is very narrow, and bit rate is large, that will lead to video can not play well.

You can reset the stream type on **Settings-> Video-> Settings** panel(chapter 3.4.1). After changing, please re-login the camera and you can see the modification.

Section4 Pan/Tilt Control

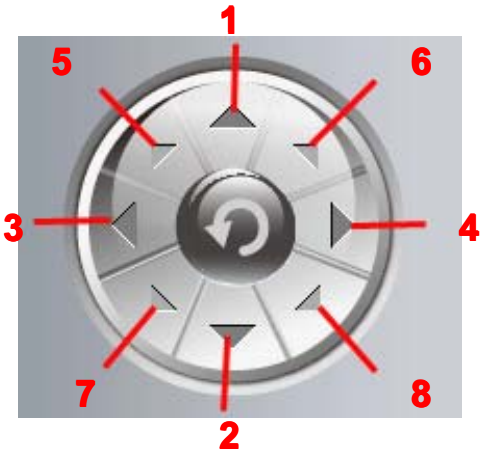

1------Up control button, 2------Down control button,

3------Left control button, 4------Right control button,

5----- Up-Left control button 6----- Up-Right control button

7----- Down-Left control button 8----- Down-Right control button

Click this button and go to center

Section5 Cruise / Preset settings

Cruise Settings

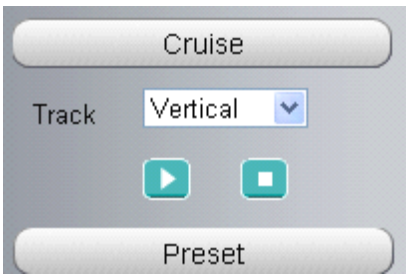

The default cruise tracks has two types: Vertical and Horizontal.

Vertical: The camera will rotate from up to down.

Horizontal: The camera will rotate from left to right.

: Start cruise. : Stop cruise.

If you want to define or change the cruise trace, please go to **Settings---PTZ---Preset Settings** panel.

How to do cruise?

Firstly: Select one track in the track dropdown list

Secondly: Click Start cruise button ,the camera will cruise following the predefined path.

Thirdly: Click stop button and finish cruising.

Preset settings

IPCAM supports 16 preset positions, which is considered enough for DIY home & small business surveillance market

The default preset position is TopMost, BottomMost, LeftMost, RightMost, you can add other preset positions.

: **Add** Click this icon to save the position you need the camera to remember

: **Delete** Select one preset position and click this button to delete it.

GO Select one preset position in the preset dropdown list and click Go to make the camera move the preset position

How to do preset position?

Firstly, move the camera and stop at a desired place where you want make preset position.

Secondly, click button and enter a descriptive name for the preset position. The preset position cannot contain special characters. Then click OK to save it. If you want to reset the preset position, click Cancel.

After that, you can move the camera and stop at another place, and set another preset position. You can do all the 16 preset positions with this method.

If you want to see one preset position you have set, only select the preset position name from the preset dropdown list, and click go button, the camera will go to the preset position.

Section6 IR Led Lights

Click Infra led and there are two modes to adjust the infrared led: Auto and Manual . The default mode is Auto.

Auto: Select it and the camera will adjust the infra led (on or off) automatically.

Manually: Select it and you can turn on or turn off the infra led manually.

Section7 Image quality settings

In this page, you can tune Hue, Brightness, Contrast, Saturation, and Sharpness to get higher quality.

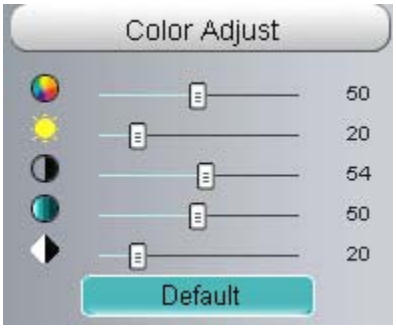

Section8 OSD

If you have added time and camera name in the video, you can see it in the live window.

Go to **Settings ---Basic settings---Camera name** panel, and you can change another device name. The default device name is anonymous.

Go to **Settings ---Basic settings---Camera time** panel and adjust the device time.

Go to **Settings ---Video---On Screen Display** panel, you can add or no add OSD.

Section9 Play/Stop/ Talk/Audio/ Snap/ Record/ Full screen button

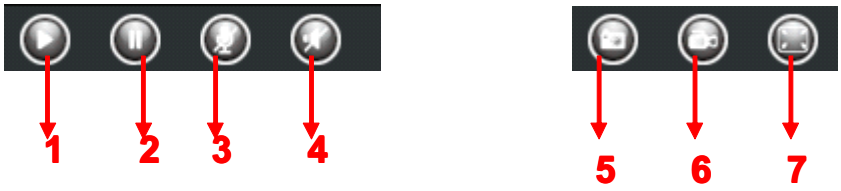

1------Play Click it to play the video of the camera

2------Stop Click it to stop the video of the camera

3------ Talk: Click the button and the icon will become to , then talk to the microphone that connected with PC, people around the camera can here your voice. Click the icon again and stop talking.

4------ Audio Click this icon, the icon will become to you can hear the sound around the camera by the earphone or speakers that connected with PC.

5----- Snap: Click it to make snapshot and it pop-up a window which picture you snapshot, right click in the window and save the picture to anywhere you want.

6----- Record: Click the icon and the camera start recording, you can see a green dot in the live window. Click again and stop recording. The default storage path is **C:\IPcamRecord**. You can change the storage path: Go to **Settings- >Record->Storage Location** panel.

7------Full Screen Click it to make full-screen, or you can double click the surveillance screen to make full-screen. Double click again and exit full-screen.

Onscreen Mouse Control

Right click the mouse and you can adjust the screen ration, full screen and Zoom up.

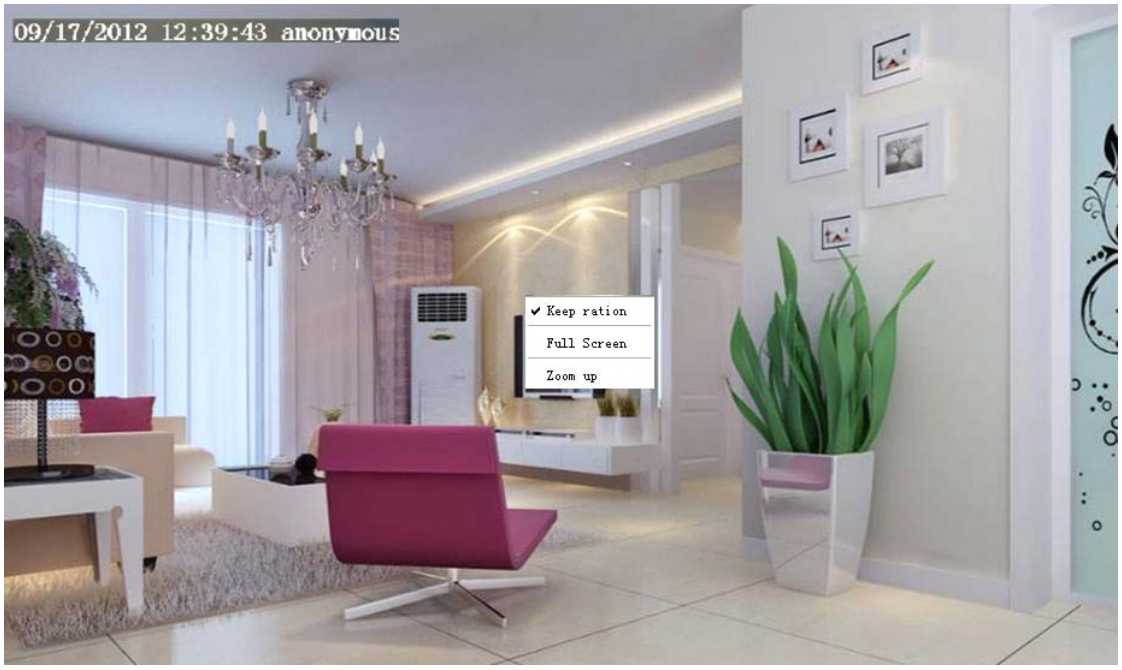

Figure 2.6

Keep ration: Select it and the camera will adjust the size of live window based on the the computer monitor automatically. Sometimes there is a black border around the video, please select **Keep ration** to get a better visual quality .

Full Screen: Select it and Click it to make full-screen, press ESC and exit full-screen.

Zoom up:

First Method: Here is a convenient and fast solution to Zoom up/down screen by Clicking Video Screen and adjusting Mouse pulley, or by press the CTRL key and click the mouse left button.

Second Method: Click it and the live view will be digital zoomed up, then click Zoom Down and the live view back to original size.

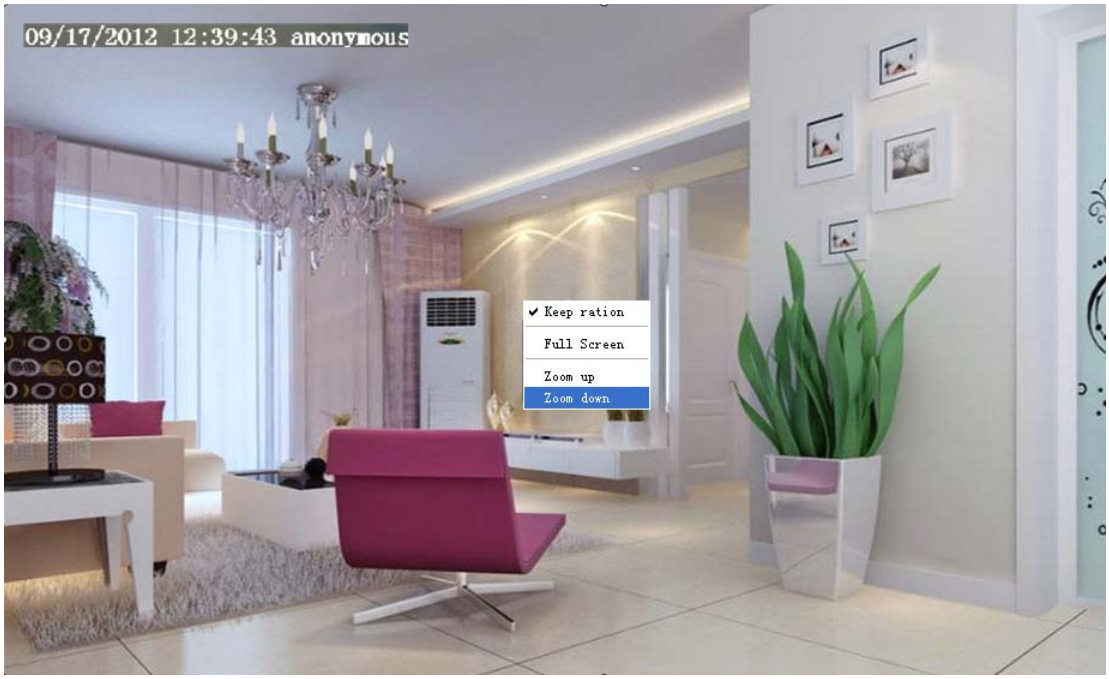

Figure 2.7

When you select the Full Screen, then click right mouse, there is a **Screen PTZ** button.

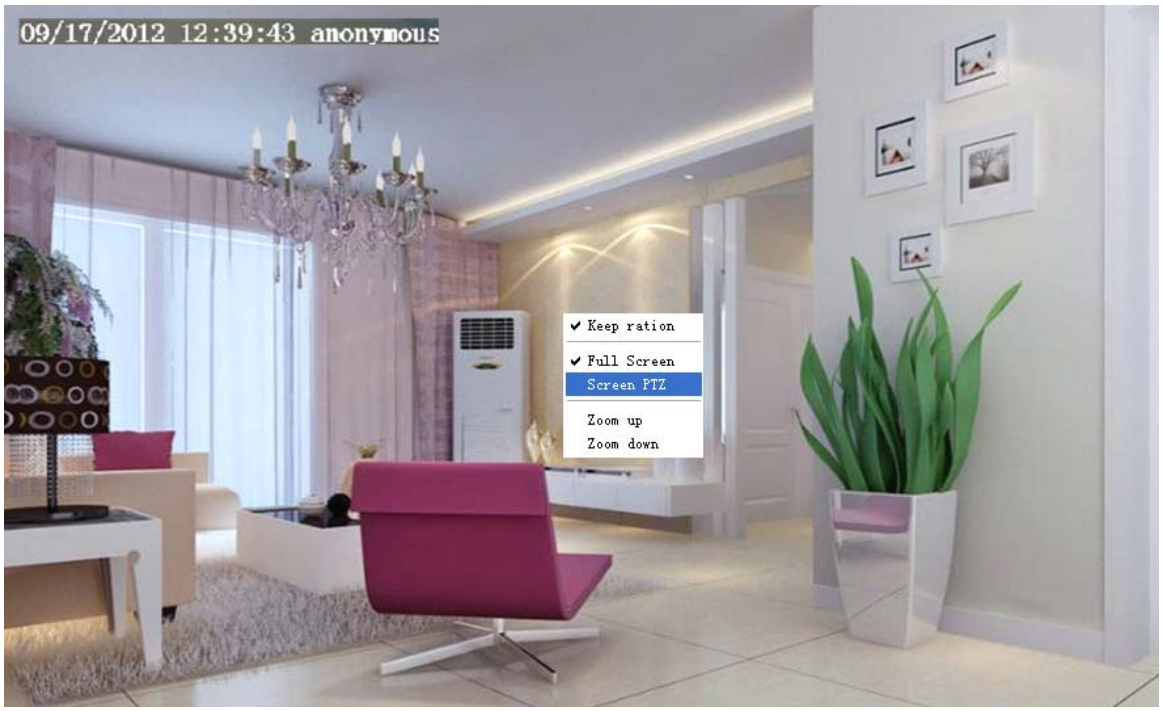

Figure 2.8

Click the **Screen PTZ** button and put the mouse on the screen to indicate the camera move direction you prefer, press the left mouse, the camera will move to the corresponding direction. Loosen the mouse and stop moving. Press Esc button or double click right mouse and cancel the function.

Note: For MAC OS, the plugin cannot support Onscreen Mouse function, so you cannot allow to use it..

3 Advanced Camera Settings

Click the button "**Settings**", goes to Administrator Control Panel to make advanced camera settings.

3.1 Device Status

Device Status contains four columns: Device Information, Device Status, Session Status and Log, it will show you various information about your camera.

3.1.1 Device Information

Figure 3.1

Camera Model: The camera model no.

Camera Name: The Device Name is a unique name that you can give to your device to help you identify it. Click **Basic Settings** and go to **Camera name** panel where you can change your camera name. The default device name is anonymous.

Camera ID: Display the wired MAC address of your camera. For example Device ID is 000C5D00003, the same MAC ID sticker is found at the bottom of the camera.

Camera Time: The system time of the device. Click **Basic Settings** and go to **Camera time** panel and adjust the time.

System Firmware version: Display the System Firmware version of your camera.
App Firmware version: Display the application firmware version of your camera.
Web version: Display the web UI version of your camera

Plug-in version: Display the plug-in version of your camera

3.1.2 Device Status

On this page you can see device status such as Alarm status/ Record Status ,DDNS status ,WIFI status and so on.

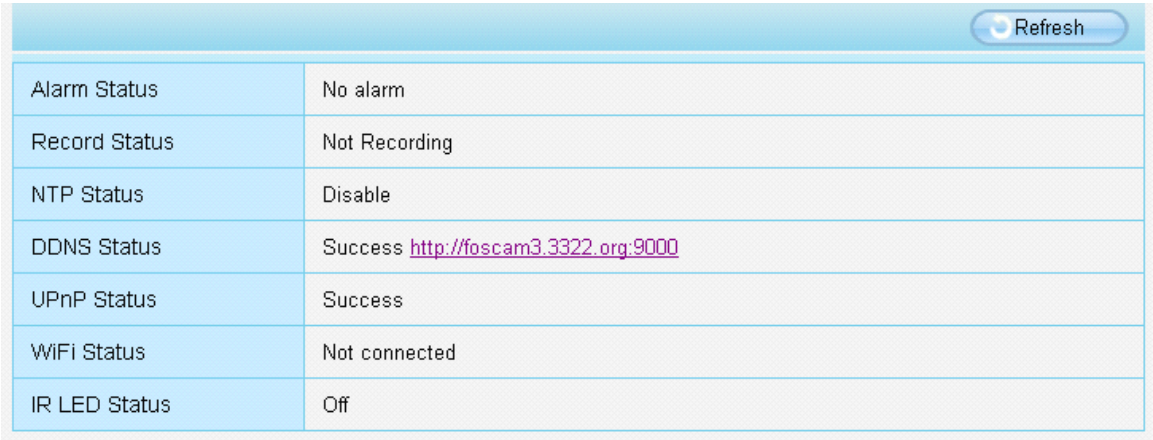

Figure 3.2

3.1.3 Session status

Session status will display who and which IP is visiting the camera now.

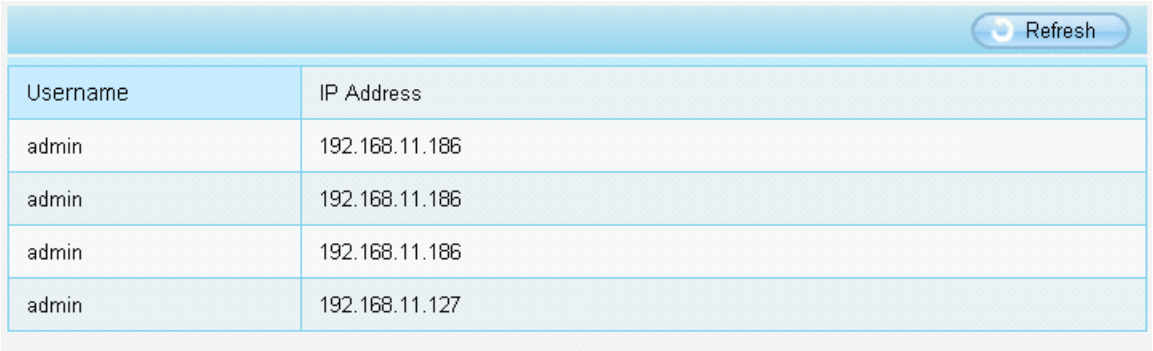

Figure 3.3

3.1.4 Log

The log record shows who and which IP address accessed or logout the camera and when.

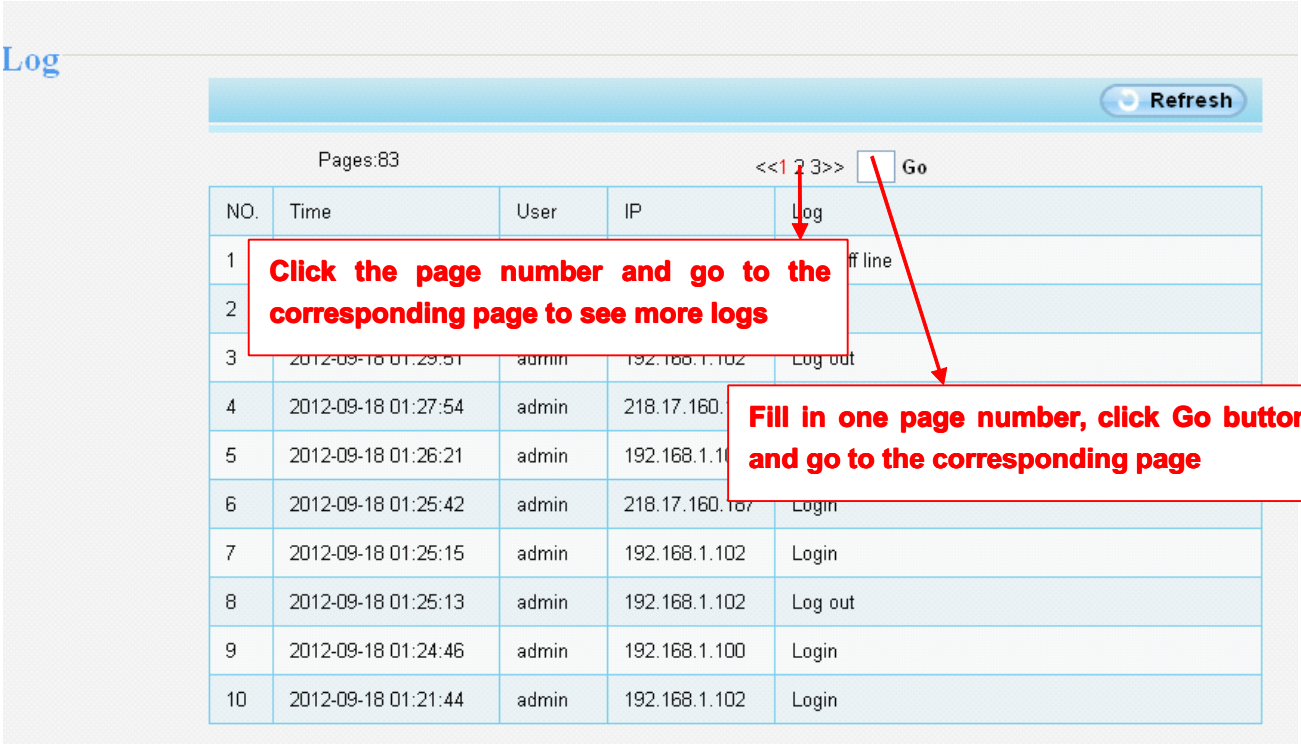
Log
Refresh
Pages:83
<<1 2 3>>
Go
NO.
Time
User
IP
Log
Click the page number and go to the corresponding page to see more logs
Fill in one page number, click Go button and go to the corresponding page
1 2012-09-18 01:29:51 admin 192.168.1.102 Log out
2 2012-09-18 01:27:54 admin 218.17.160. Login
3 2012-09-18 01:26:21 admin 192.168.1.1 Login
4 2012-09-18 01:25:42 admin 218.17.160.187 Login
5 2012-09-18 01:25:15 admin 192.168.1.102 Login
6 2012-09-18 01:25:13 admin 192.168.1.102 Log out
7 2012-09-18 01:24:46 admin 192.168.1.100 Login
8 2012-09-18 01:21:44 admin 192.168.1.102 Login
9
10

Figure 3.4

3.2 Basic Settings

This section allows you to configure your camera's Name, Time, Mail, User account and Multi-Device.

3.2.1 Camera Name

Default alias is anonymous. You can define a name for your camera here such as apple. Click **Save** to save your changes. The alias name cannot contain special characters.

Figure 3.5

3.2.2 Camera Time

This section allows you to configure the settings of the internal system clocks for your camera.

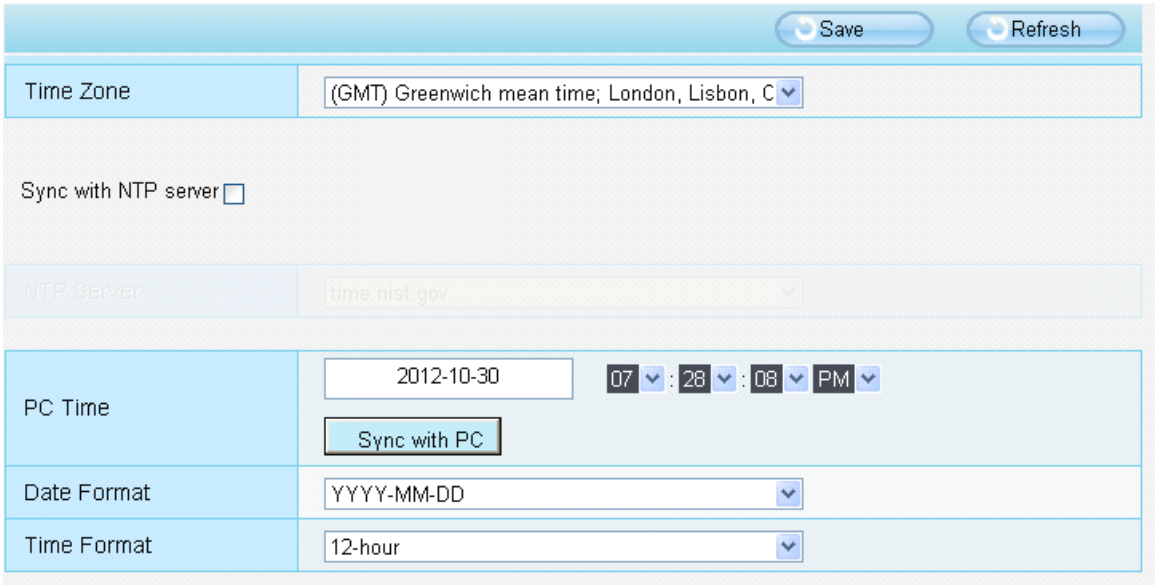

Figure 3.6

Time Zone: Select the time zone for your region from the dropdown menu.

Sync with NTP server: Network Time Protocol will synchronize your camera with an Internet time server. Choose the one that is closest to your camera.

Sync with PC: Select this option to synchronize the date and time of the Network Camera with your computer.

Manually: The administrator can enter the date and time manually. Note select the date and time format.

Click **Save** button to submit your settings.

3.2.3 Mail Settings

If you want the camera to send emails when motion has been detected, here **Mail** will need to be configured.

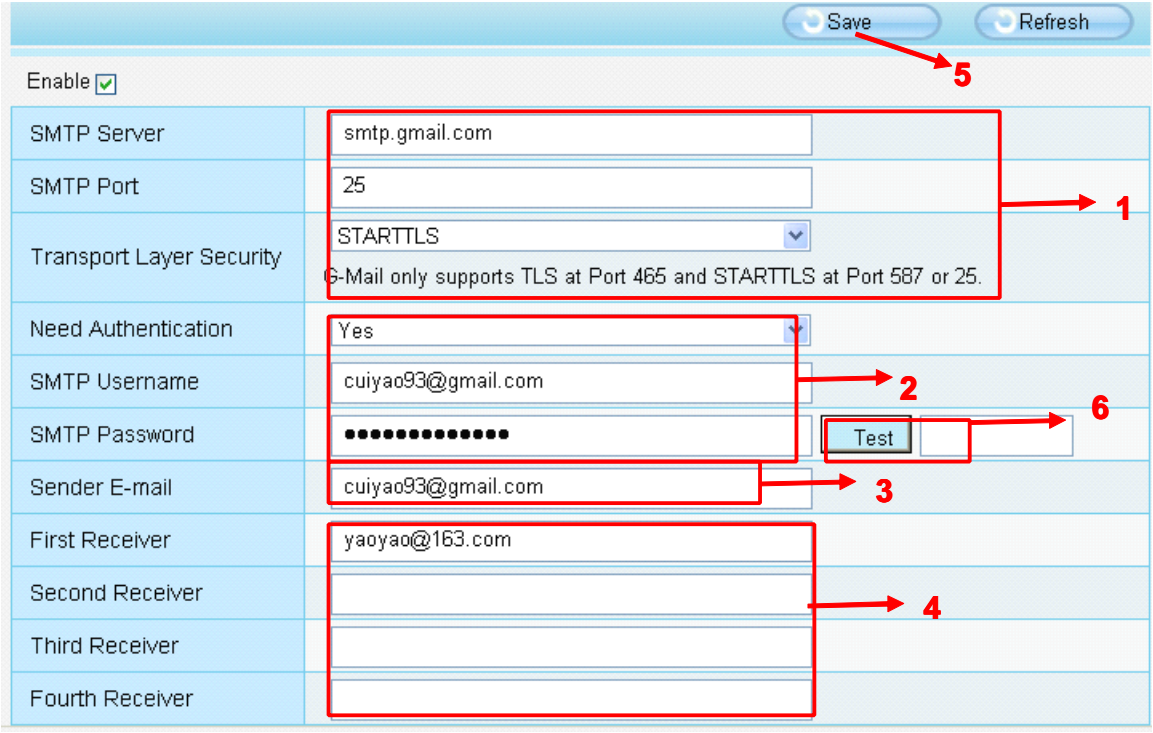

Figure 3.7

1----- SMTP Server/ Port /Transport Layer Security Enter SMTP server for sender. **SMTP port** is usually set as 25. Some SMTP servers have their own port, such as 587 or 465, and Transport Layer Security usually is None. If you use Gmail, Transport Layer Security must be set to TLS or STARTTLS and SMTP Port must be set to 465 or 25 or 587, which port you choose should be decided by which Transport Layer Security you select.

2-----SMTP Username/ password: ID account and password of the sender email address

3----- Sender E-mail Mailbox for sender must support SMTP

4----- Receiver Mailbox for receiver need not support SMTP,you can set 4 receivers

5----Save Click Save to take effect

6----Test Click **Test** to see if Mail has been successfully configured.

Click **Test** to see if Mail has been successfully configured.

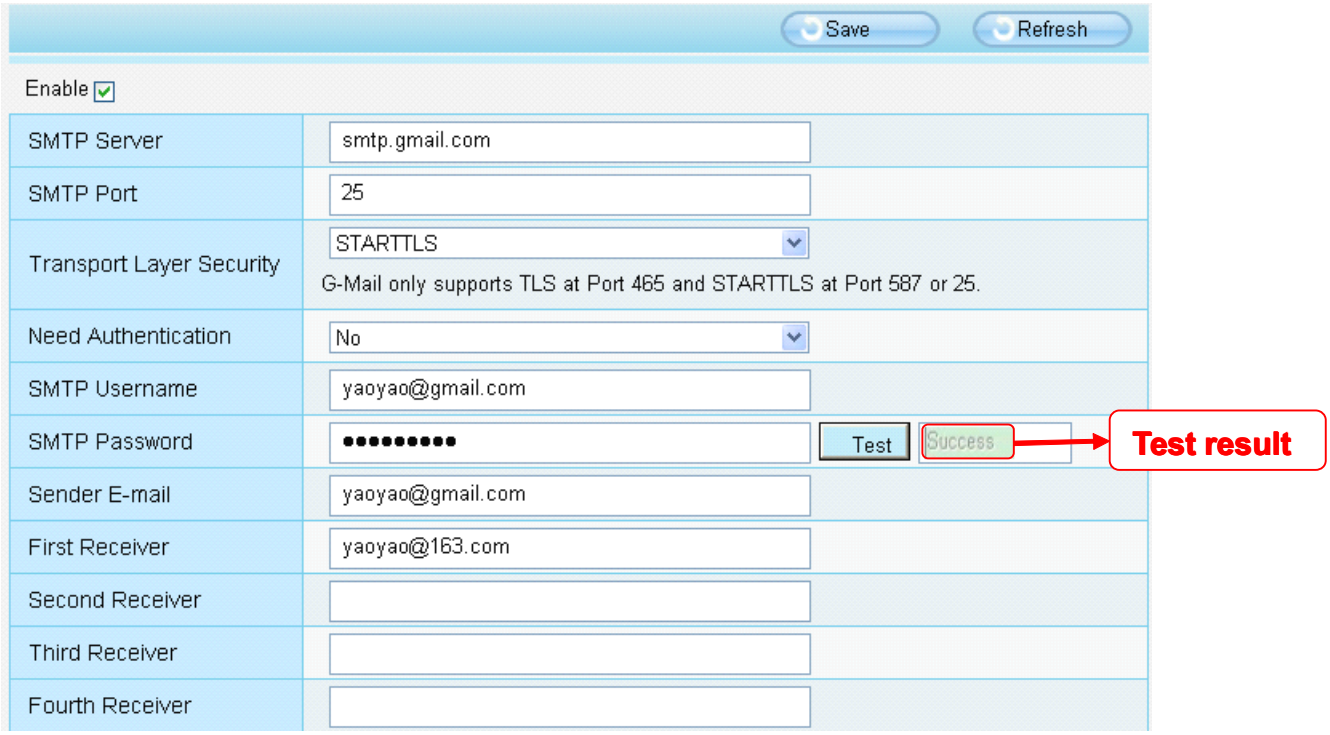

Figure 3.8

If the test success, you can see the **Success** behind the Test, at the same time the receivers will receive a test mail.

Figure 3.9

If the test fails with one of the following errors after clicking **Test, verify** that the information you entered is correct and again select **Test** .

1) Cannot connect to the server
2) Network Error. Please try later
3) Server Error

4) Incorrect user or password

5) The sender is denied by the server. Maybe the server need to authenticate the user, please check it and try again

6) The receiver is denied by the server. Maybe because of the anti-spam privacy of the server

7) The message is denied by the server. Maybe because of the anti-spam privacy of the server

8) The server does not support the authentication mode used by the device

3.2.4 User Accounts

Here you can create users and set privilege, **visitor**, **operator** or **administrator**. The default user accounts are admin, operator and visitor, with a blank password.

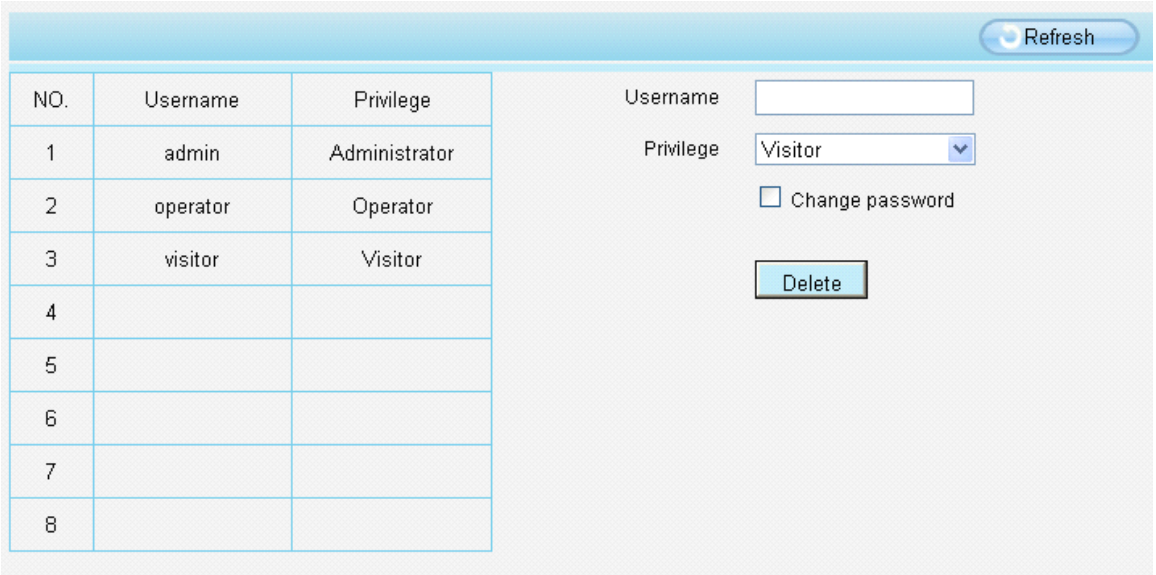

Figure 3.10

How to change the password?

Firstly, select the account which you want to change the password, then select “Change password”, enter the old password and the new password, lastly click modify to take effect.

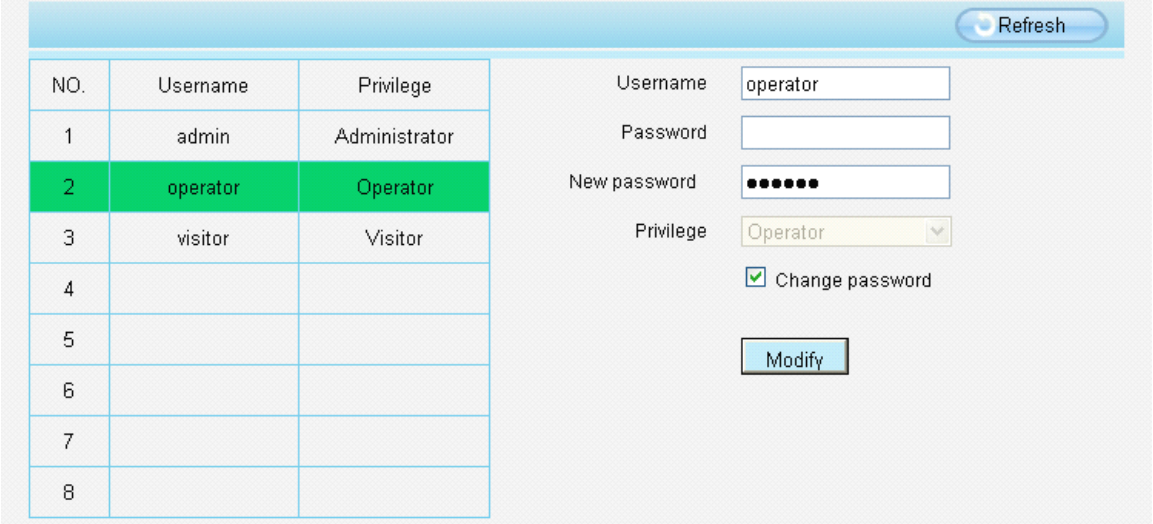

Figure 3.11

How to add account ?

Select one blank column, then enter the new user name, password and privilege, last click Add to take effect. You can see the new added account on the Account list.

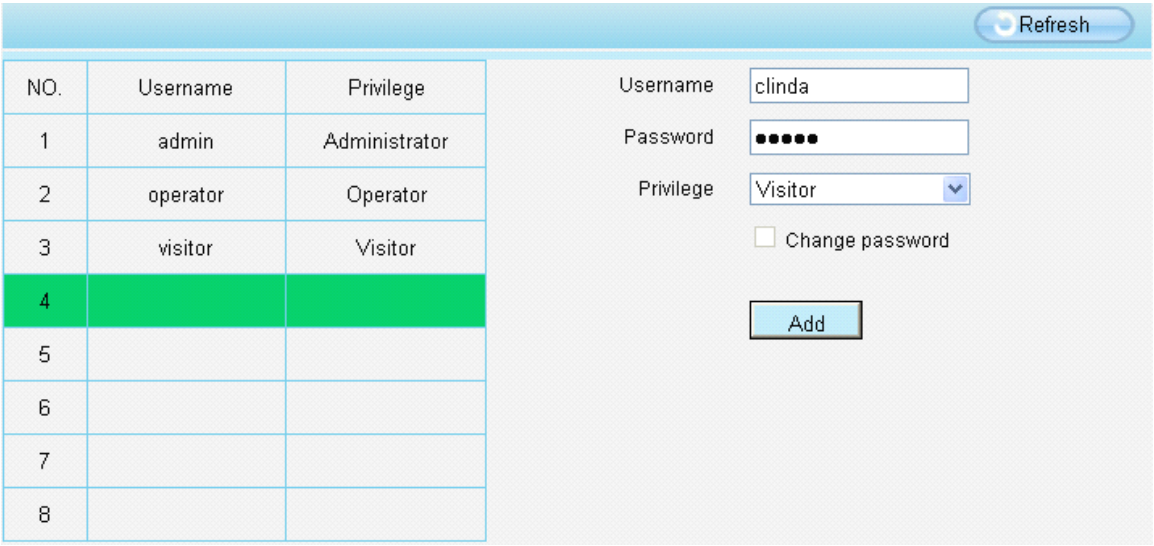

Figure 3.12

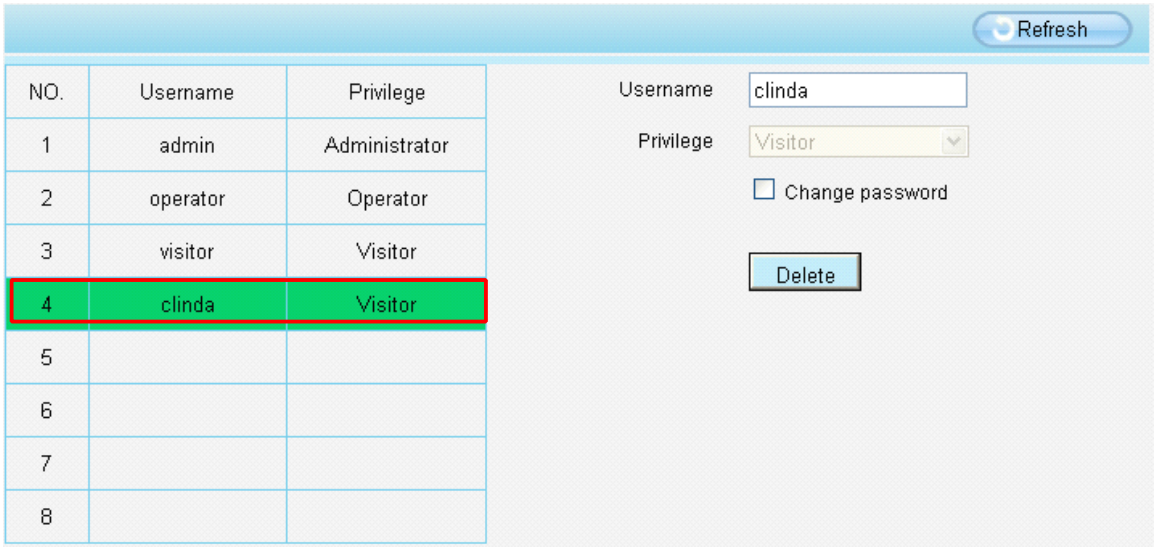

Figure 3.13

Delete: Select the account which you want to delete, then click Delete button to take effect.

Note: The default admin account cannot be deleted, but you can add other administrator users.

3.2.5 Multi-Camera

If you want to view multi-surveillance screens on one window, you need to login one camera, and set it as the main device, and do Multi-Device Settings, add other cameras to the first one camera. Before you do multi-cams settings, you need to assign different port such as 81, 82, 83, 84, 85, 86, 87, 88 to the cameras if there is 8 cams installed.

The firmware within the camera can support a maximum of 9 devices monitoring all at the same time. This page you can both add FOSCAM MJPEG and H.264 series cameras to the first camera and view multi-surveillance screen on one window.

Add cameras in LAN

In Multi-Device Settings page, you can see all devices searched in LAN. The 1st Device is the default one. You can add more cameras in the list in LAN for monitoring. The camera's software supports up to 9 IP Cameras online simultaneously. Click **The 2nd Device** and click the item in the **Device List in LAN**, the Alias, Host and Http Port will be filled in the boxes below automatically. Enter the correct username and password then click **Add**. Add more cameras in the same way.

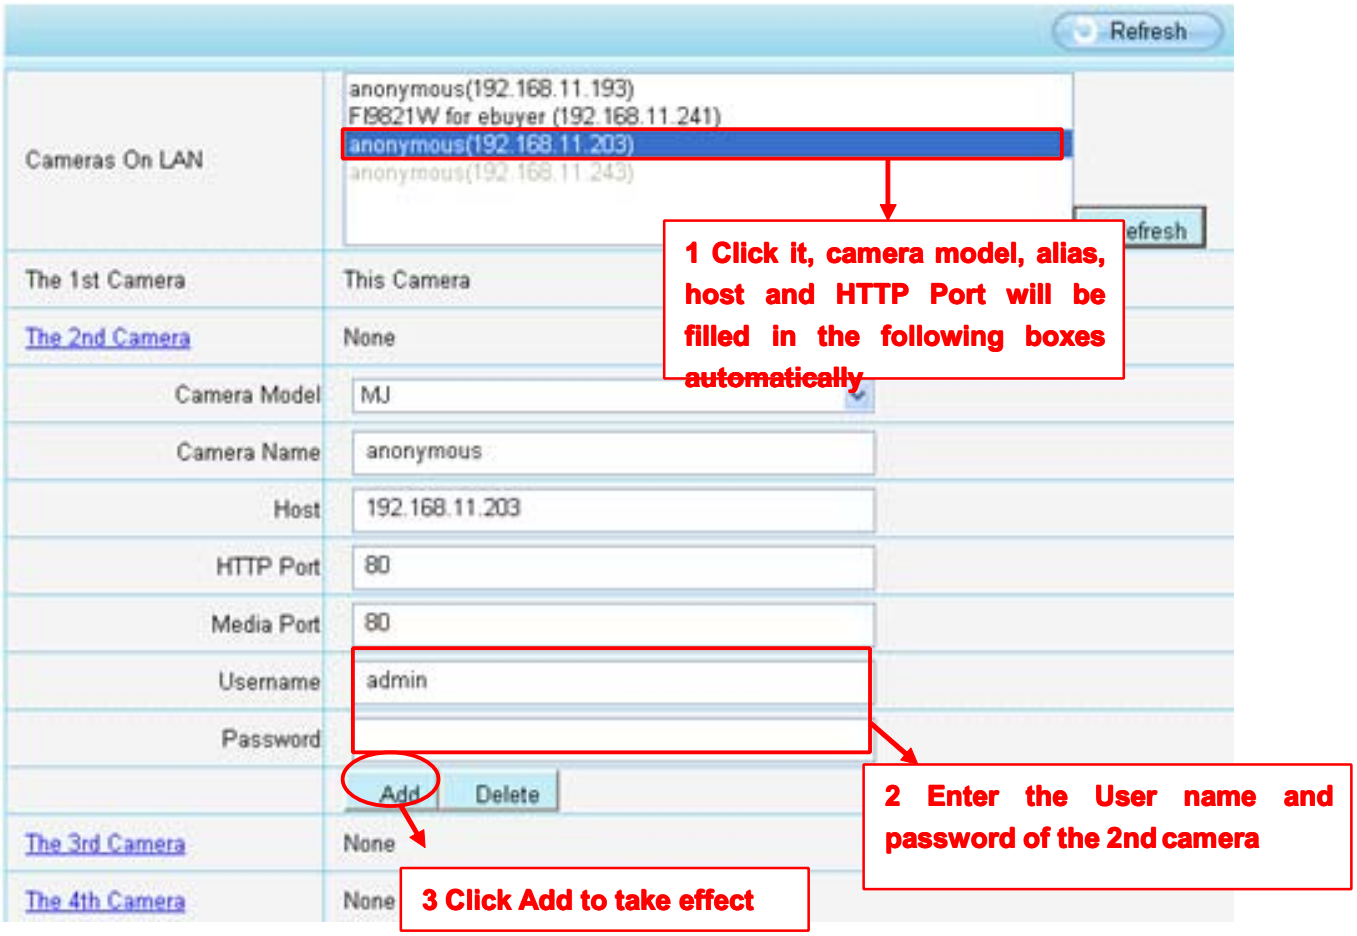

Figure 3.14

Camera Model: Our Company produces two series cameras: MJPEG and H.264. Here will show you which series the camera belongs to.

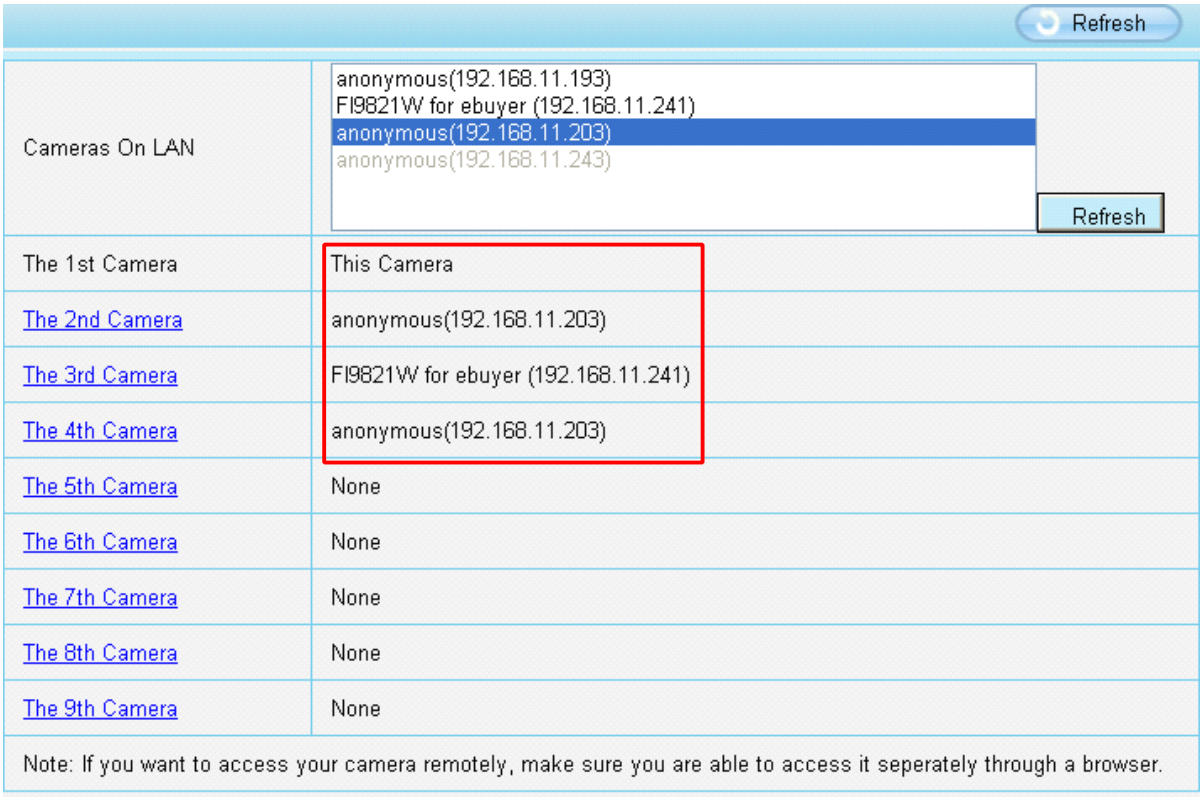

Figure 3.15

Back to **Surveillance Windows**, and click Four Windows option, you will see four cameras you added.

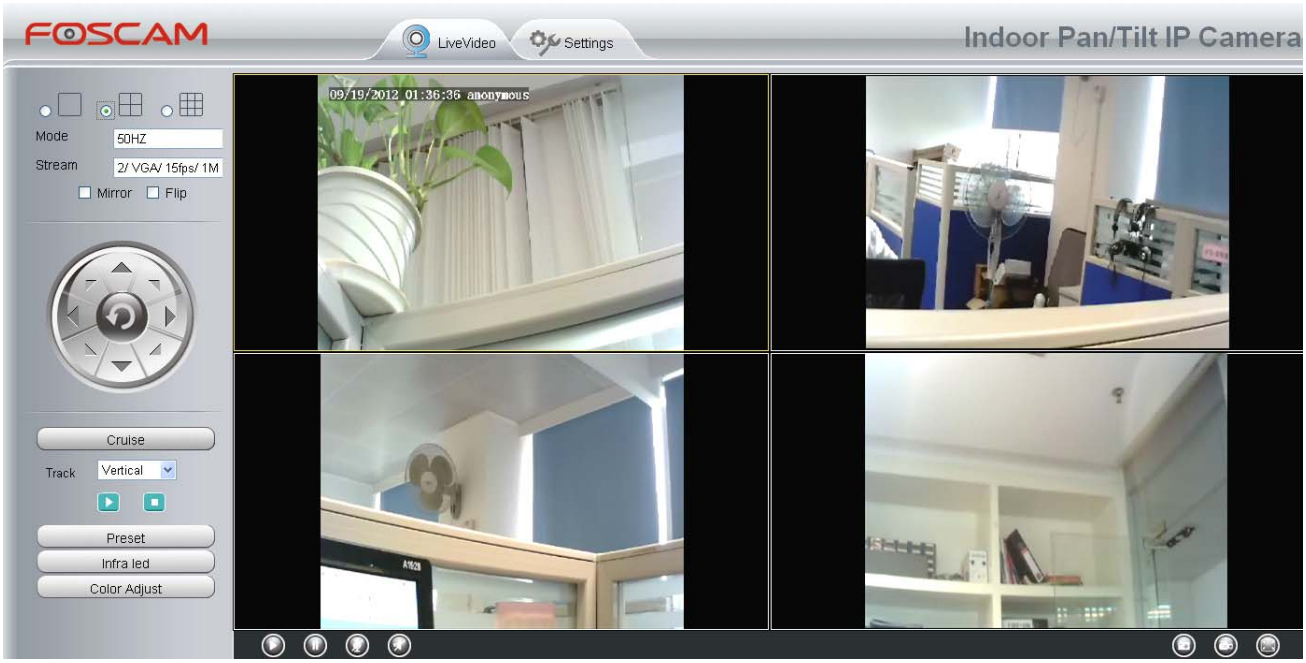

Figure 3.16

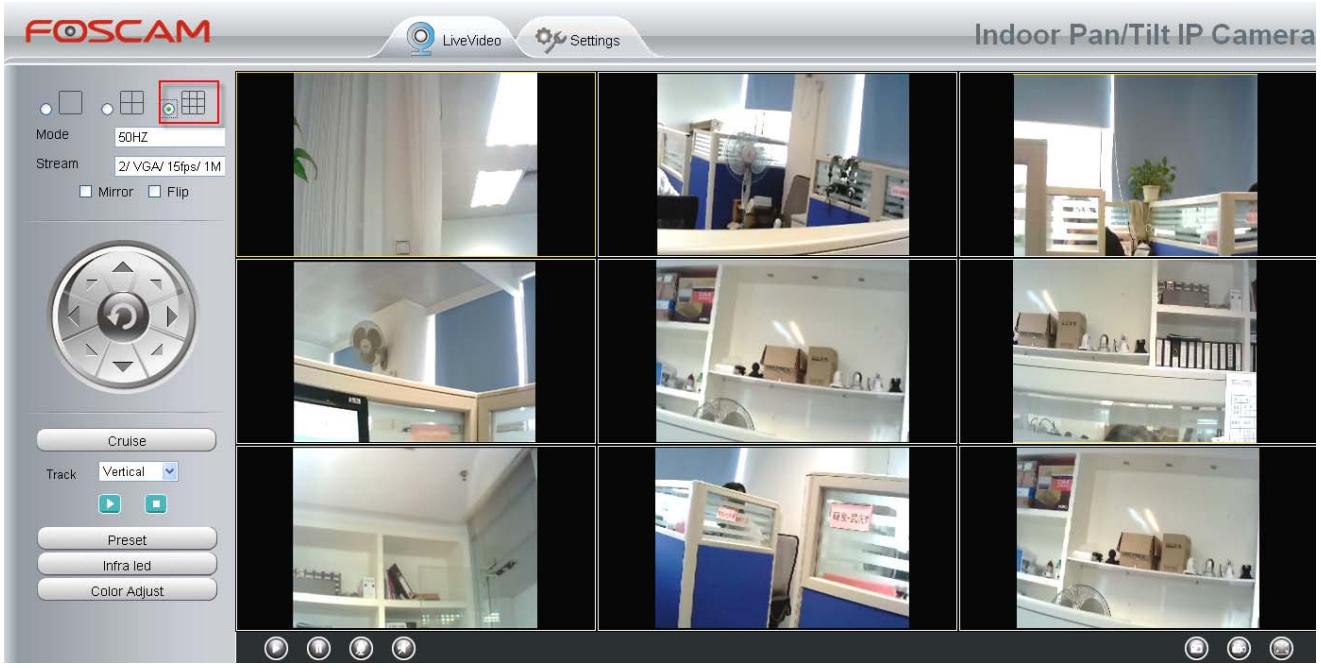

Figure 3.17

Add cameras in WAN

If you want to view all cameras via the internet(remote computer), you will need to add them using DDNS domain name. Firstly, make sure all of the cameras you added can be accessed through the internet. (Read **How to configure DDNS settings** in **chapter 3.3.3**)
Login to the first camera using a DDNS domain name and port.

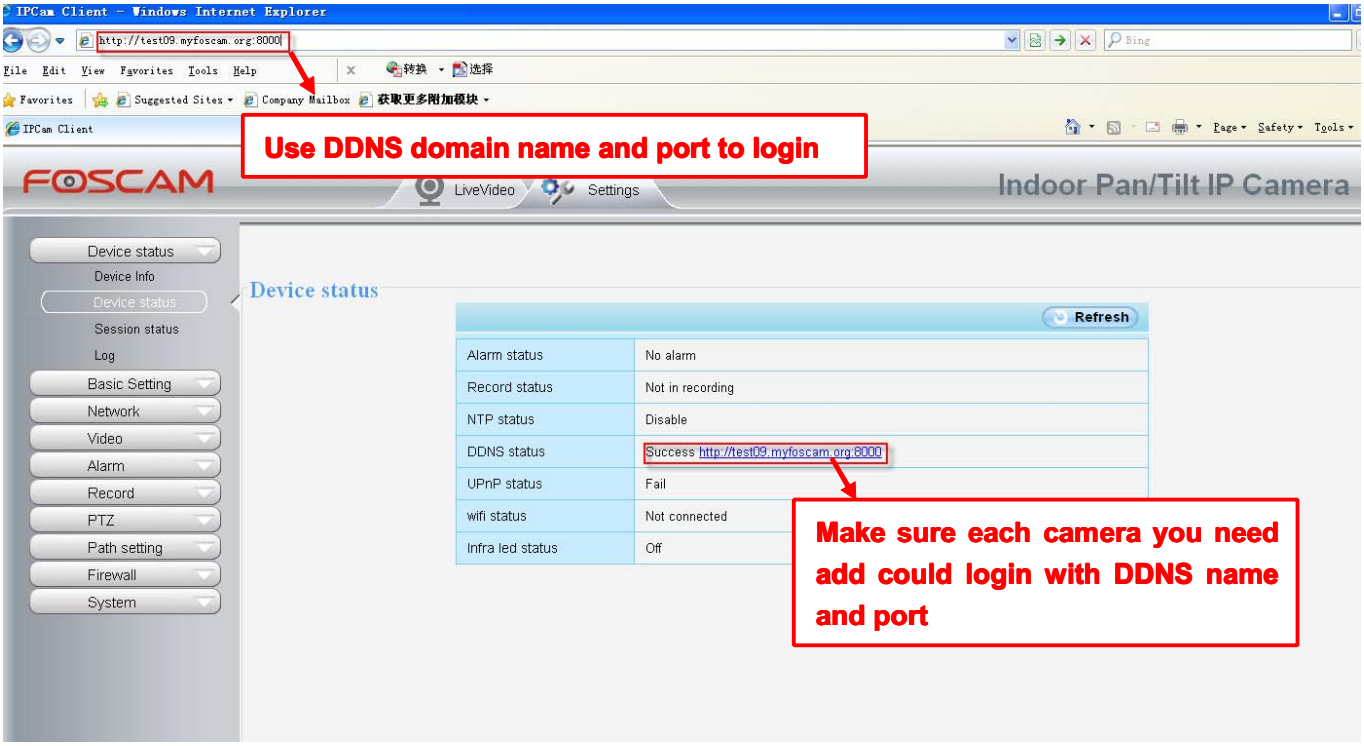

Figure 3.18

Click **Multi-Device Settings**. Choose **The 2nd Device**. Fill in the 2nd camera's name, DDNS domain name, port number. Enter user name and password and then choose Add. (Figure 3.19)

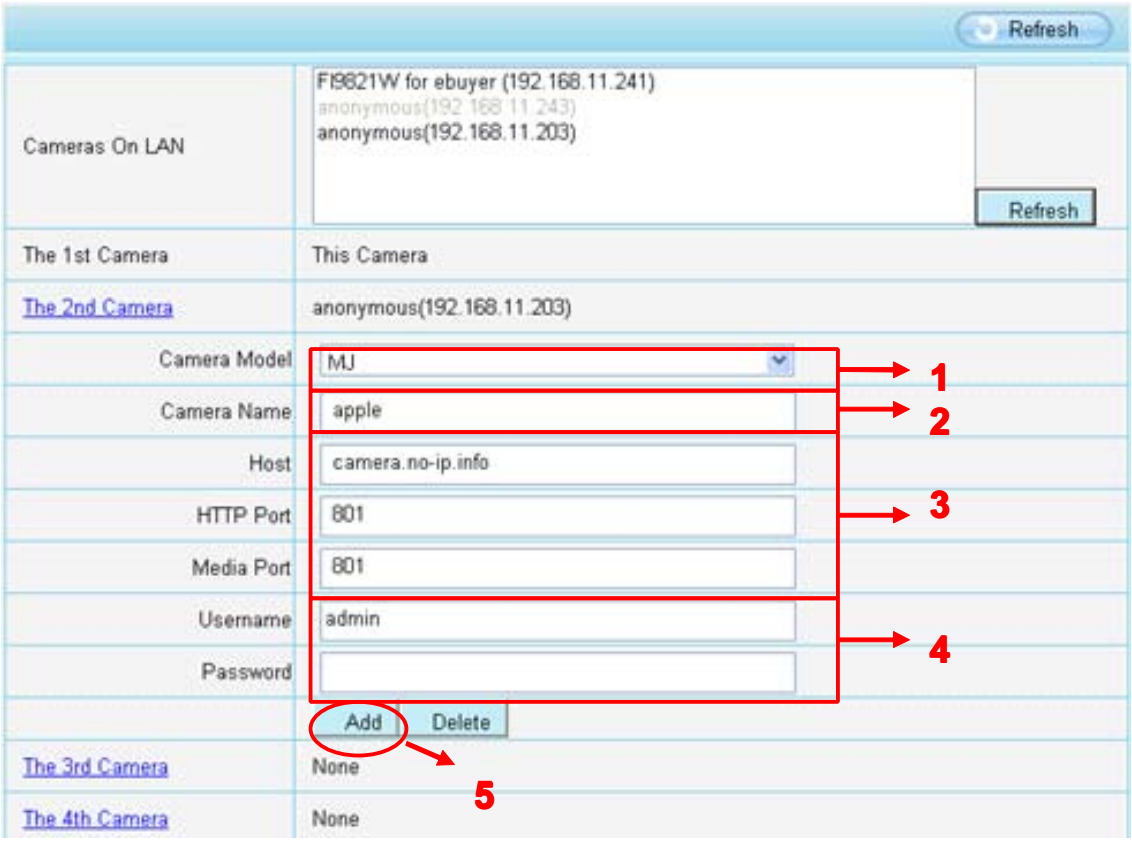

Figure 3.19

1----- The camera model: MJ or H264.
2----- The 2nd camera's name
3----- Fill in the 2nd camera's DDNS host not LAN IP

NOTE: The MJ series have the same HTTP Port no. and Media Port no.

4 ---- Enter the 2nd camera's user name and password
5---- Click Add button and to take effect

NOTE: Here the Host must be entered as the second camera's DDNS domain name, not its LAN IP.

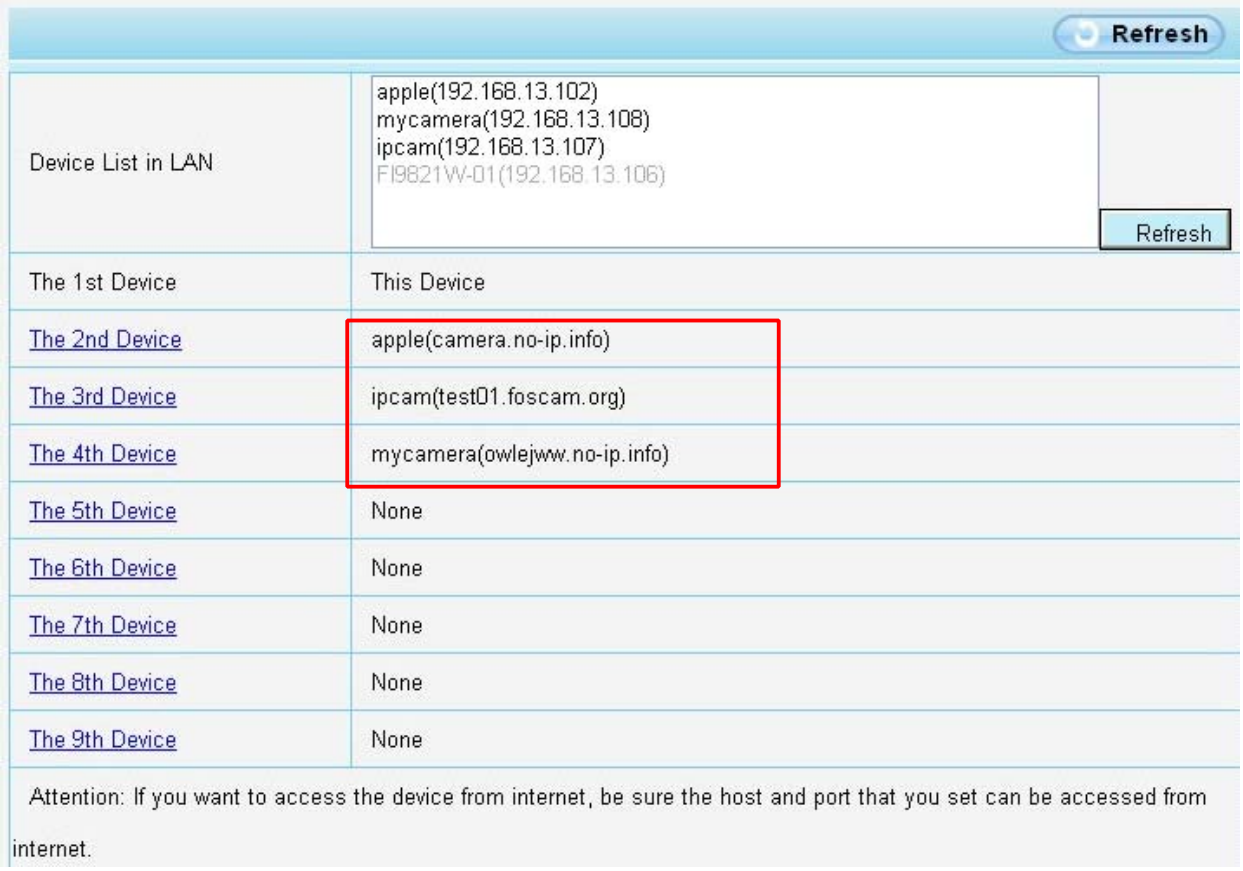

Figure 3.20

Return to video window. You will see all of the cameras accessible through the internet. When you are away from home, you can use the first camera's DDNS domain name and port to view all the cameras via internet.

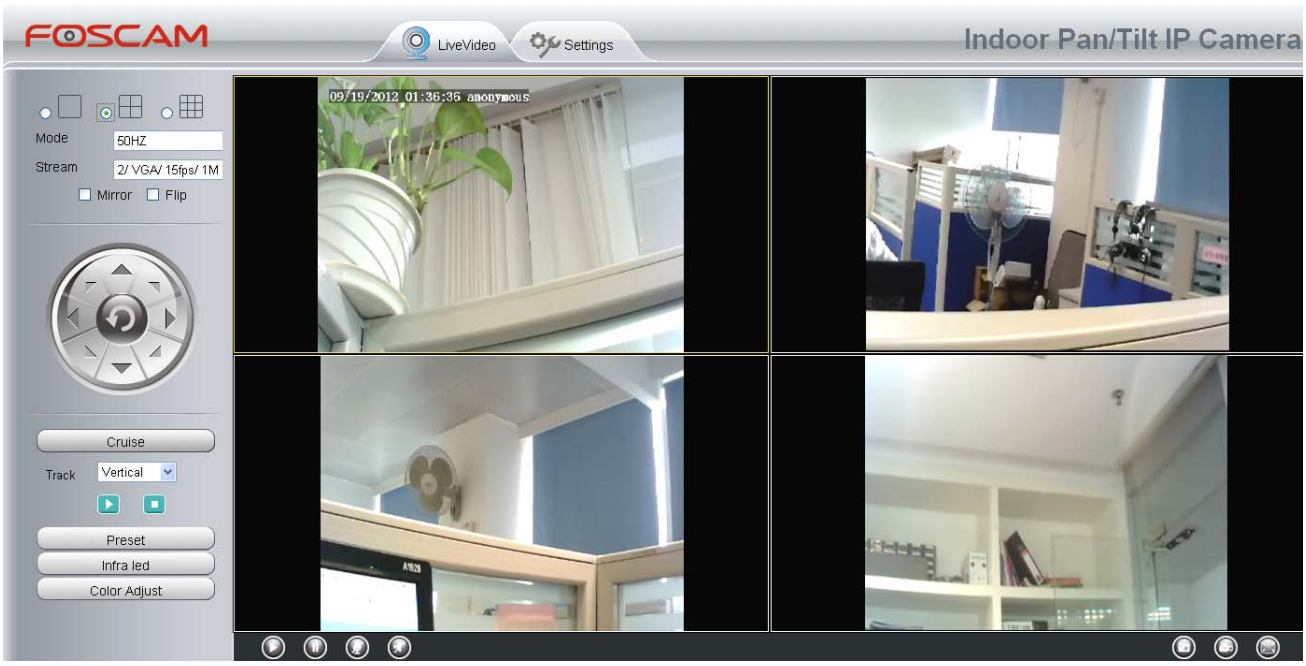

Figure 3.21

3.3 Network

This section will allow you to configure your camera's IP, PPOE, DDNS, Wireless Settings, UPnP and Port.

3.3.1 IP Configuration

If you want to set a static IP for the camera, please go to **IP Configuration** page. Keep the camera in the same subnet of your router or computer.

Figure 3.22

Changing settings here is the same as using the IP Camera Tool. (Figure 3.23/3.24)
It is recommended that you use the subnet mask, gateway and DNS server from your locally attached PC. If you don't know the subnet mask, gateway and DNS server, you can check your computer's local area connection as follows:
Control Panel → **Network Connections** → **Local Area Connections** → Choose **Support**→**Details**.

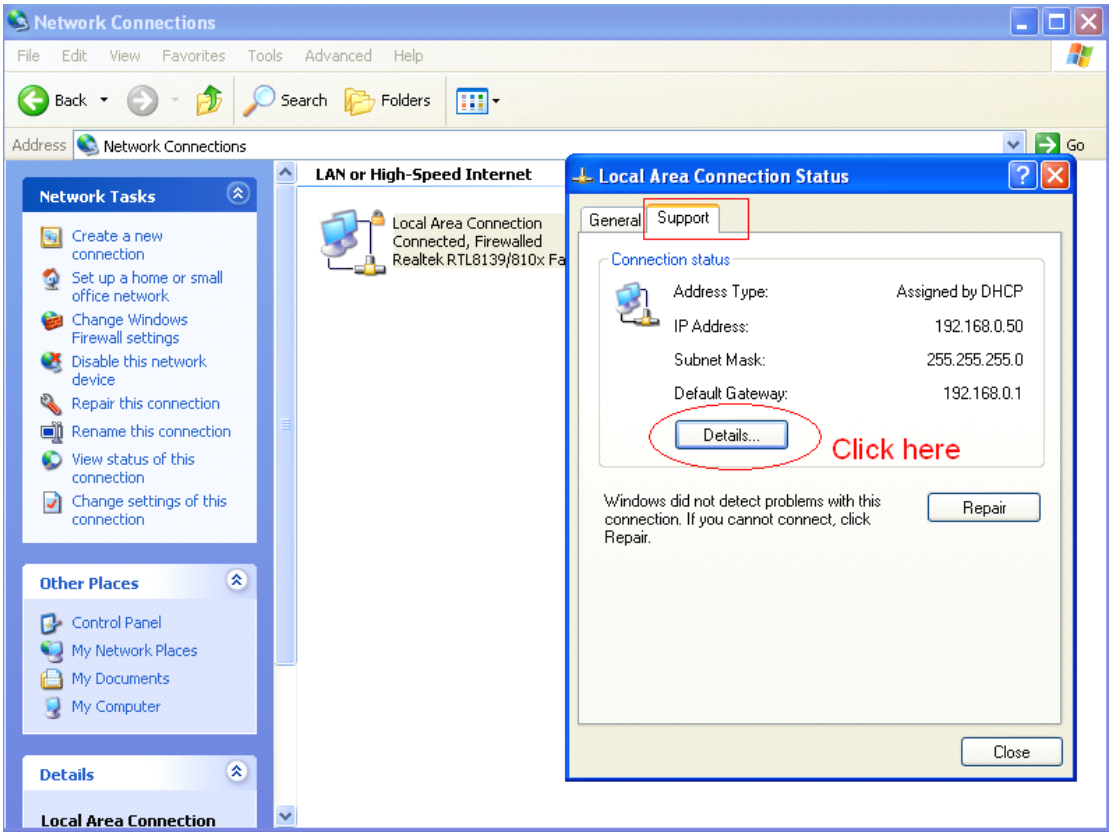

Figure 3.23

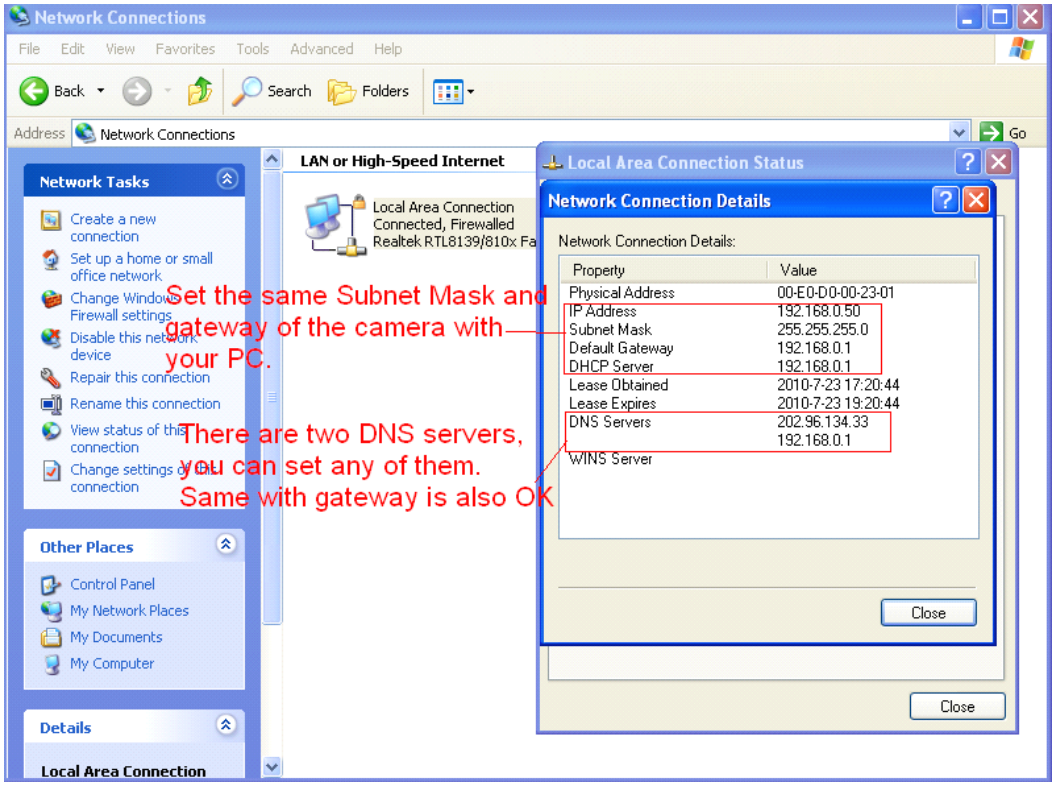

Figure 3.24

If you don't know the DNS server, you can use the same settings as the Default Gateway.

3.3.2 PPPoE

If you are using a PPPoE connection, enable it and enter the User Name and Password for your PPPoE account.

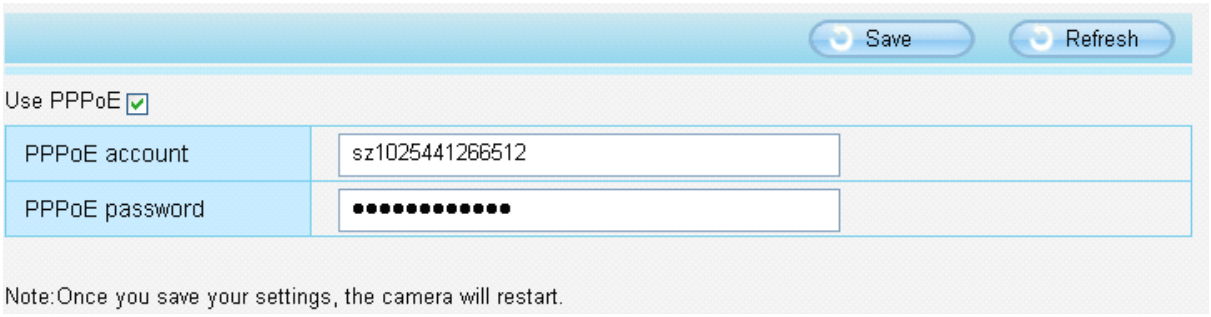

Figure 3.25

3.3.3 DDNS

FOSCAM camera has embedded a unique DDNS domain name when producing, and you can directly use the domain name, you can also use the third party domain name.

FOSCAM domain name

Here take **test09.myfoscam.org** for example. Go to option of **DDNS** on the **Settings->Network** panel, you can see the domain name.

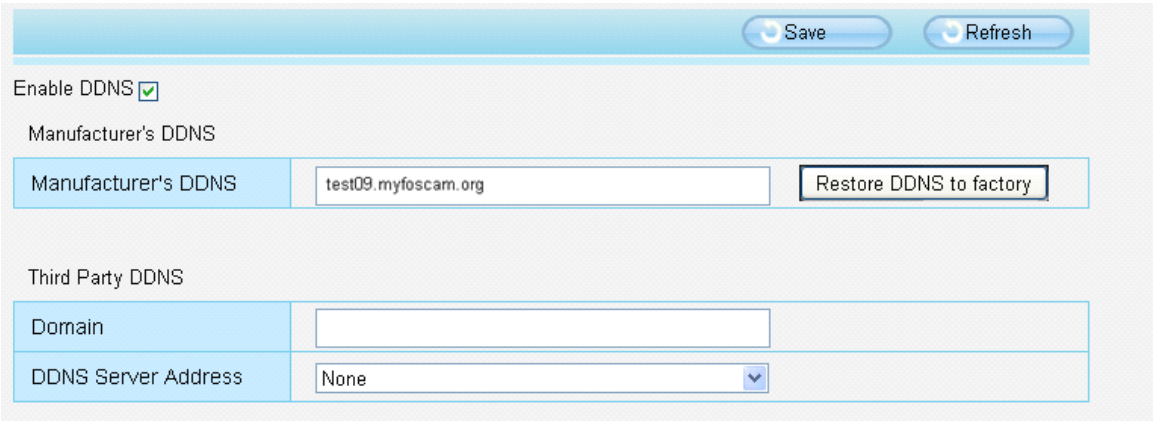

Figure 3.26

Now you can use http:// **Domain name + HTTP Port** to access the camera via internet.
Take hostname **test09.myfoscam.org and HTTP Port no. 8000** for example, the accessing link of the camera via internet would be http:// test09.myfoscam.org:8000

Restore DDNS to factory: If you have configured Third Party DDNS successfully, but you want

to use Manufacturer's DDNS again , here click this button and start Manufacturer's DDNS Service.

Third Party Domain Name Settings

User can also use third part DDNS, such as www.no-ip.com. ,www. 3322.com

Here take www.no-ip.com for example:

① **Step 1, Go to the website www.no-ip.com to create a free hostname**

Firstly: Login on www.no-ip.com and click No-IP Free to register.

Home
Contact Us
Login
no-ip
The DNS Service Provider
Home
Download
Services
Support
Company
Managed DNS
No-IP Plus, The complete managed DNS Solution
Easy to use interface.
Complete control over your domain.
FREE dynamic DNS update client.
Includes 50 hosts/sub domains.
Sign Up!
More Info
User Login
Username
Password
Create Account
Forgot password?
Login
Additional Services
No-IP Enhanced
Upgrade your No-IP account to unlock many exciting features.
No-IP Backup DNS
Maximize uptime and add Anycast to your existing DNS infrastructure.
No-IP Monitoring
24/7 server monitoring including automatic failover.
Mail Reflector
Run a mail server even if your ISP blocks port 25.
FROM $15
Register Your Domain
com
Search
Click here to register
No-IP Free
Create a FREE hostname to point to your dynamic IP
See what over 12+ million users are talking about. Try us for FREE!
Learn More >
POP3 / IMAP Mail
Outsource your mail service administration
Packages including 100MB to 2GB of storage, webmail access, advanced spam and virus filtering! As low as $19.95 per year.
Learn More >
Feature Highlight
Configure your router to work with No-IP.com
Our DDNS is included in many hardware routers. We'll help you get started.
Learn More >
Stay Connected
Home | API | Whois | Contact Us | Sitemap | Terms of Service | Privacy Policy | Blog

Figure 3.27

Please register an account step by step according to instructions on www.no-ip.com

After registration, please login your email which used to register. You will receive an email from website, please click the link to activate your ACCOUNT as indicated in email.

Secondly: Login the link with the registered username and password to create your domain name.

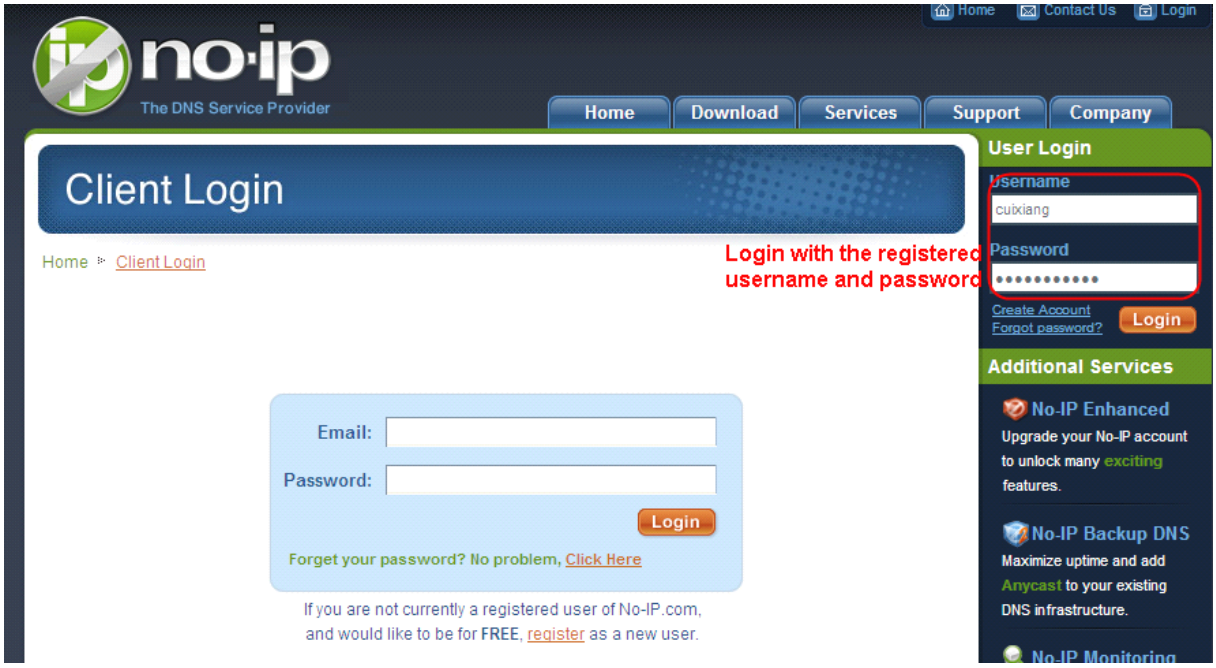

Figure 3.28

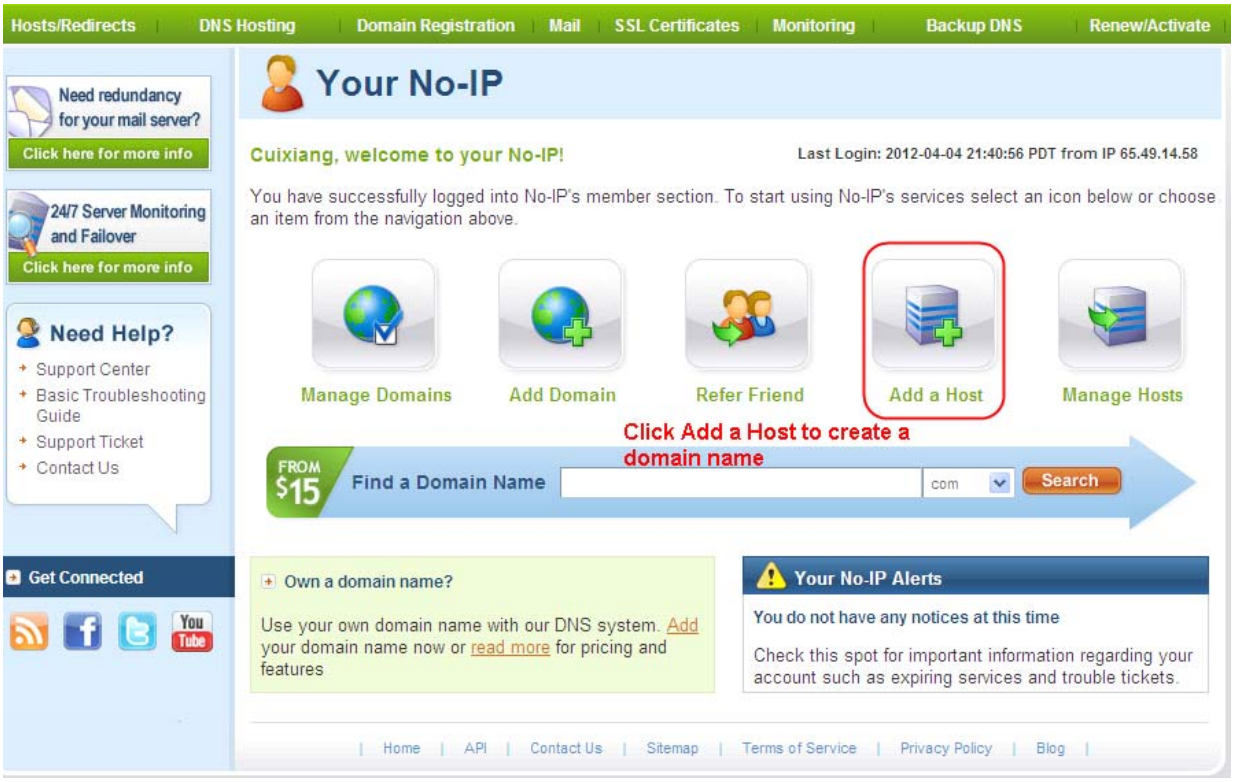
Hosts/Redirects
DNS Hosting
Domain Registration
Mail
SSL Certificates
Monitoring
Backup DNS
Renew/Activate
Need redundancy for your mail server?
Click here for more info
24/7 Server Monitoring and Failover
Click here for more info
Need Help?
Support Center
Basic Troubleshooting Guide
Support Ticket
Contact Us
Get Connected
Your No-IP
Cuixiang, welcome to your No-IP!
Last Login: 2012-04-04 21:40:56 PDT from IP 65.49.14.58
You have successfully logged into No-IP's member section. To start using No-IP's services select an icon below or choose an item from the navigation above.
Manage Domains
Add Domain
Refer Friend
Add a Host
Manage Hosts
Click Add a Host to create a domain name
FROM $15
Find a Domain Name
com
Search
Own a domain name?
Use your own domain name with our DNS system. Add your domain name now or read more for pricing and features
Your No-IP Alerts
You do not have any notices at this time
Check this spot for important information regarding your account such as expiring services and trouble tickets.
Home | API | Contact Us | Sitemap | Terms of Service | Privacy Policy | Blog

Figure 3.29

Please create the domain name step by step according to instructions on www.no-ip.com

Step 2, DO DDNS Service Settings within the Camera

Please set **DDNS Settings** within the camera by **hostname**, a **user name** and **password** you've got from **www.no-ip.com**

Take **hostname ycxgwp.no-ip.info**, **user name foscam**, **password foscam2012** for example.

Firstly, goes to option of **DDNS Settings** on the administrator panel.

Secondly, select No-Ip as a server..

Thirdly, fill **foscam** as DDNS user, fill password **foscam2012** as DDNS password, fill **ycxgwp.no-ip.info** as DDNS domain and server URL, Then click save to make effect. The camera will restart and to take the DDNS settings effective.

Fourthly, after the restart, login the camera, and go to option of **Device Status** on the administrator panel, and check if the DDNS status is successful.

If failed, please double check if you have input the correct hostname, user name, and password, and try to redo the settings.

Note

If you have set Third Party DDNS successfully ,the Foscam Domain Name will be invalid. The Third Party DDNS and the Foscam Domain Name cannot work at the same time, the last time you configured will take effect.

② Do port forwarding within the router

Example: The camera's LAN IP address is http://192.168.8.102:2000 , Media port no. is 9200.

Firstly, login the router, goes to the menu of **Port Forwarding or Port Trigger** (or named **Virtue Server** on some brands of router). **Take Linksys brand router as an example, Login the router, and goes to Applications & Gaming->Single Port Forwarding.**

Secondly, Create a new column by LAN IP address & HTTP Port No. of the camera within the router showed as below.

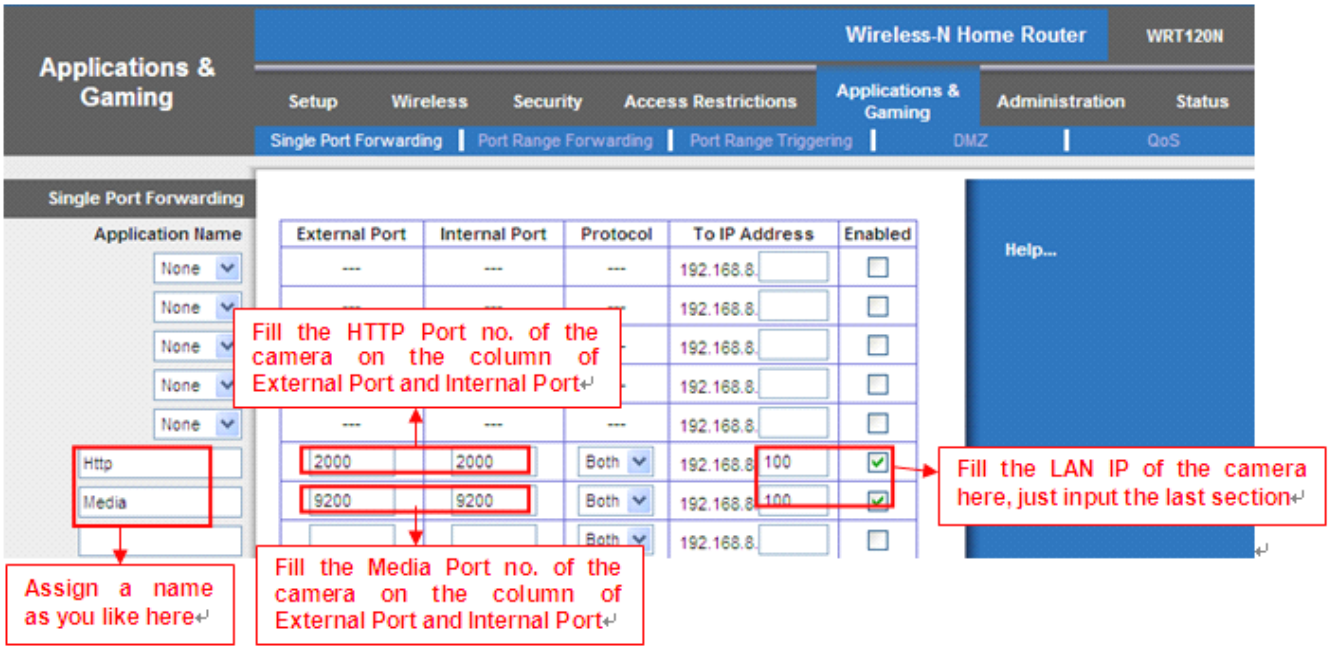

Figure 3.30

③ Use domain name to access the camera via internet

After the port forwarding is finished, you can use **the domain name+ http no.** to access the camera via internet. Take hostname **ycxgwp.no-ip.info** and **http no. 2000**for example, the accessing link of the camera via internet would be http:// ycxgwp.no-ip.info:2000

3.3.4 WiFi

Step 1: Choose "**Settings"** on the top of the camera interface, and go to the "**Network"** panel on the left side of the screen**,** then **click "Wireless Settings."**

Click the **Scan** button and the camera will detect all wireless networks around the area. It should also display your router in the list **(Figure 3.31).**

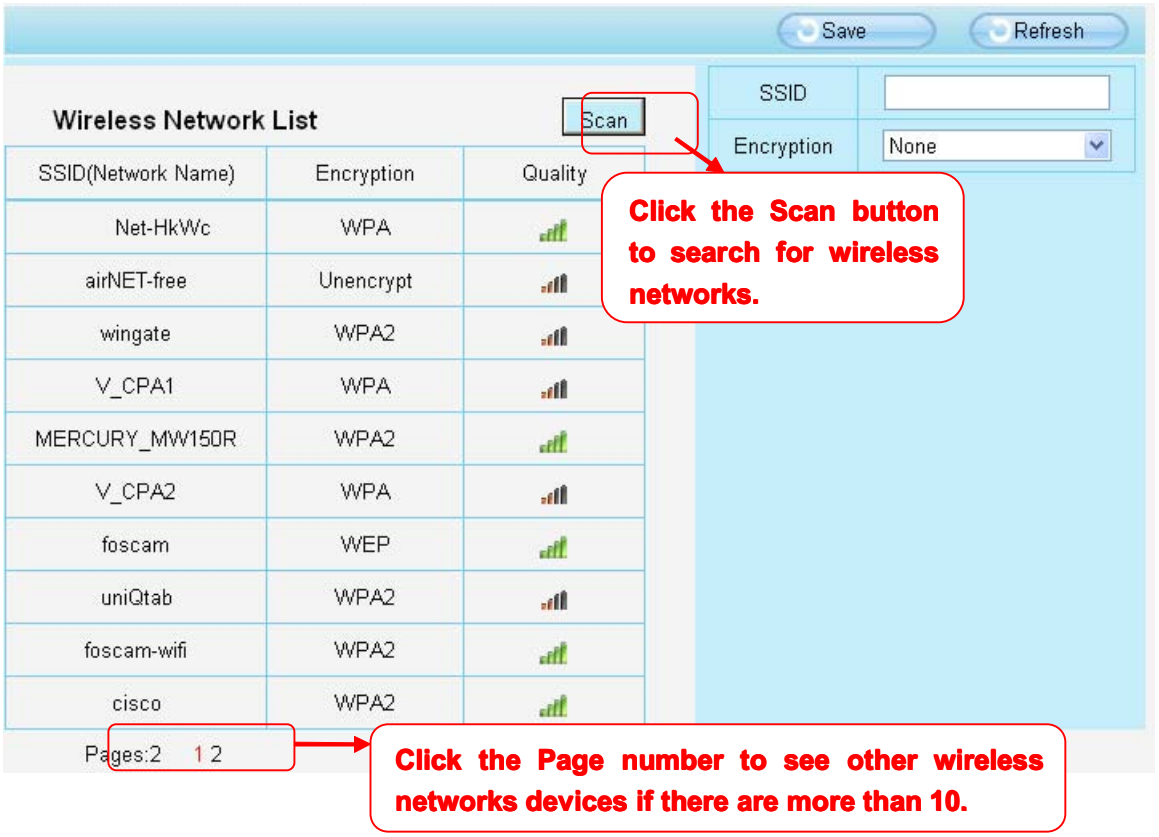

Figure 3.31

Step 2: Click the SSID (name of your router) in the list, the corresponding information related to your network, such as the name and the encryption, will be filled into the relevant fields automatically.

You will only need to fill in the password of your network. Make sure that the SSID, Encryption and the password you filled in are exactly the same for your router.

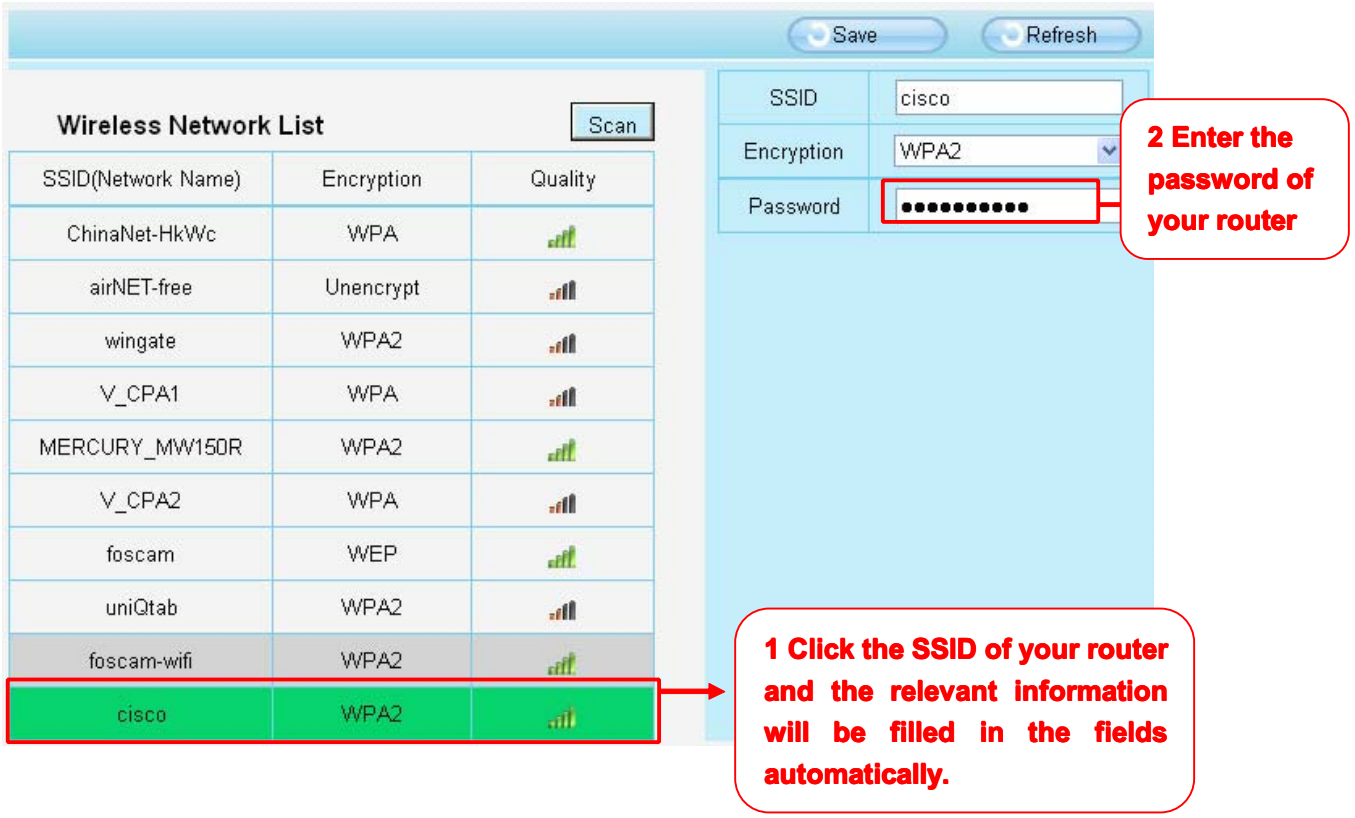

Figure 3.32

Step 3: Please click on the **Save** button after all settings have been entered and disconnect the network cable. Never shut down the power of the camera until the IP camera is able to connect to the wireless network.

The LAN IP address will disappear on the window of IP Camera Tool when the camera is configuring a wireless connection. Wait about 1 minute, the camera should obtain a wireless connection, and the LAN IP of the camera will show again on the window of the IP Camera Tool. The IP address may have changed after the camera receives a wireless connection; we recommend setting a static local IP address if this IP address changes by right clicking the camera in IP Camera Tools, setting a static IP, and pushing OK (see Figure3.36). Congratulations! You have set up the wireless connection of the camera successfully.

Note

If you fail to make a wireless connection, please refer to your seller or contact us directly for assistance.

3.3.5 UPnP

Figure 3.33a

The default UPnP status is closed. You can enable UPnP, then the camera's software will be configured for port forwarding. Back to the "Device Status" panel, you can see the UPnP status:

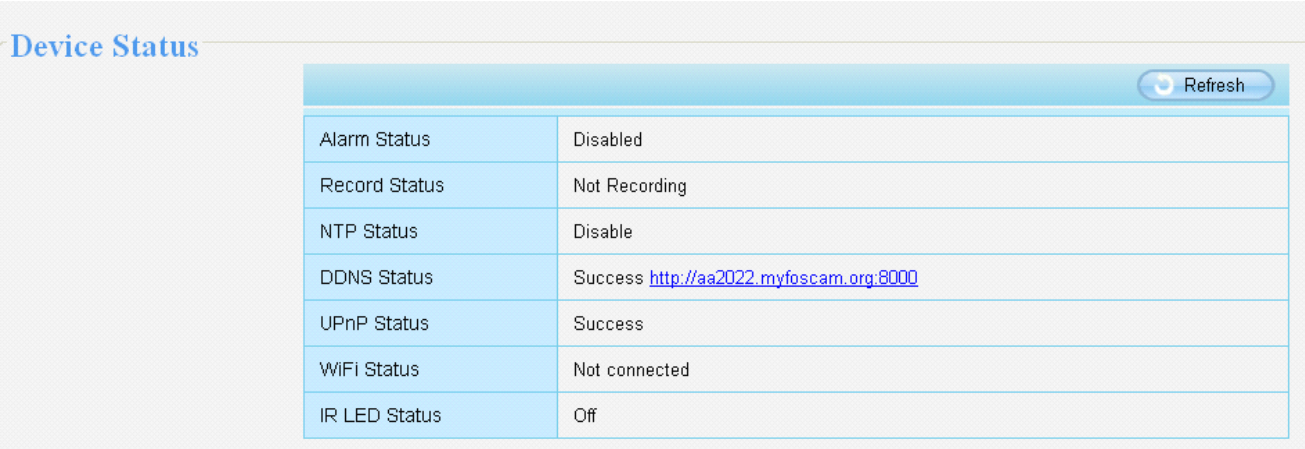

Figure 3.33b

The camera's software will be configured for port forwarding. There may be issues with your routers security settings, and sometimes may error. We recommend you configure port forwarding manually on your router (Figure 3.30).

3.3.6 Port

This camera supports HTTP Port and Media Port. The Media port is used to view the camera's video stream, HTTP Port is used to access the camera remotely. If you want to access the camera and view the video, the Media Port and the HTTP Port must both be configured correctly.

HTTP port / Media port: By default, the HTTP port is set to 88 and the Media port is set to 888. Also, they can be assigned with another port number between 1 and 65535. But make sure they canl not be conflict with other existing ports like 25, 21.

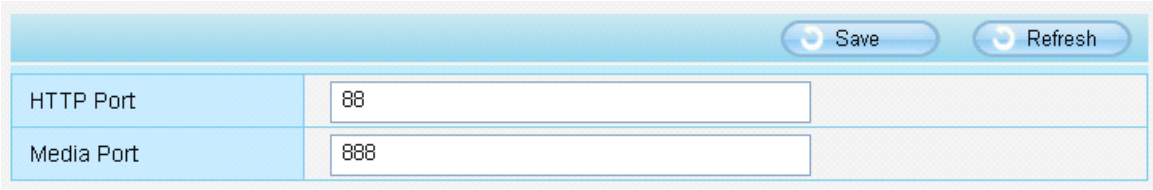

Figure 3.34

Another way to change the HTTP port no.

Step 1: Open the IP Camera Tool, select the camera you would like to change the port of, right click on the IP address, and click on ”Network Configuration”, this brings up the network configuration box as shown in Figure 3.35 and 3.36.

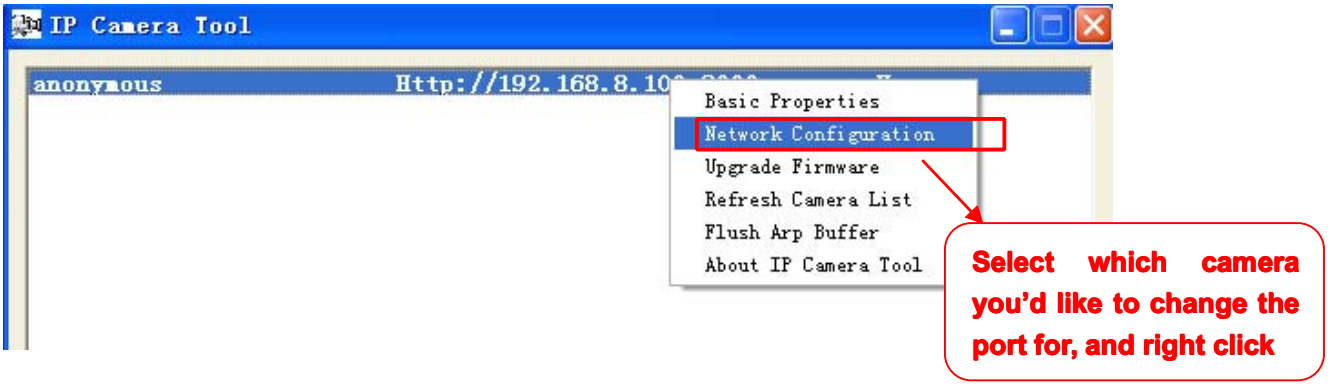

Figure 3.35

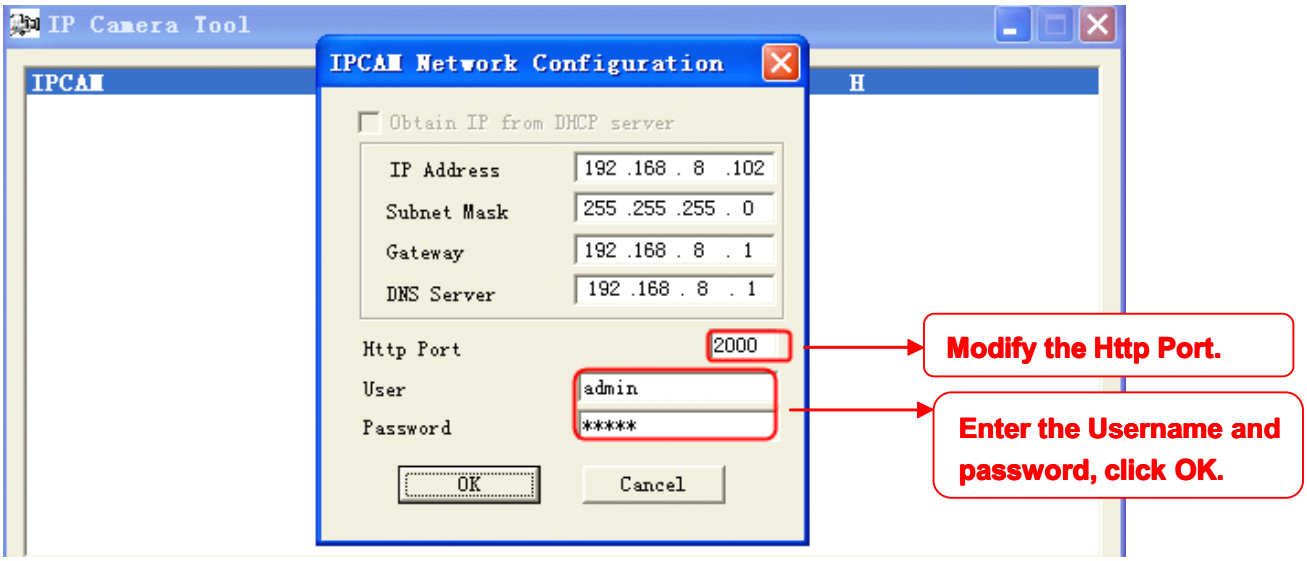

Figure 3.36

Step 2: Enter the username and password of the Administrator (default username is admin with a blank password), and click “OK” to apply changes.

Step 3: Wait around 10 seconds, you'll see that the camera's LAN IP address has changed. In our example it was changed to 2000, so we see http://192.168.8.102:2000 in IP Camera Tool. Also, the LAN IP address is now fixed at a static IP address of http://192.168.8.102:2000. This IP address will not change even if the camera is powered off and back on, the camera will remain on this LAN IP address. This is very important that a static LAN IP address is set, or you may have problems later with remote access and seeing the camera remotely if the camera loses power and reconnects on a different LAN IP address. Make sure you set a static LAN IP address!

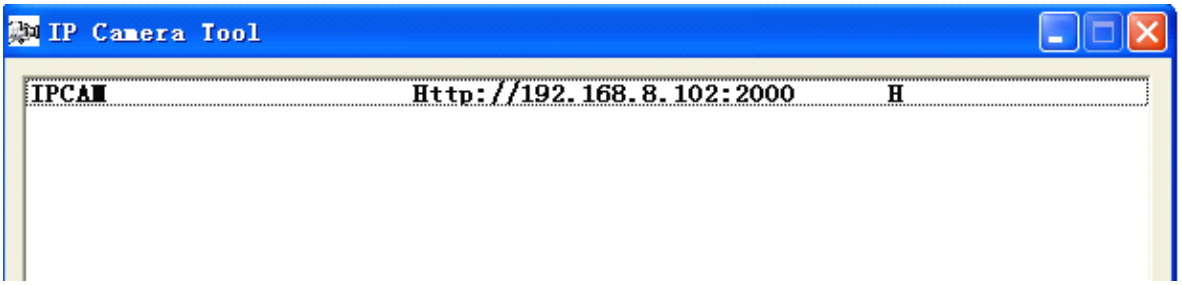

Note: 1 Http port and Media port must be different.
2 If the camera cannot be accessed, please make sure the port forwarding is succeed.

3.4 Video

This section allows you to configure Video stream settings, On screen display and Snapshot settings.

3.4.1 Settings

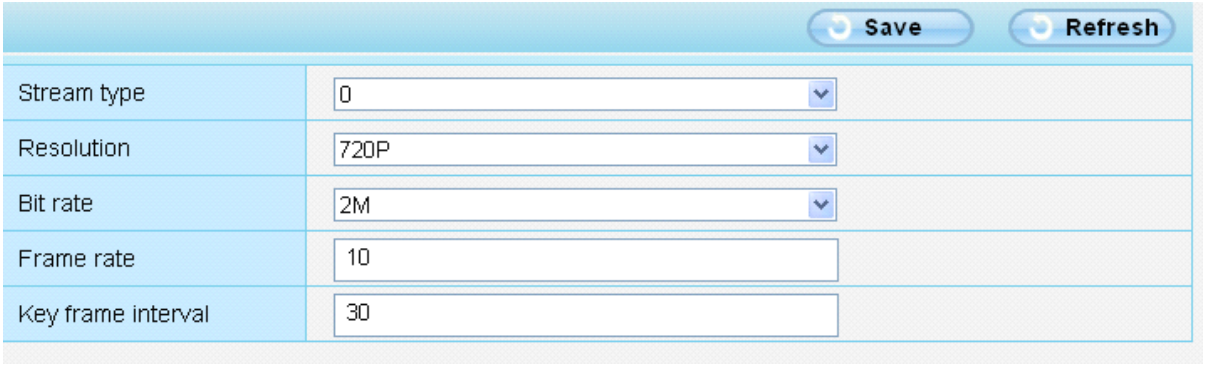

Figure 3.37

Stream type: There are four types to identify different streams you have set.

Resolution: The camera supports two types: 720P, VGA. The higher the resolution is, the clearer video will become. But the code flux will become larger too, and it will take up more bandwidth.

Bit rate: Generally speaking, the larger the bit rate is, the clearer video will become. But the bit rate configuration should combine well with the network bandwidth. When the bandwidth is very narrow, and bit rate is large, that will lead to video can not play well.

Frame rate: Note that a larger frame size takes up more bandwidth. When the video format is 50Hz, the maximum frame rate is 25 fps. When the video format is 60Hz, the maximum frame rate is 30 fps. You should lower frame rate when the bandwidth is limited. Normally, when the frame rate above 15, you can achieve fluently video.

Key Frame Interval: The time between last key frame and next key frame. The shorter the duration, the more likely you will get a better video quality, but at the cost of higher network bandwidth consumption.

3.4.2 On Screen Display

This page is used to add timestamp and device name on the video.

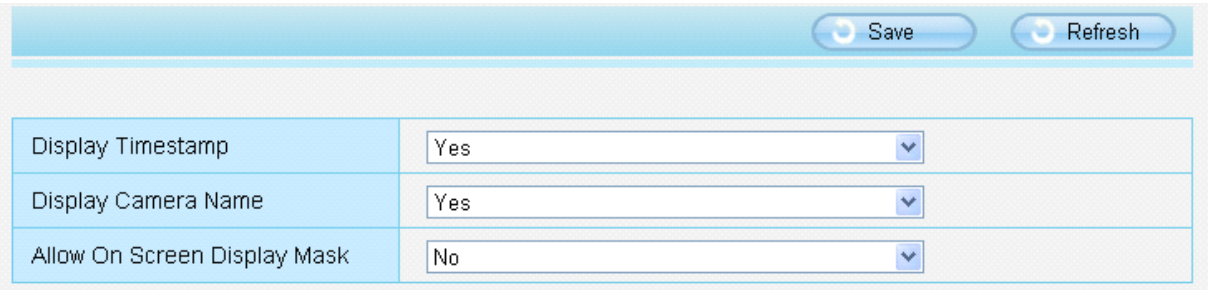

Figure 3.38

Display Timestamp: There are two options: Yes or NO. Select Yes and you can see the system date on the video,

Display Camera Name: There are two options: Yes or NO. Select Yes and you can see the device name on the video,

Allow On Screen Display Mask: There are two options: Yes or NO. Select yes and draw a mask area on the video, the mask area will be black on the video.

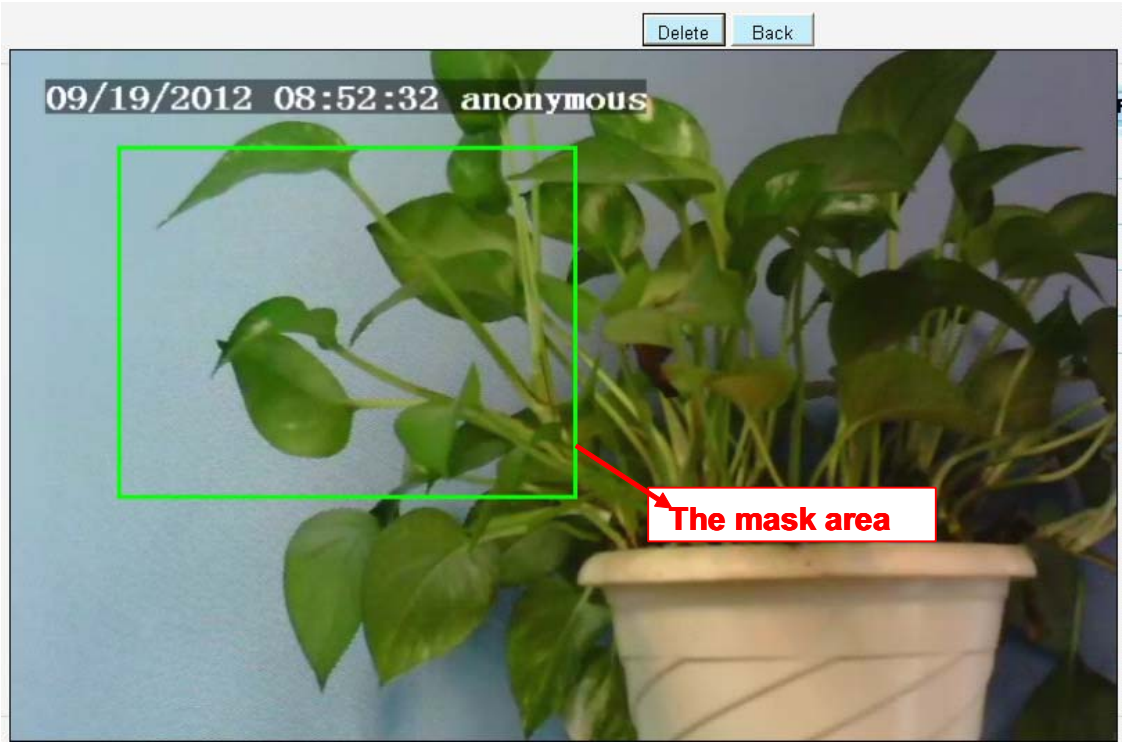

Figure 3.39

Click **Back** button and return to the OSD page, click Save to take effect.
Back to the surveillance window, you can see the mask area as the following picture:

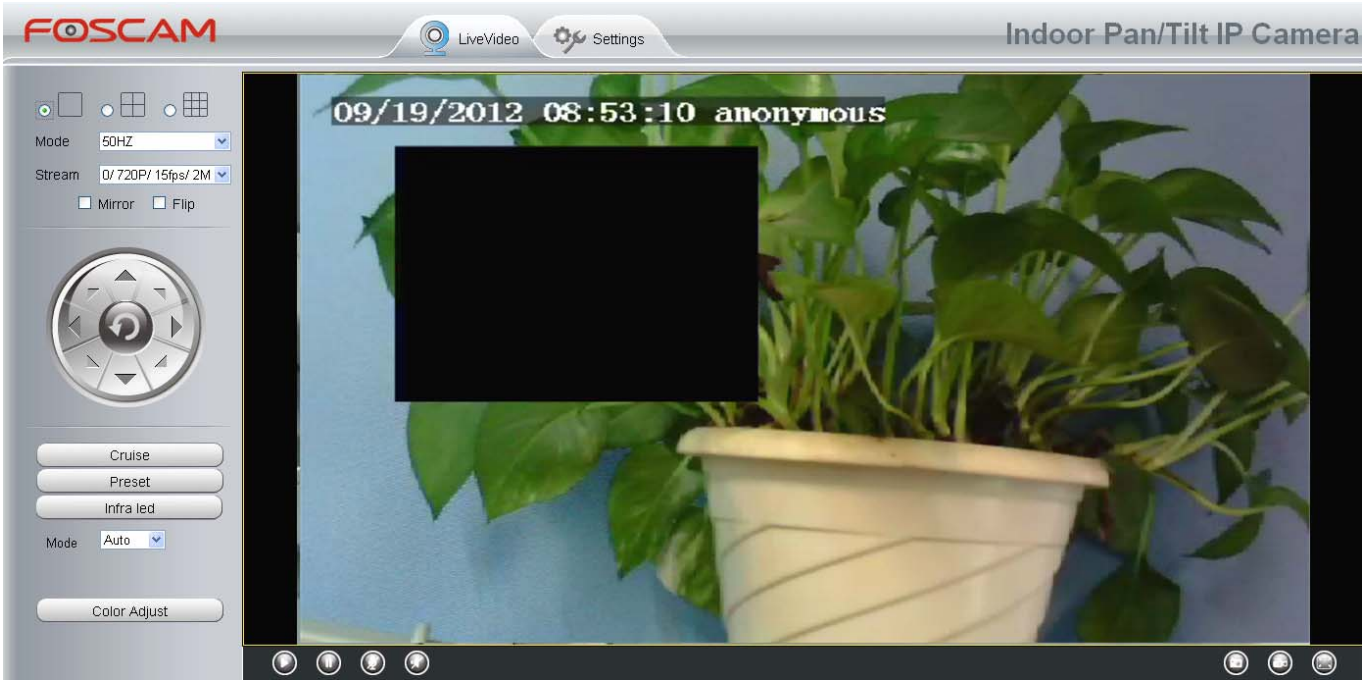

Figure 3.40

3.4.3 Snapshot Settings

On this page you can set the snapshot pictures' image quality and the storage path.

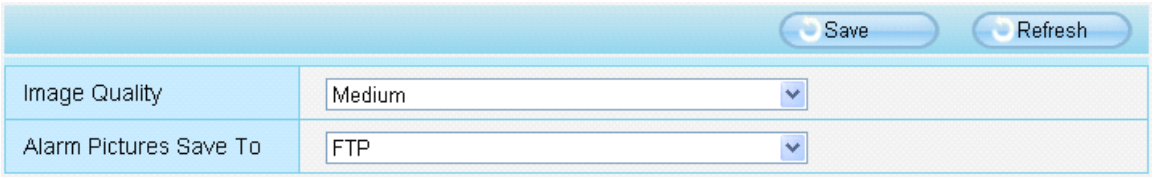

Figure 3.41

Image Quality: Low, Middle and High. The higher the quality, the picture will be clearer.

Alarm Pictures Save To: If you have done FTP settings and alarm settings, when alarming, the camera will snap pictures to the FTP automatically.

3.5 Alarm

IP Camera supports **Motion Detection Alarm**, when the motion has been detected, it will send emails or upload images to FTP.

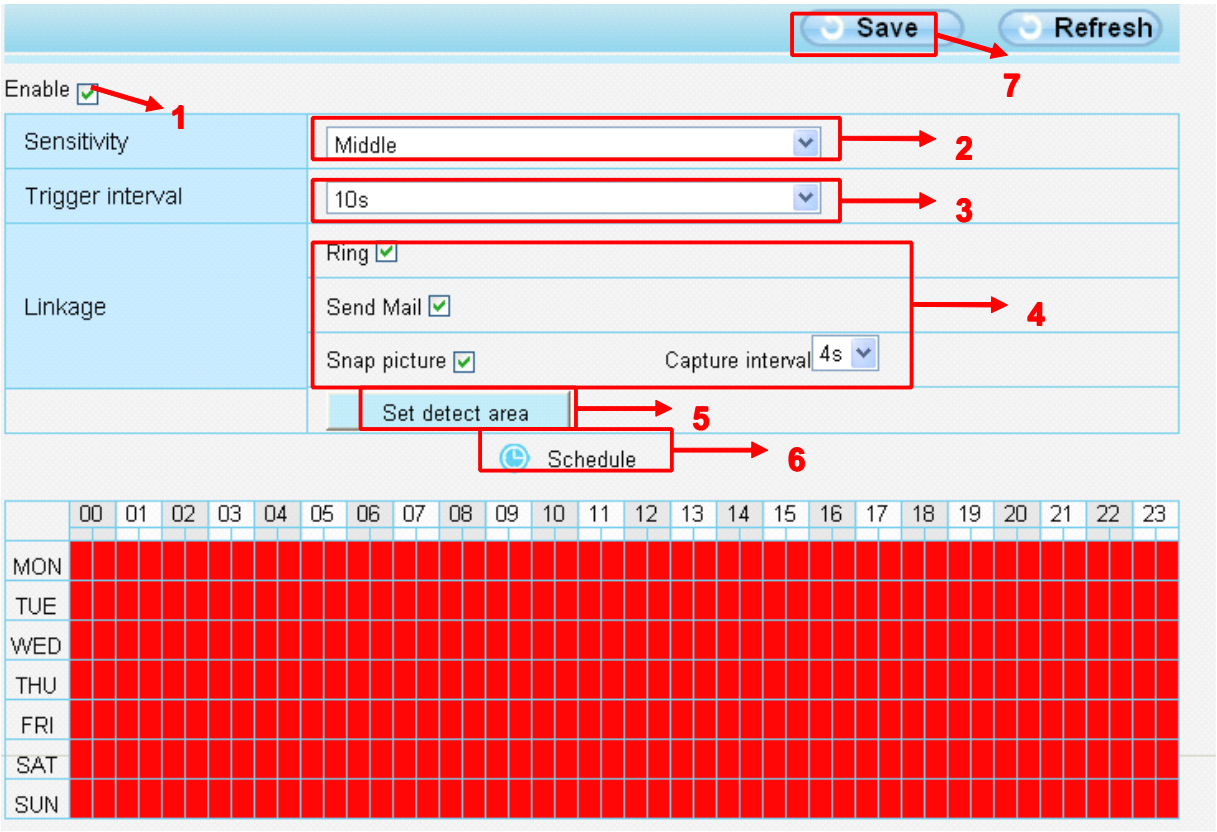

Figure 3.42

To enable motion detection, follow the steps below:

Step 01: Enable Motion detection

Step 02: Sensitivity --- It supports three modes: Low, Middle and High. The higher the sensitivity, the camera will be more easily alarmed. Select one motion sensitivity.

Step 03: Trigger interval -- The interval time between two motion detections. Here supports 5s/6s/7s/8s/9s/10s/11s/12s/13s/14s/15s. Select one interval time.

Step 04: Select the alarm linkage

When the motion has been detected, the alarm status will turn to Detect alarm.

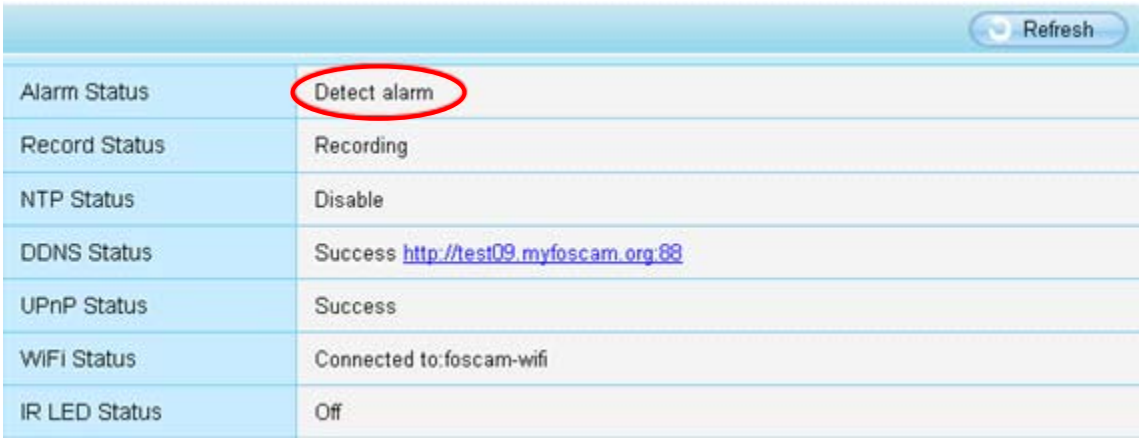

There are three alarm indicators:

A Ring

There is an embedded speaker inside the camera, so if you select **Ring**, when the motion has been detected, the people around the camera will hear beep alarm sound.

B Send E-mail

If you want to receive alarm emails when motion is detected, you must select Send E-mail and set **Mail Settings** first. The alarm email cannot contain the alarm picture if you have not selected Take Snapshot.

C Take Snapshot

If you select this checkbox, when the motion has been detected, the camera will snap the live view window as a still picture and load it to the FTP. Make sure you have set FTP and set FTP as the storage path in **Video->Snapshot settings** panel.
If you select Send Email, at the same time the picture will be send to you as an attachment.

Capture interval: The interval time between two pictures.

Step 05: Set detect area

Click set detect area and it pop up a window, then you can draw the detection area. Click **Back** button after settings. When something moving in the detection area, the camera will alarm.

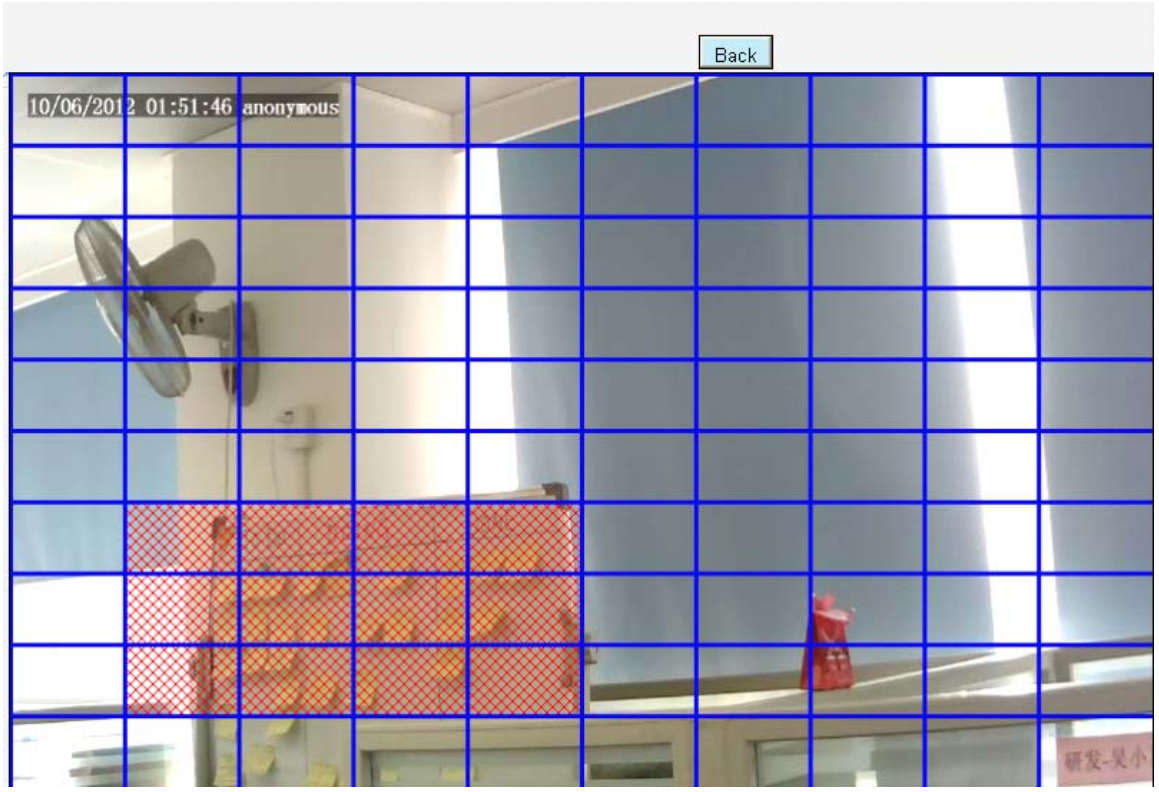

Figure 3.43

Step 06: Alarm Schedule

① Alarm anytime when motion is detected

Click the black button up the MON, you will see all time range turn red. When something moving in the detection area at anytime, the camera will alarm.

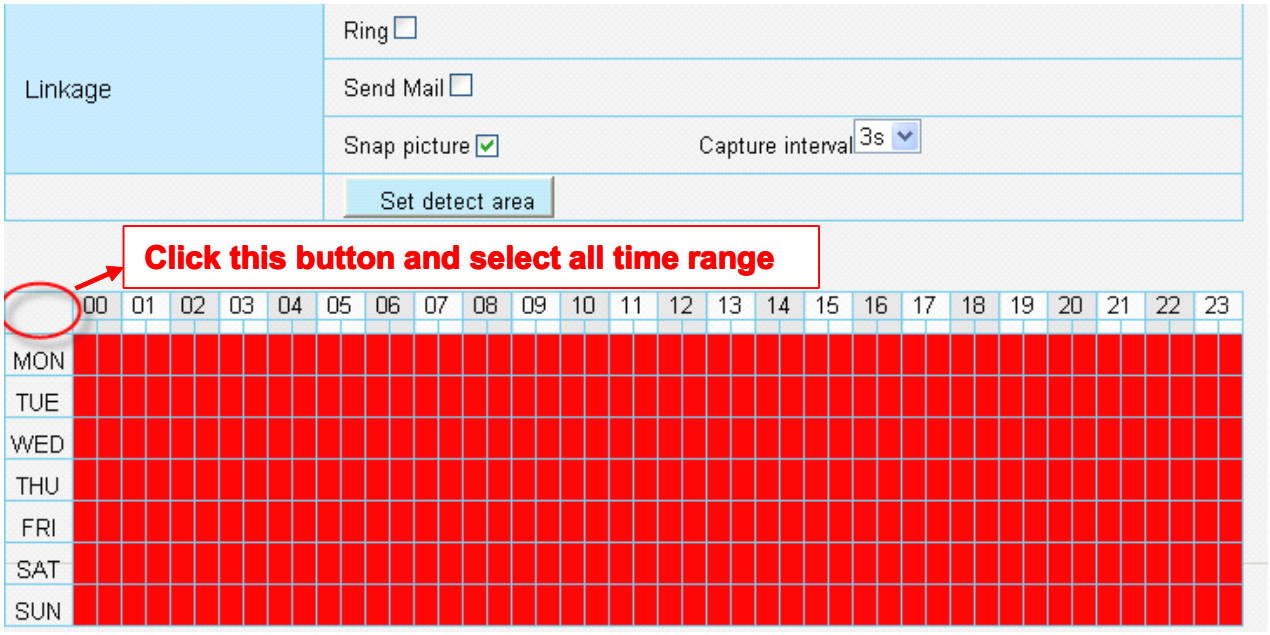

Figure 3.44

② Specify an alarm schedule

Click the week day words, the corresponding column will be selected. For example, click TUE, the all column of TUE turns to red, that means during Tuesday whole day, when something moving in the detection area, the camera will alarm.

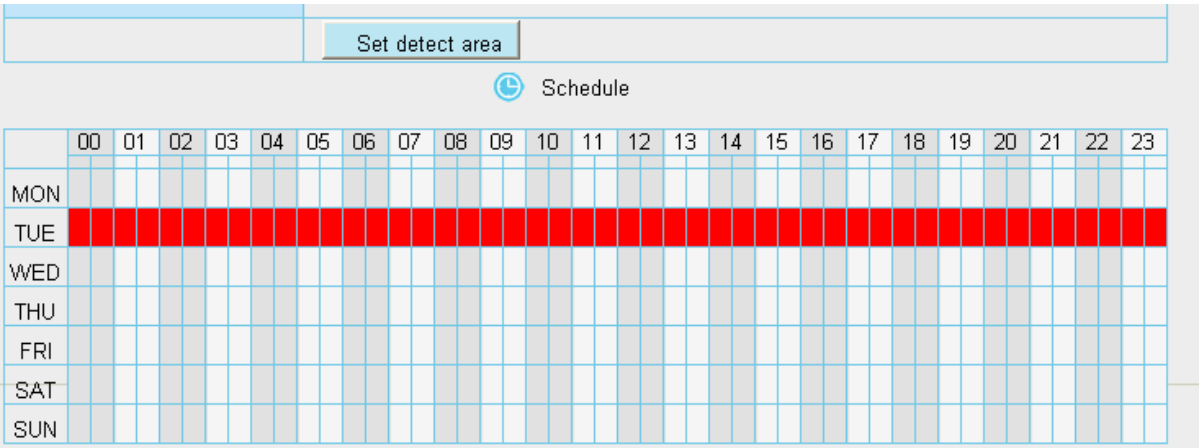

Figure 3.45

③ Press the left mouse and drag it on the time boxes, you can select the serial area,

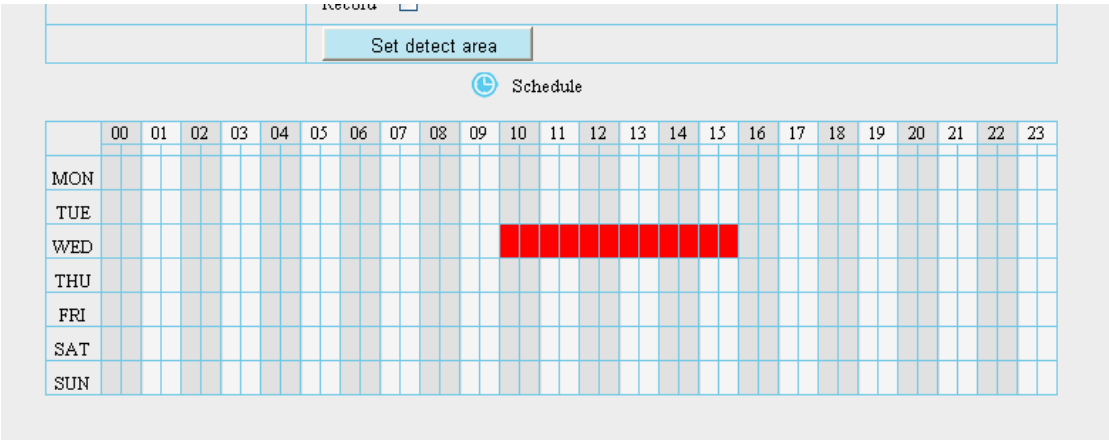

Figure 3.46

Step 07: Click Save button to take effect.

When the motion has been detected during the detection time in the detection area, the camera will alarm and adopt the corresponding alarm indicators.

NOTE: You must set the detection area and detection schedule, or else there is no alarm anywhere and anytime.

3.6 Record

On this page you can change the manually recording storage path.

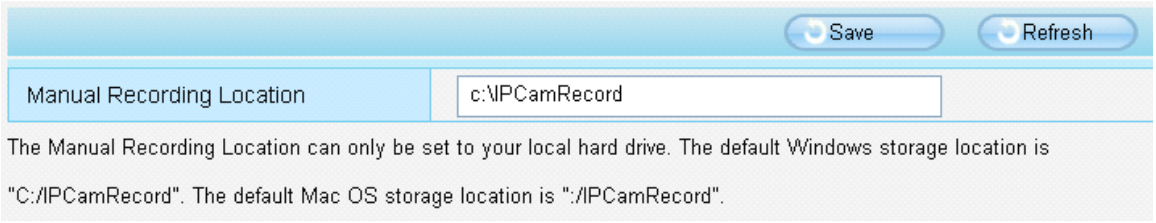
Save
Refresh
Manual Recording Location
c:\IPCamRecord
The Manual Recording Location can only be set to your local hard drive. The default Windows storage location is "C:/IPCamRecord". The default Mac OS storage location is ":/IPCamRecord".

Figure 3.47

Manual Recording Location: For Windows OS, the manual recording path is C:/ IPCamRecord, you can change another one here. For MAC OS, the manual recording path is: / IPCamRecord.

3.7 PTZ

This page will allow you to change the pan/tilt speed and do cruise tracks settings.

3.7.1 Pan/Tilt Speed

There are five PT speed types: very fast, fast, normal, slow and very slowly. Select the desired PTZ speed type and click save button .

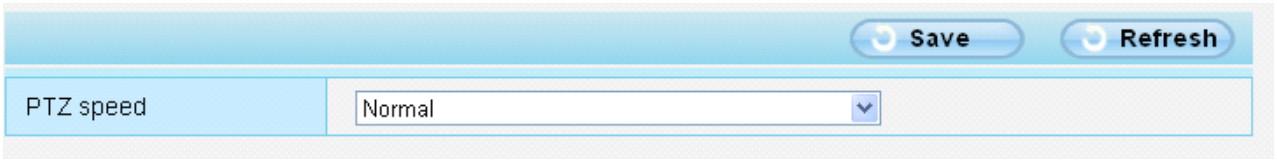

Figure 3.48

3.7.2 Preset Settings

This section explains how to add/ delete/ alter one cruise track.

There are two default cruise tracks: Vertical and Horizental.

Vertical: The camera will rotate from up to down
Horizental: The camera will rotate from left to right.

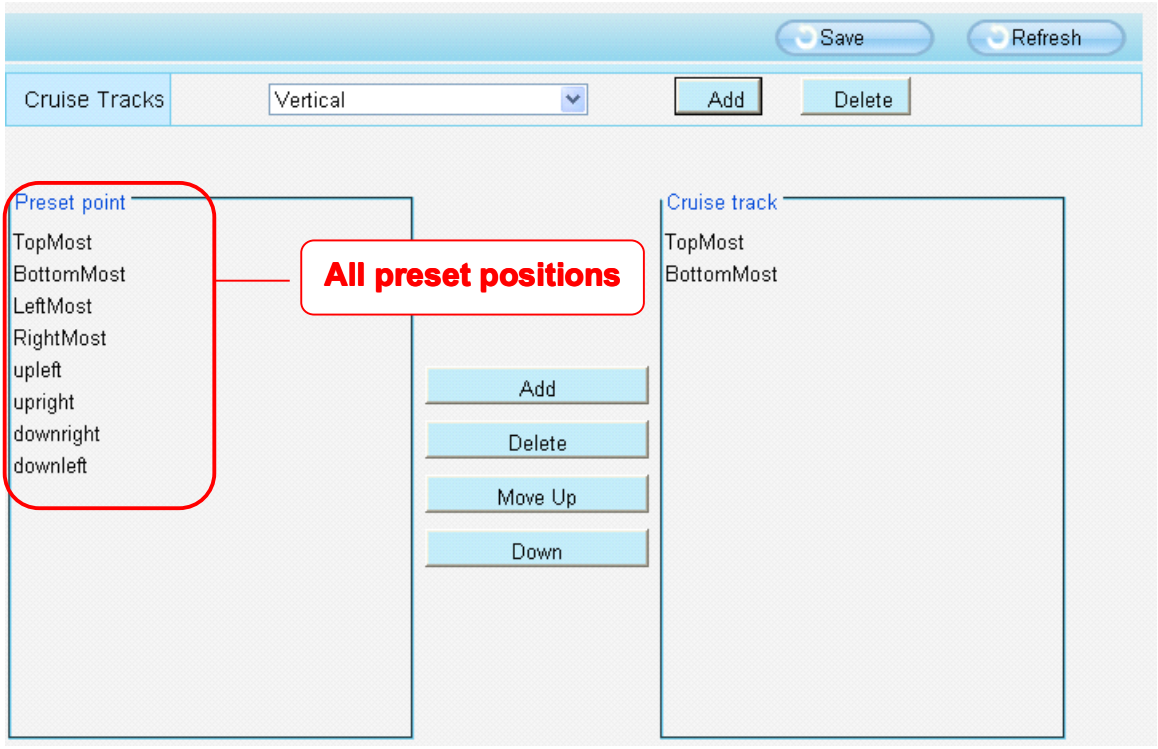

Figure 3.49

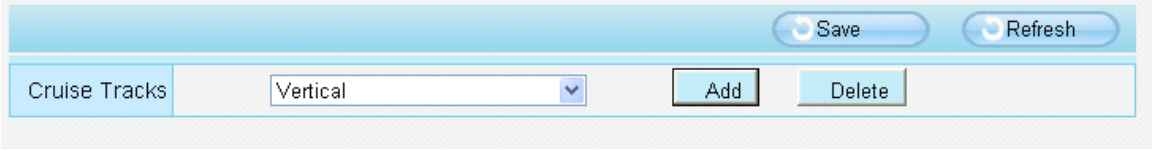

Figure 3.50

Add: Add one cruise track.
Delete: Select one cruise track and delete it.

How to add cruise tracks ?

Firstly, Click Add button and enter a descriptive name to identify the cruise track

Secondly: On the lower left of the page, you can see all preset points you have added. Select one preset point and click Add button, you can see the preset point has been added to the cruise track on the cruise track page. You need to add two or more preset points to the cruise track.

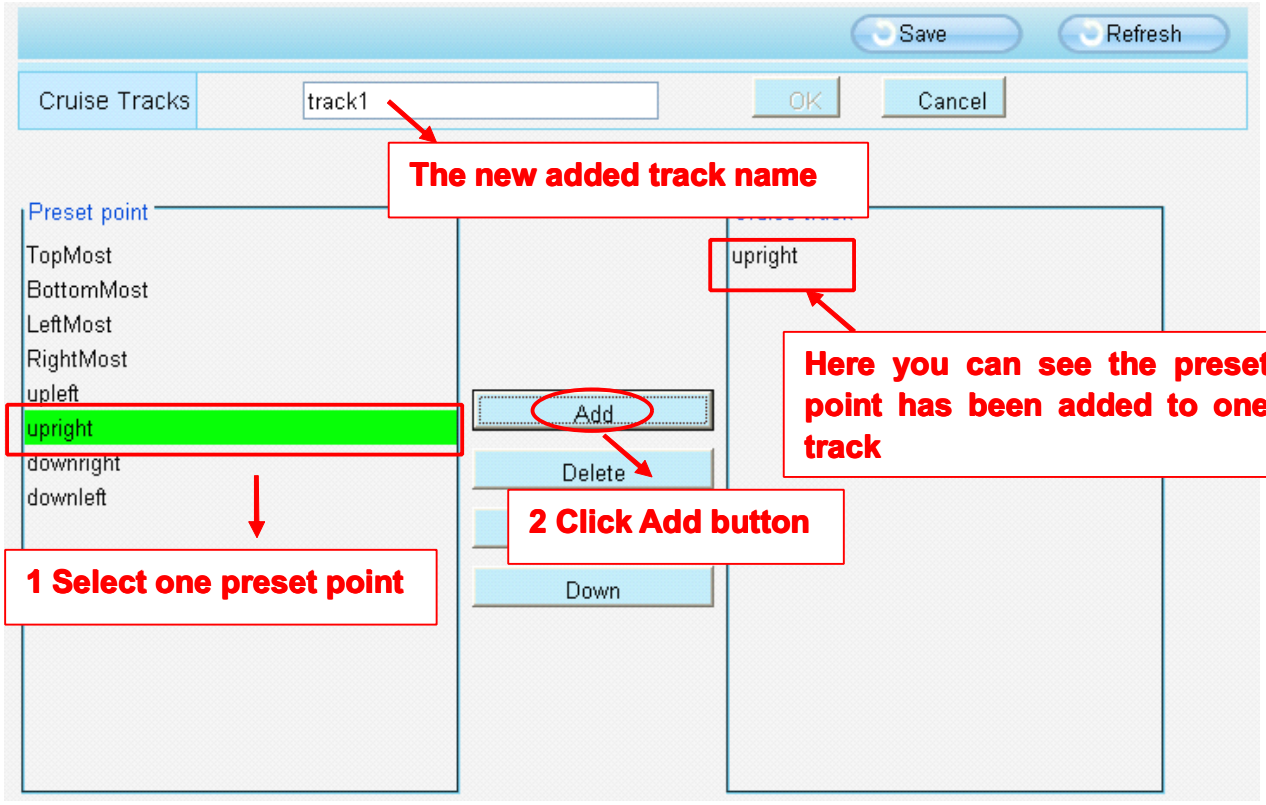

Figure 3.51

Thirdly: Click **OK** button and the cruise track will take effect.

You can add other cruise track as the same method.

For example: I have added three preset points to the “track 1”, that means : When I select the “track 1” on the surveillance window, the camera moves as the following track: upright then Right Most last downleft.

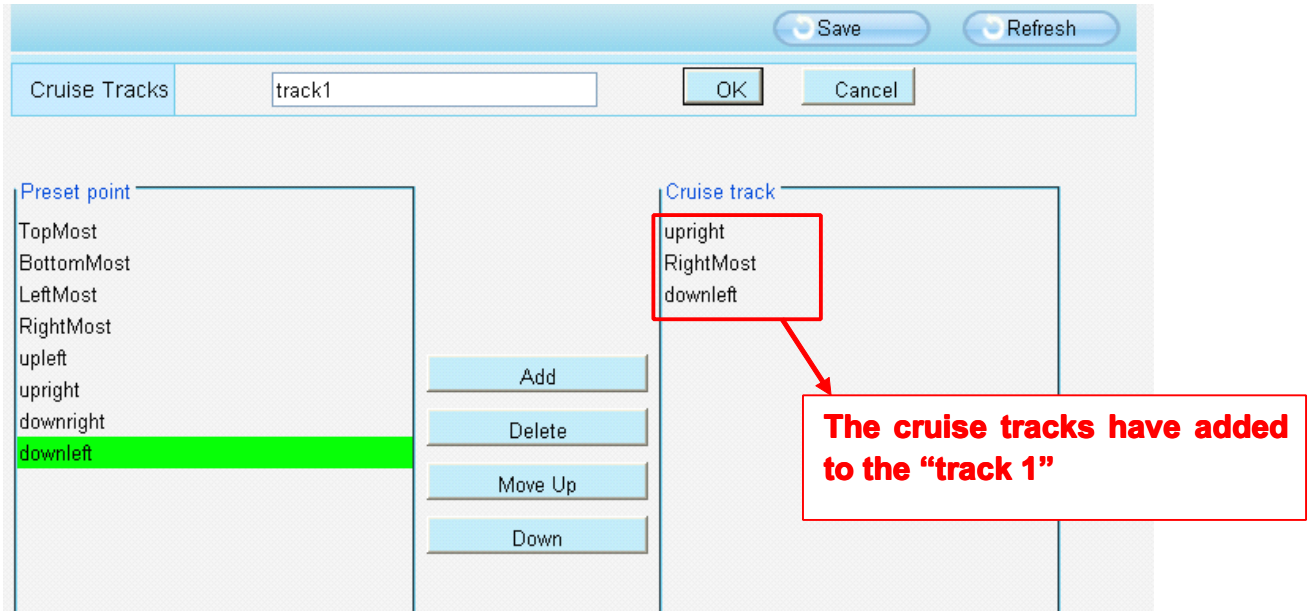

Figure 3.52

After add the cruise track, back to the surveillance window, click Cruise, her you can see all cruise tracks you have added.

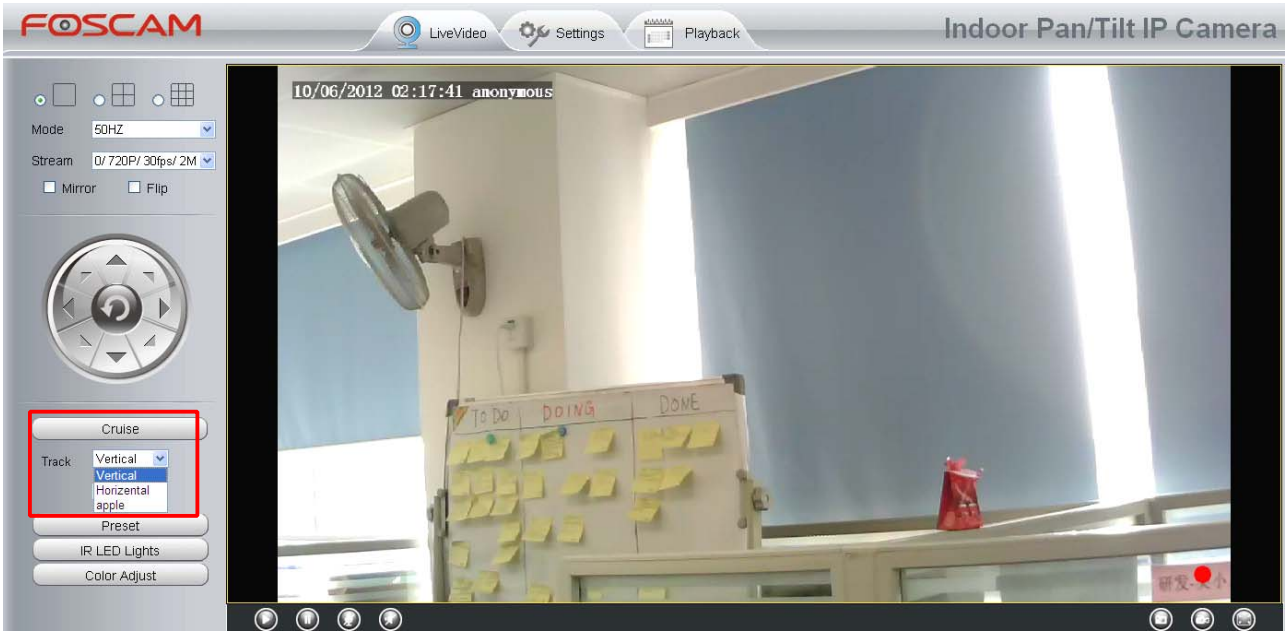

There are other buttons between the Preset points and Cruise track, you can use these buttons to adjust the order of preset points or add/delete one preset points in one cruise track,

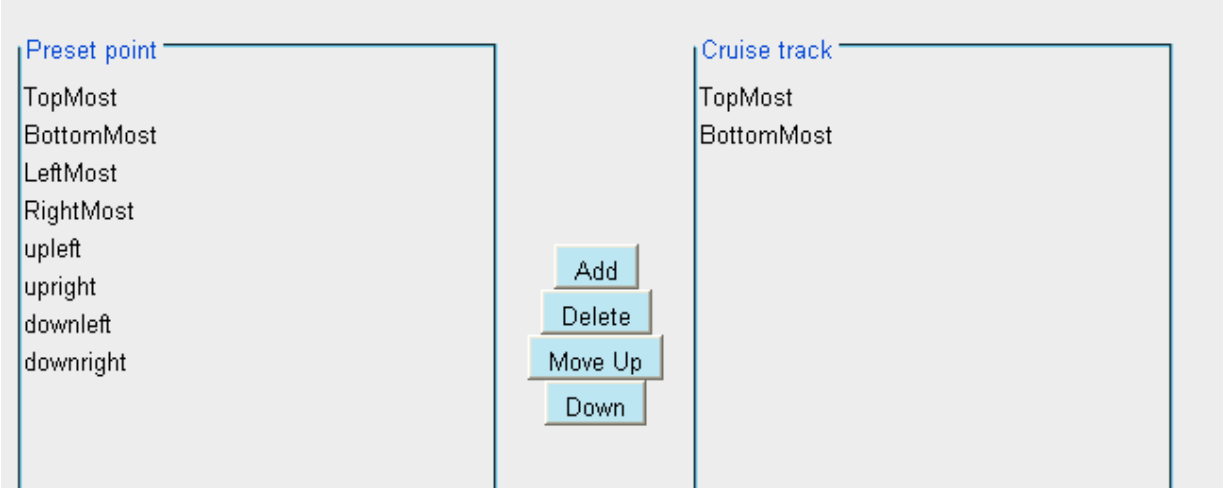

Figure 3.53

Add: Select one preset points and add it to the selected cruise track.
Delete: Select one preset points you have added to one cruise track, click delete.
Move up/ down: Select one cruise track, adjust the order of preset points in one cruise track.

3.7.3 Pan/ Tilt Start Mode

Here section will allow you to set the stop position after the camera reboots.

It supports three modes: No self test, Goto home position and Goto preset point.

No self test: When rebooting, the camera will not pan / tilt.

Goto home position: When rebooting, the camera will pa Providing Central Management Software to manage or monitor multi-cameras n / tilt and stops at center.

Goto Preset point: Select one preset position and save it. When rebooting, the camera will pan/ tilt and stops at the preset position you have set.

3.8 Path Settings

If you want to upload images to your FTP server，you can set **FTP Settings.**

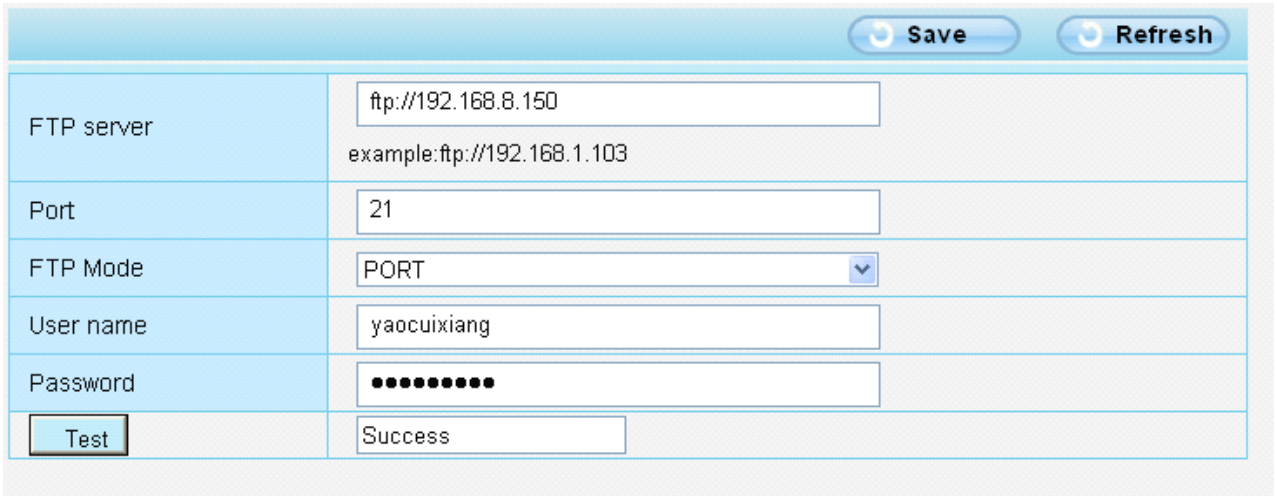

Figure 3.54

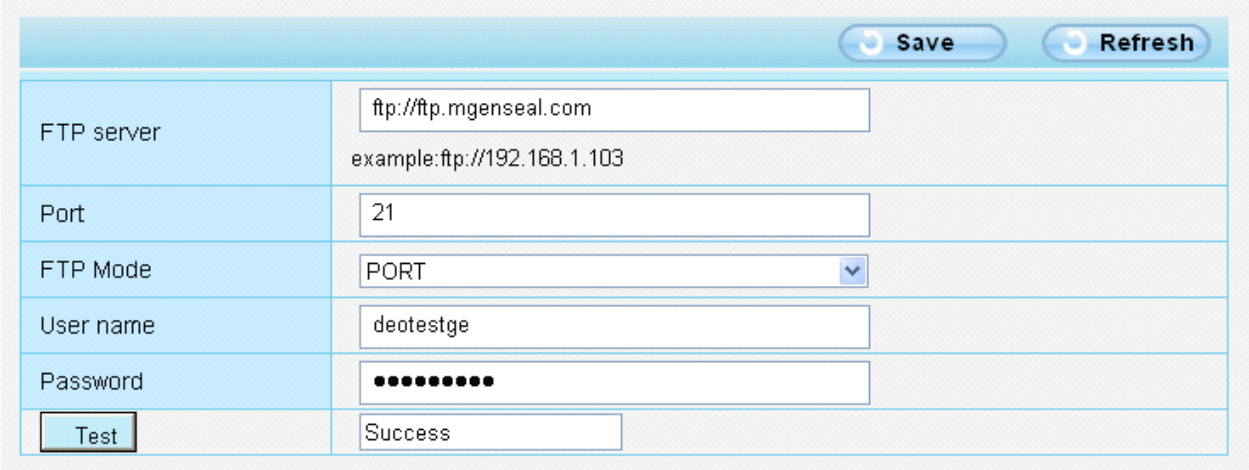

Figure 3.55

FTP server: If your FTP server is located on the LAN, you can set as Figure 3.54.
If you have an FTP server which you can access on the internet, you can set as Figure 3.55.
Port: Default is port 21. If changed, external FTP client program must change the server connection port accordingly.
FTP Mode: Here supports two modes: PORT and PASV.
Username/password: The FTP account and password.
Click **Save** to take effect.
Click **Test** to see if FTP has been successfully configured.

3.9 Firewall

This section explains how to control the access permission by checking the client PC's IP addresses. It is composed of the following columns: **Block access from these IP addresses** and **Only allow access from these IP addresses**.

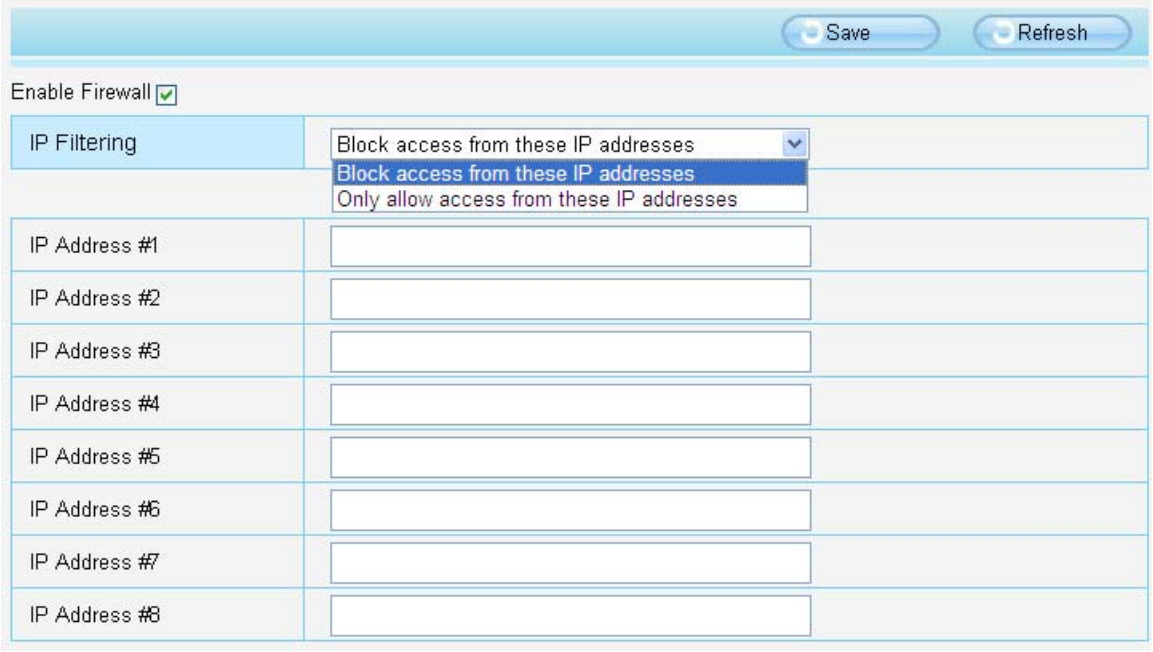

Figure 3.56

Enable firewall, If you select Only allow access from these IP addresses and fill in 8 IP addresses at most, only those clients whose IP addresses listed in the **Only allow access from these IP addresses** can access the Network Camera. If you select **Block access from these IP addresses,** only those clients whose IP addresses are in the IP list cannot access the Network Camera.

Click **Save** to take effect.

3.10 System

In this panel, you can backup/restore your camera settings, upgrade the firmware to the latest version, restore the camera to default settings and reboot the device.

3.10.1 Back up& Restore settings

Click **Backup** to save all the parameters you have set. These parameters will be stored in a bin file for future use.

Click Browse and select the parameters file you have stored, then click Submit to restore the restore the parameters.

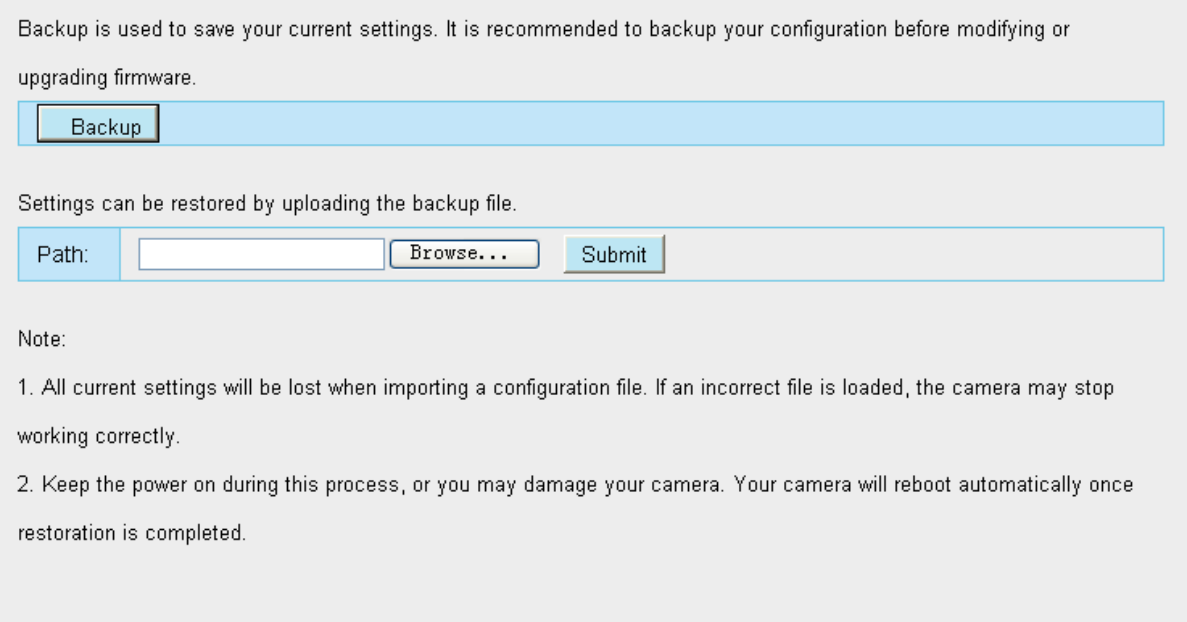
Backup is used to save your current settings. It is recommended to backup your configuration before modifying or upgrading firmware.
Backup
Settings can be restored by uploading the backup file.
Path:
Browse...
Submit
Note:
1. All current settings will be lost when importing a configuration file. If an incorrect file is loaded, the camera may stop working correctly.
2. Keep the power on during this process, or you may damage your camera. Your camera will reboot automatically once restoration is completed.

Figure 3.57

3.10.2 System upgrade

Your current firmware version will be displayed on your screen. You may go to the **Device Status-→ Device Information** Page to check for the latest firmware versions available.

Click **Browse**, choose the correct bin file and then click **System Upgrade**.
Don't shut down the power during upgrade. After upgrading, you can see the upgrade result.

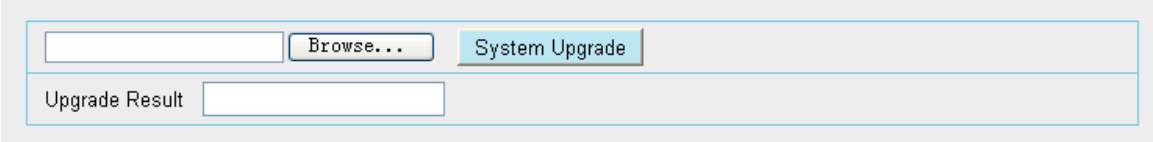

Figure 3.58

Upgrade Firmware by IP Camera Tool

Double click the IP Camera Tool shot icon

, select the Camera IP that you want to upgrade the firmware. Then select Upgrade Firmware and enter the username and password, choose the firmware file, and upgrade.

Figure 3.59

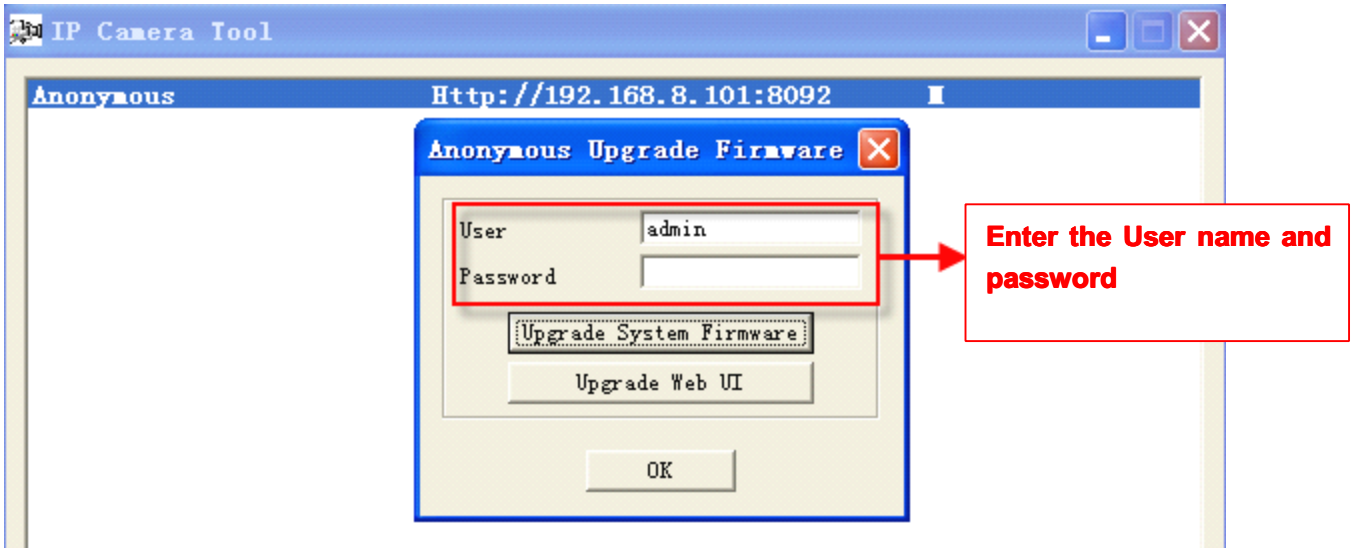

Figure 3.60

CAUTION: If your camera works well with the current firmware, we recommend not upgrading. Please don't upgrade the firmware unnecessarily. Your camera may be damaged if misconfigured during an upgrade.

NOTE:

1) Don't upgrade the firmware in WAN through the web UI, or else the upgrade process may be failed.

2) Please ensure you have download the correct firmware package for your camera before upgrading. Read the upgrade documentation (readme.txt file) in the upgrade package before you upgrade.

3) Upon downloading the firmware check the sizes of the .bin files. They must match the size in the readme.txt file. If not, please download the firmware again until the sizes are the same. Your camera will not function correctly if a corrupt .bin file is used.

4) Normally, only Device WEB UI need to be upgrade, please do not try to upgrade the Device System Firmware.

5) Never shut down the power of the camera during upgrade until the IP camera restart and get connected.

3.10.3 Factory reset

Click All reset and all parameters will return to factory settings if selected. This is similar to press the Reset button on the bottom of the camera..



Figure 3.61

3.10.4 Reboot System

Click **Reboot System** to reboot the camera. This is similar to unplugging the power to the camera.

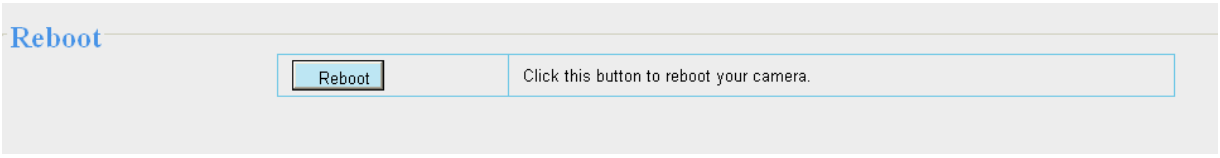

Figure 3.62

4 Phone APPs

With Phone APPs , you can view your camera directly as a computer anywhere, anytime. This section shows the user how to set up the iPhone, and Android mobile phones to view Foscam cameras with Phone APPs.

4.1 APP for Android cell phones

There are two ways to install the phone App :

1) Search the APP “Foscam ip cam viewer” in the Google Play directly if your cell phone has installed Google Play.

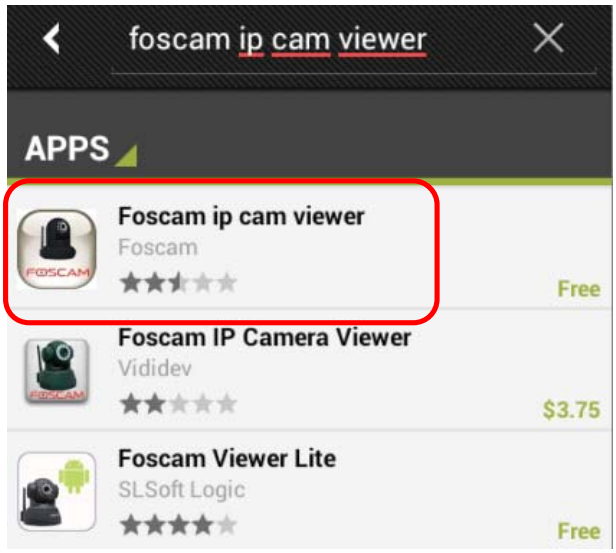

Figure 4.1

Download and install the phone view app, then you can see the shortcut icon in your cell phone screen.

2) Enter http://play.google.com in the URL field of the browser, then search the APP “Foscam ip cam viewer”. Download and install the APP.

Click the shortcut icon

and login Phone APP.

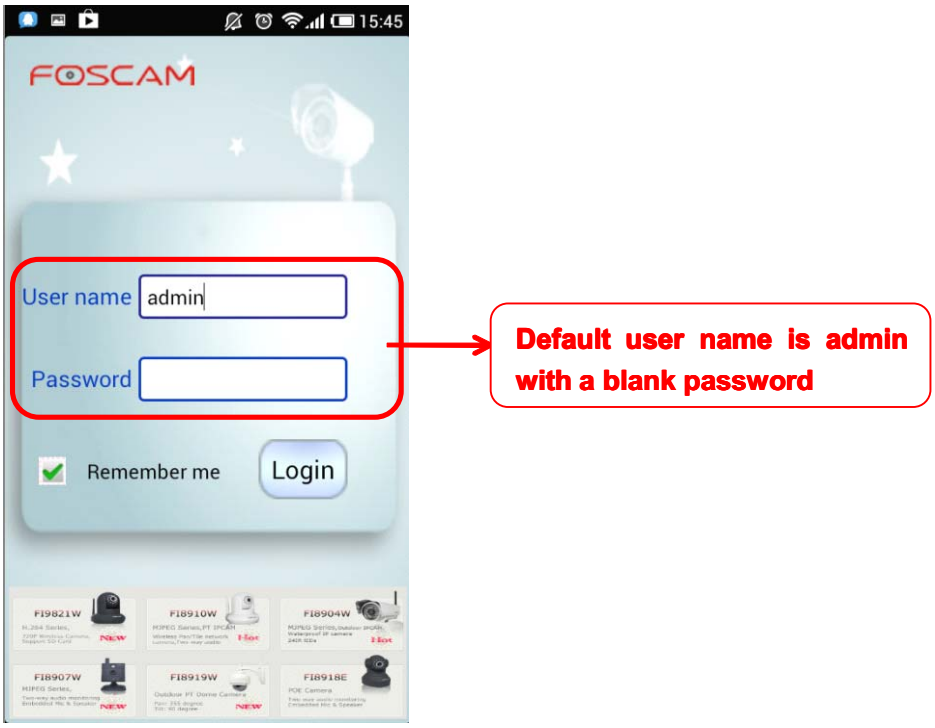

Figure 4.2

Enter the user name and password then click Login button, you can see the following surveillance windows:

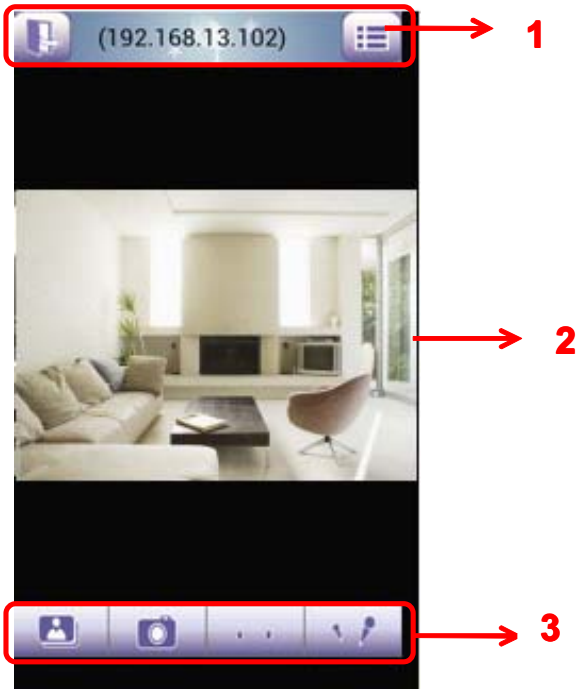

Figure 4.3

The default surveillance window is black, you need to add devices to it and then connect the device.

Please check the login window above, it was divided to 3 sections from no. 1 to 3.

Section1 Exit / Go to Device List Buttons

Click this icon and exit Phone App

Click this icon and back to Device List page to add cameras to the software

Section2 Live view window

If the camera supports PT function, here slide on the screen with your finger, the camera will rotate follow your finger direction.

Section3 Playback/ Snapshot/Audio/Talk buttons

Playback Click this icon to play the pictures you have captured.

Snapshot Click it to make snapshot.

Audio button Click it and you will hear sound captured by the camera's built-in microphone. Make sure the camera supports Audio. Click the icon again and stop Audio.

Talk button Click it then talk through your cell phone's microphone which will transmit through the camera's speaker**.** People will hear your talking through the camera's built-in speaker. Make sure the camera supports Talk.

Click the icon again and stop talking.

How to add cameras to the Phone APP

The following steps are required before adding cameras to the APP:

1） Install the IP Camera(s) which wants to be monitored.

2） Login the IP Camera(s) by web browser and set the IP address, port, username & password and make sure the camera can be accessed by browsers.

3） DDNS setting is a plus whenever you want to add the devices by WAN.

Click the button and go to Device List page, this section will show you how to add cameras in LAN or in WAN.

Figure 4.4

Section1 Back button

: Click this icon and back to the surveillance window

Section2 Device List

Here will list all cameras that added to the software.

Section3 Add device buttons

Add device in LAN

: Click this icon and the APP will search all cameras in LAN automatically. Such as the following screen:

Figure 4.5

Select the camera IP and click OK to add cameras in LAN, then you can see the camera in the Device List.

Add device through scanning UID (User Identification) number

: **UID Scan.** Click this icon and scan the UID no. in the camera body, then the camera can be added to the App.

Figure 4.6

Normally each camera has one unique UID and UID is used for PnP function. Now our camera does not support UID number, so here you cannot allow to use UID to add device.

Add device in WAN

: Click this icon and you can add cameras in WAN manually.

Click this icon and it pops up the following screen, here you can add cameras manually.

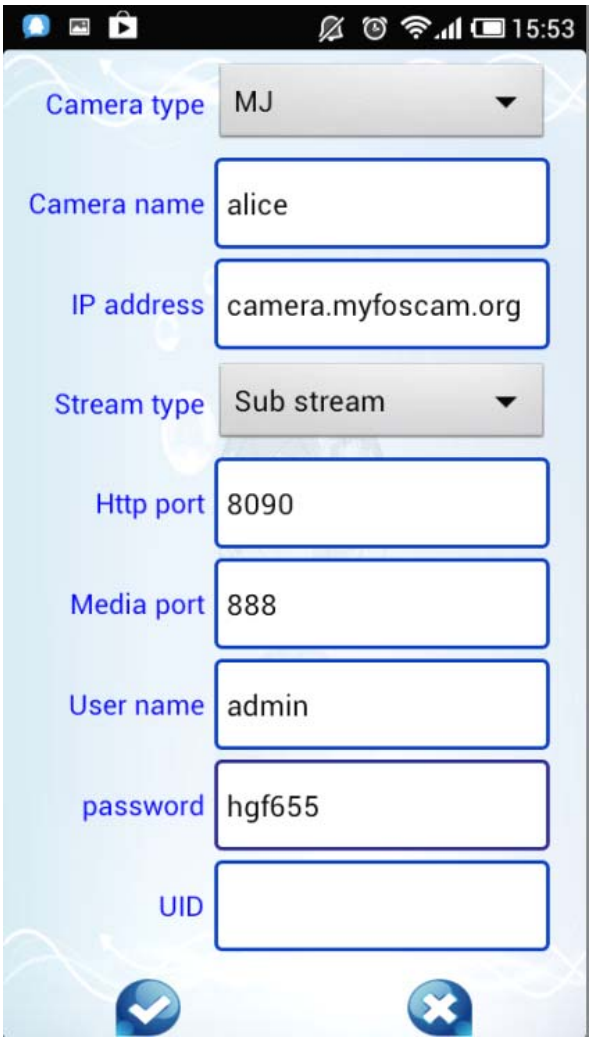

Figure 4.7

Camera Type: Our Company produces two series cameras: MJ and H.264. Here select the camera type that you want to add.

Camera name: The Camera name is a unique name that you can give to your device to help you identify it.

IP address: Fill in the camera's DDNS host or WAN IP not LAN IP.

Stream type: It has two types: Main stream and Sub stream. For cell phones, we recommend you to select Sub stream to get more fluent video.

Http / Media port: For MJ cameras, here share the same port.

User name &Password: The camera's user name and password.

UID: If your camera supports UID, here you may fill in the UID no.. Now FOSCAM camera does not support UID.

Click the icon to add camera then you can see the camera in the Device List.

Select one IP address and click it, then you can enter the surveillance window.

Select one IP address in the Device List and press it for a moment, it pop up the following screen:

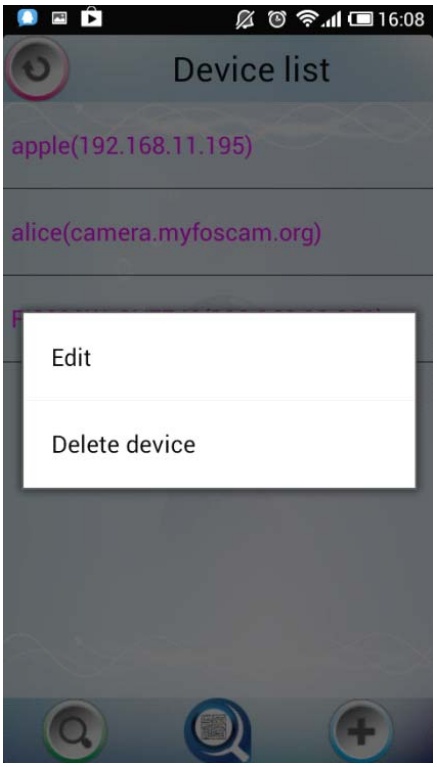

Figure 4.8

Edit: Re- edit the camera's information, such as the Http / Media port, user name and password, and so on. Click Edit and you can go to Add camera page (Figure 4.7).

Delete device: Delete the camera from the Device List.

4.2 APP for iPhones

If you use iPhone, please search the APP “Foscam ip cam viewer” and install it through APP Store, then you can see the shortcut icon in your cell phone screen.

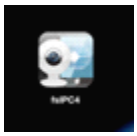

Click the icon and you can go to “ipcam table” page directly:

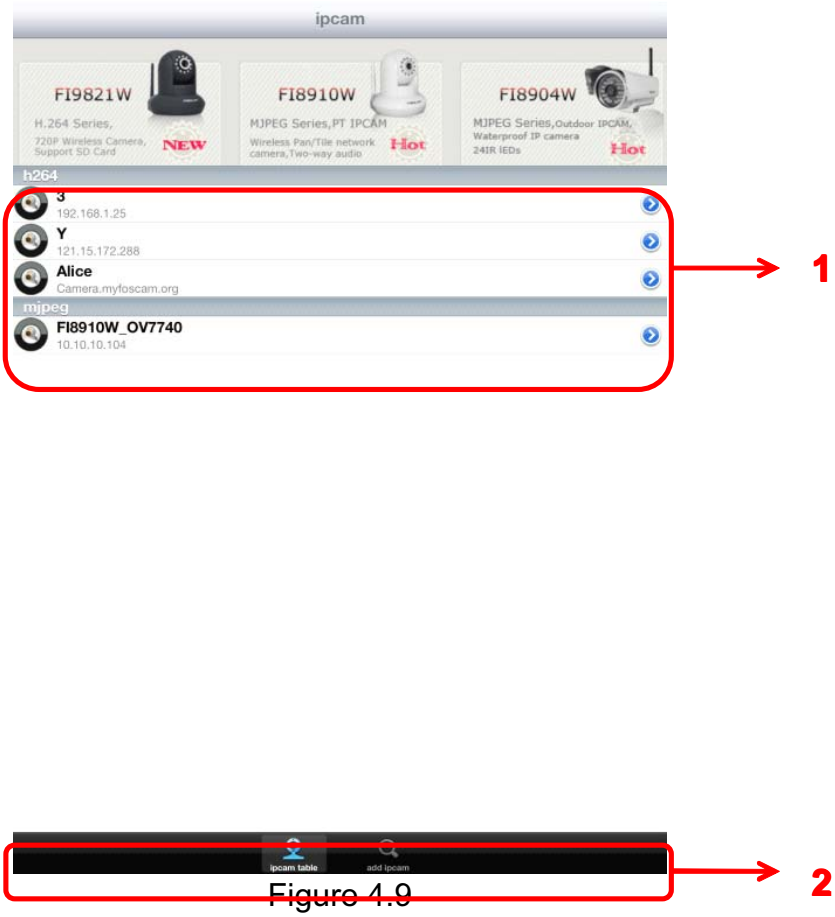

Figure 4.9

The default device list is null, you need to add cameras to it.

Section1 Camera list

Here will list all cameras that added to the software.

Section2 ipcam table/ add ipcam buttons

Click this icon and back to ipcam table page, here you can see all cameras that have added to the software.

: Click this icon and back to add ipcam page, here you can add cameras in LAN or in

WAN to the software.

How to add cameras to the APP

The following steps are required before adding cameras to the App:

1) Install the IP Camera(s) which wants to be monitored.
2) Login the IP Camera(s) by web browser and set the IP address, port, username & password and make sure the camera can be accessed by browsers.
3） DDNS setting is a plus whenever you want to add the devices by WAN.

If you want to add cameras to the App, please click this icon

go to **"add ipcam"** page(Figure 4.10)**.**

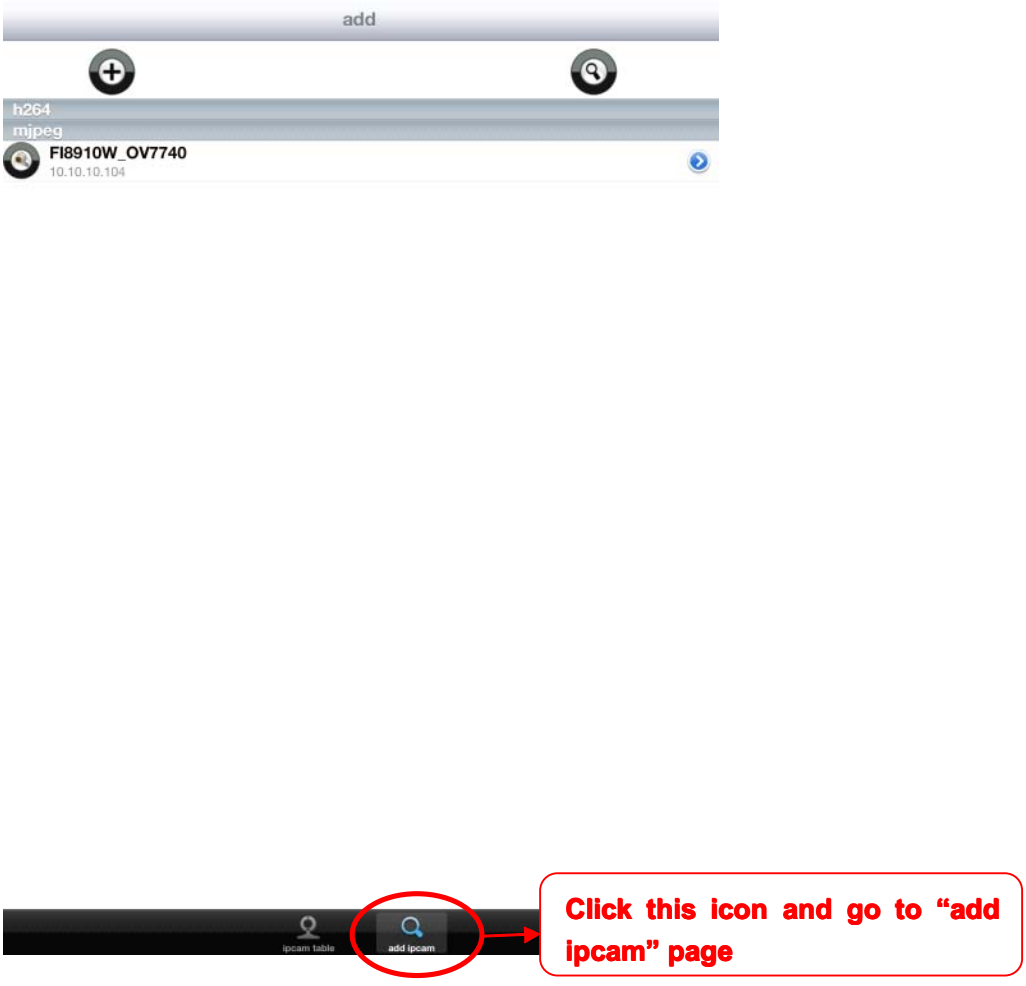

Figure 4.10

Add device in LAN

Click this button and the APP will search all cameras in LAN, then add it to APP automatically .

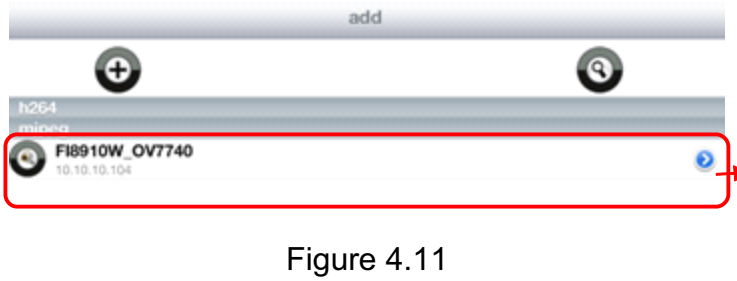

Figure 4.11

There is a icon after the camera name, click it and you can enter the user name, password and web port to login the camera.

Figure 4.12

Add device in WAN

Step 1: Click the Add Camera icon to add cameras manually.

Step 2: Select the camera type: mjpeg or h.284 (Figure 4.13), then enter the camera's basic information like camera name , ip , http/media port, user name, password and so on(Figure 4.14).

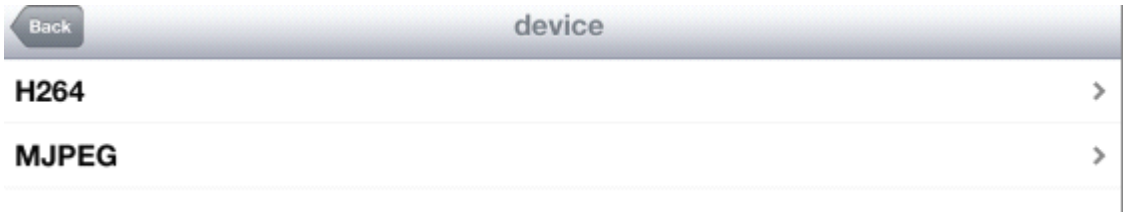

Figure 4.13

Figure 4.14a Add H.264 Device Page

Figure 4.14b Add MJPEG Device Page

UID: If your camera supports UID, here you scan UID number. Now FOSCAM camera does not support UID.

Device name: The Device name is a unique name that you can give to your device to help you identify it.

IP address: Fill in the camera's DDNS host or WAN IP not LAN IP.

User &Password: The camera's user name and password.

Media / Web port: For MJPEG cameras, here only support web port.

Stream type: It has two types: Main stream and Sub stream. For cell phones, we recommend you to select Sub stream to get more fluent video.

Step 3: Click Add button ADD to add cameras, then you can see the camera name in the "ip cam table" page.

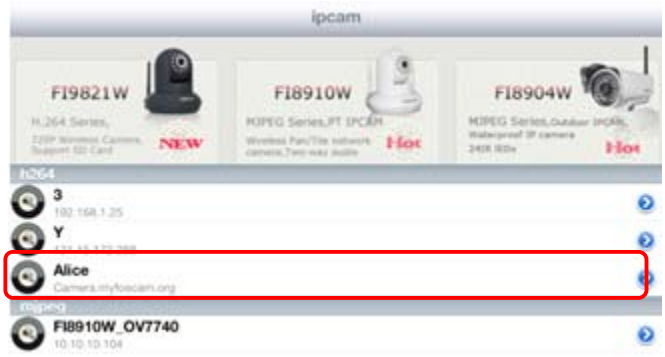

Figure 4.15

Surveillance windows

Back to "ipcam table" page and you can see all cameras that have added. There is a icon after one camera name, click this icon and you can alter the camera's user name, password, media port and http port.

Figure 4.16

Figure 4.17

Click one camera ip and you can see the live video.

Figure 4.18

Please check the login window above, it was divided to 4 sections from no. 1 to 4.

Section1 Back Button



: Click this icon and back to “ipcam table” page.

Section2 Photo Button

Click this icon and look the photos you have captured.

Section3 Live view window

If the camera supports PT function, here slide on the screen with your finger, the camera will rotate follow your finger direction.

Section4 Snapshot/Audio/Talk buttons

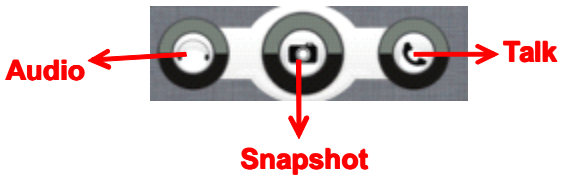

Snapshot

Click it to make snapshot.

Audio button

Click it and you will hear sound captured by the camera’s built-in microphone. Make sure the camera supports Audio. Click the icon again and stop Audio.

Talk button

Click it then talk through your cell phone’s microphone which will transmit through the camera’s speaker**.** People will hear your talking through the camera’s built-in speaker. Make sure the camera supports Talk.

Click the icon again and stop talking.

5 APPENDIX

5.1 Frequently Asked Questions

NOTE: Any questions you would meet, please check Network connections firstly. Check the working status revealed by the indicators on the network server, hub, exchange and network card. If abnormal, check the network connections.

5.1.1 How to download and installl the ActiveX for Firefox users

For the first time login the camera, it may prompt you to download plugin.

Figure 5.1

Drag the download file to Firefox web page and it will prompt you to Install it.

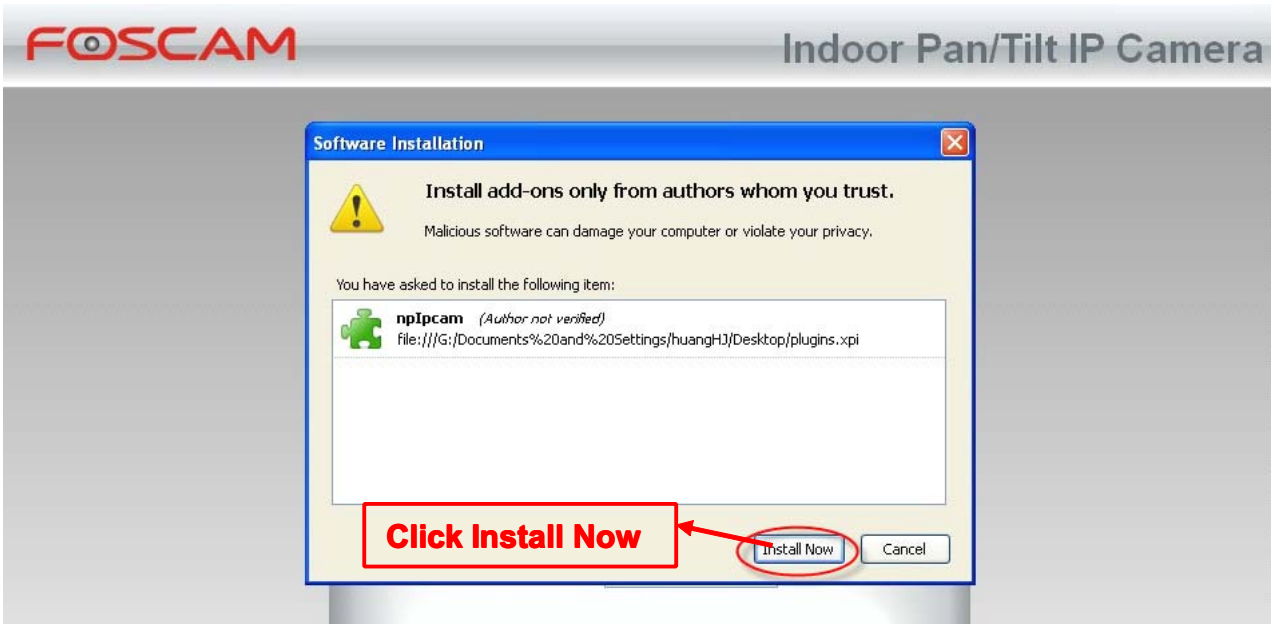
FOSCAM
Indoor Pan/Tilt IP Camera
Software Installation
Install add-ons only from authors whom you trust.
Malicious software can damage your computer or violate your privacy.
You have asked to install the following item:
npIpcam (Author not verified)
file:///G:/Documents%20and%20Settings/huangHJ/Desktop/plugins.xpi
Click Install Now
Install Now
Cancel

Figure 5.2

Reboot the Firefox after the plugin installation is successfully completely, then relogin the camera again, you can see the surveillance window

NOTE: If you could not view living video after running the ActiveX, only a red cross in the center of the video or just a black screen. Please change another port number to try.
Make sure all firewall or antivirus software on your computer does not block the active download and installation. If you are unable to run the ActiveX control, try shutting down the firewall or antivirus program.

5.1.2 How to download and installl the ActiveX for Google Chrome users

For the first time login the camera, it will prompt you to download the ActiveX..

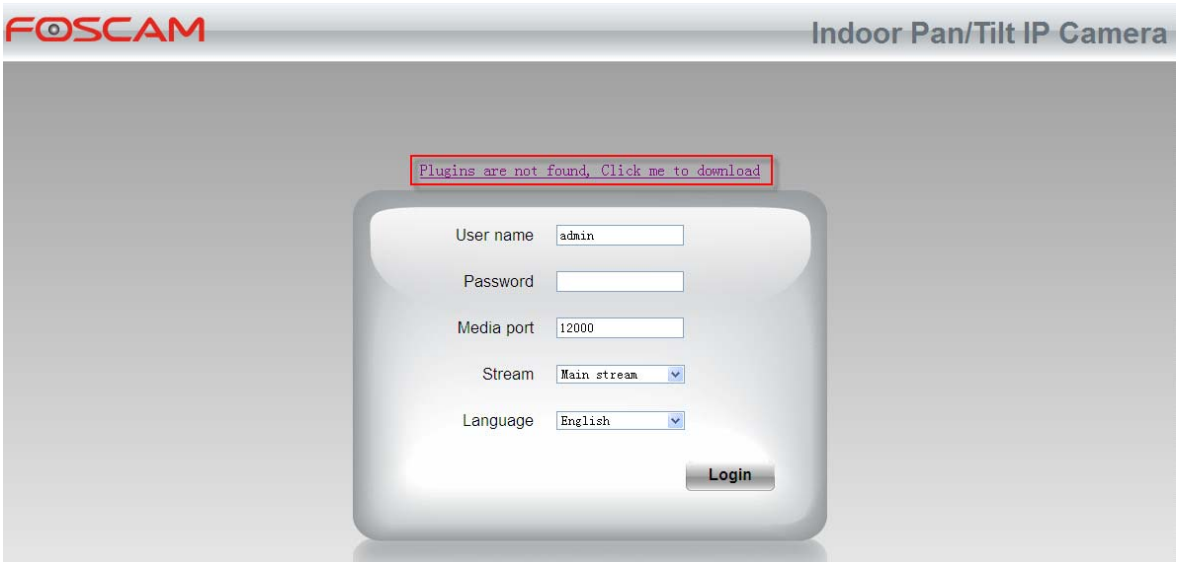

Figure 5.3

Download the plugin and drag it to the **Extensions** page of Google Chrome.

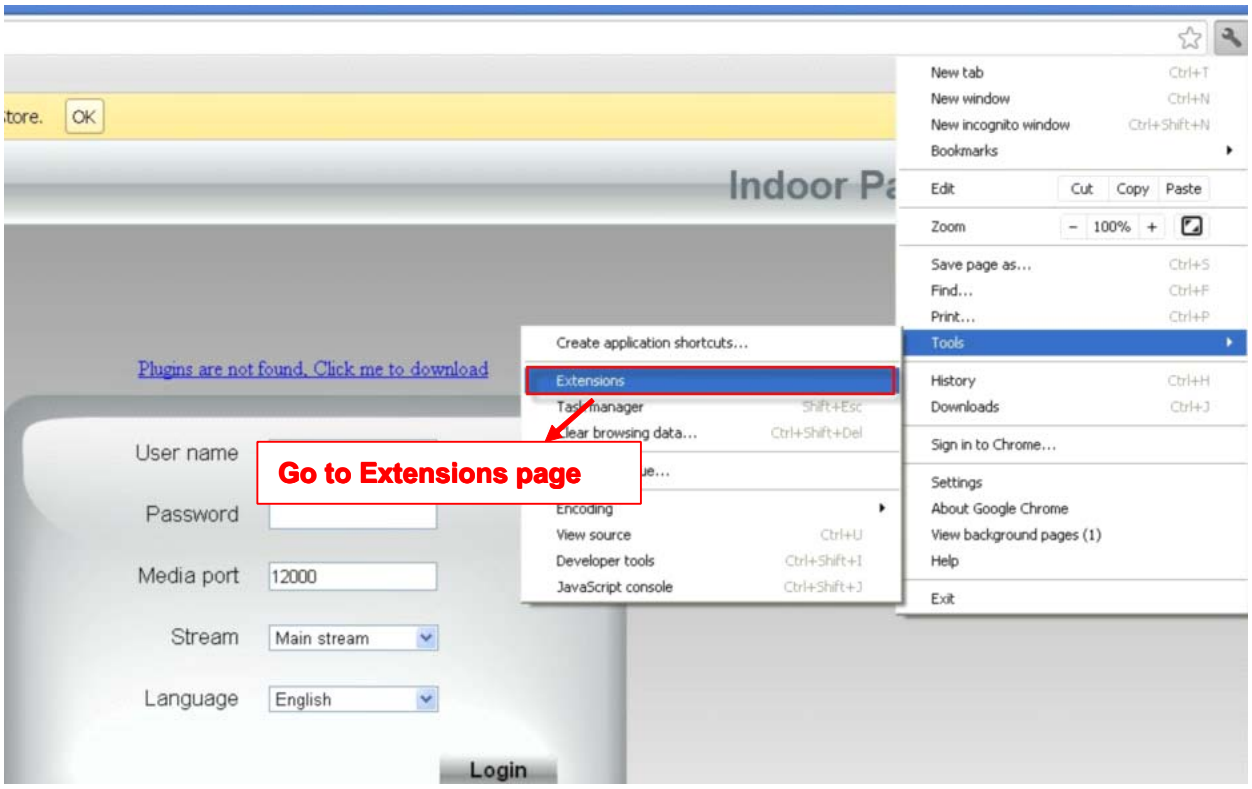

Figure 5.4

Click Add button to install the Plugins.

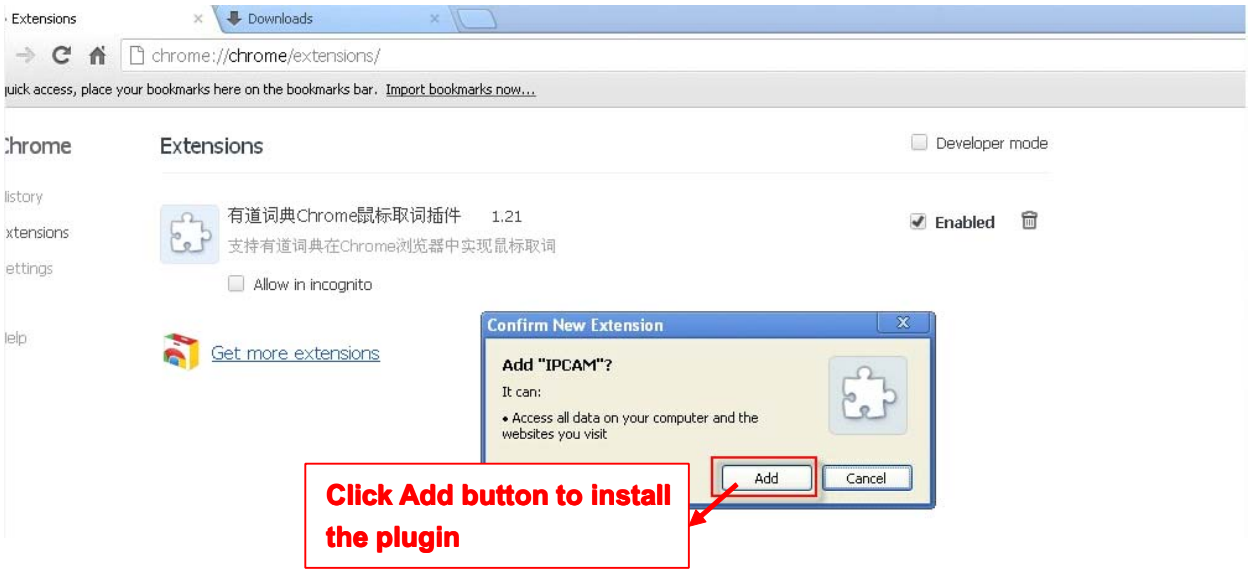

Figure 5.5

Reboot the browser and relogin the camera, you will see the surveillance window.

5.1.3 I have forgotten the administrator password

To reset the administrator username and password, press and hold down the RESET BUTTON for 5 seconds. Upon releasing the reset button, wait for 20 seconds, the camera will reboot and the username and password will return to the factory default administrator username and password. Please power on the camera before reset
Default administrator username: **admin**
Default administrator password: No password

5.1.4 Camera can not record when I click Record button or I can't change the manually record path

When you use Windows7 or Vista, you may be not able to do manually record or change the record path because of the security settings of computer.
There are two ways to resolve this problem:
(1) Please add the camera as a trusted site to resolve this issue. The steps are
IE browser→Tool→Internet Properties→Security→Trusted sites→Sites→Add

(2) Open IE browser, then right click, select "Run as administrator"

5.1.5 Subnet doesn't match

Check whether your ipcamera in the same subnet of your computer. The step is **Control Panel→Network Connections→**Dbclick **Local Area Connections** → Choose **General→Properties**.(Figure 3.23/3.24) Check subnet mask, IP address and gateways. When you set IP address please make sure they are in the same subnet. Otherwise you can't access camera.

5.1.6 No Pictures Problems

The video streaming is transmitted by the ActiveX controller. If ActiveX controller isn't installed correctly you will see no video image. You can resolve this problem by this way:
Download ActiveX controller and set the safety property of IE in the PC when you view it first time: IE browser → Tool → Internet Proper → Security → Custom Level → ActiveX control and Plug-ins. Three options of front should be set to be "Enable", The ActiveX programs read by the computer will be stored. As follows:
Enable: Download unsigned ActiveX controls

Enable: Initialize and script ActiveX controls not marked as safe
Enable: Run ActiveX controls and plug-ins

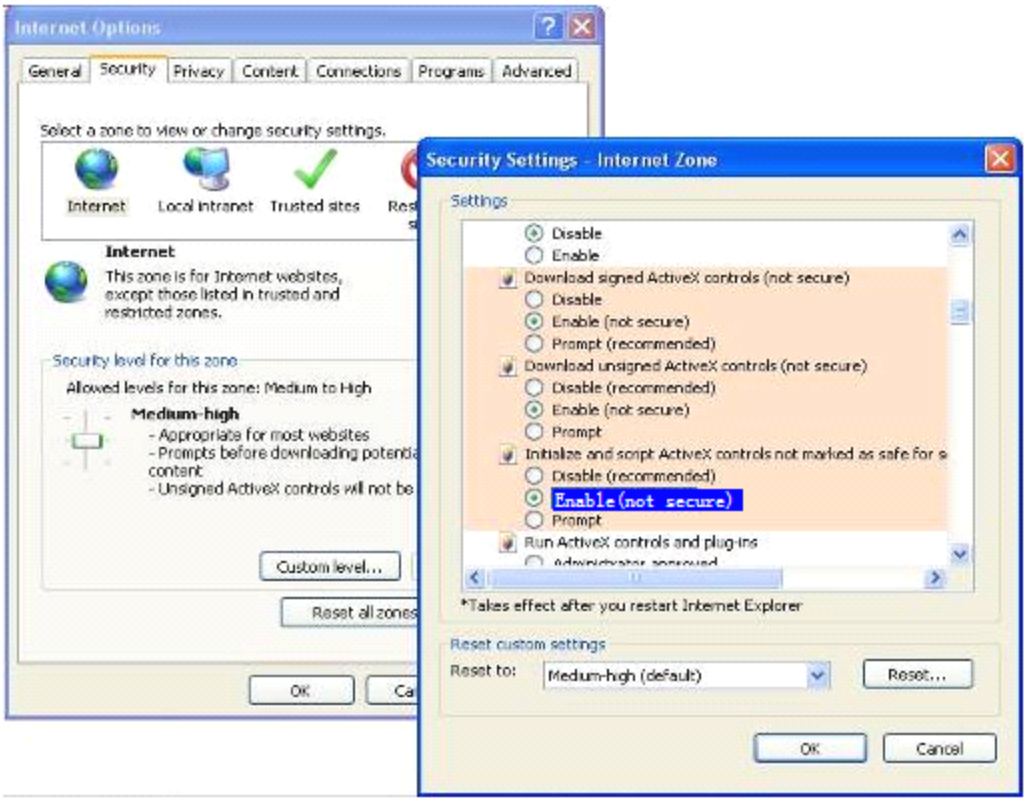

Figure 5.6

If you allow the ActiveX running, but still could not see living video. Please change another port number to try. Don't use port 88.

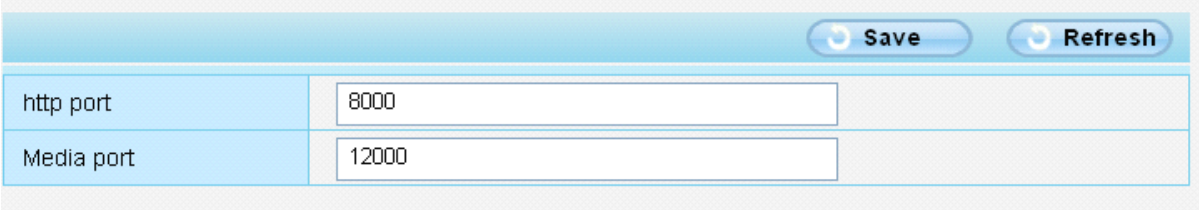

Figure5.7

NOTE: Make sure that your firewall or anti-virus software does not block the camera or ActiveX. If you could not see video, please shut down firewall or anti-virus software to try again.

5.1.7 Can't access IP camera in internet

There are some reasons:
1 ActiveX controller is not installed correctly
2 The port which camera used is blocked by Firewall or Anti-virus software. Please change another port number and try again. (Figure5.7)
3 Port forwarding is not successful(Figure3.30)

Check these settings and make sure they are correct.

5.1.8 UPnP always failed

UPnP only contains port forwarding in our recent software. Sometimes, it may be failed to do port forwarding automatically because of firewall or anti-virus software. It also has much relation with router's security settings. So we recommend you do port forwarding manually. You can view your camera in internet successfully after you do port forwarding manually in your router(Figure 3.30).

5.1.9 Camera can not connect wireless

If your camera could not connect wireless after you set wireless settings and plug out the cable. Please check whether your settings are correct or not.
Normally, camera can't connect wireless mainly because of wrong settings.
Make sure broadcast your SSID; use the same encryption for router and camera.

5.1.10 Can't see other cameras listed in multi-device when using remote access

If you want to view all the cameras via the WAN, verify that each camera added in the multi-device settings can be accessed by using the DDNS name and port number. Use the DDNS domain name not the camera's LAN IP. (For more details see: How to add cameras in WAN)

5.2 Default Parameters

Default network Parameters
IP address: obtain dynamically
Subnet mask: obtain dynamically
Gateway: obtain dynamically
DDNS: Embedded FOSCAM domain name

Username and password
Default admin username: admin with a blank password

5.3 Specifications

ITEMS		FI9818W
Image Sensor	Image Sensor	High Definition Color CMOS Sensor
	Display Resolution	1280*720 Pixels
	Lens	f: 2.8mm
	Mini. Illumination	0.5Lux
Lens	Lens Type	Glass Lens
	IR CUT	Filter will change automatically
Video	Image Compression	H.264
	Resolution	720p（1280*720），VGA（640*480）
	Flip Mirror Images	Vertical / Horizontal
	Light Frequency	50Hz, 60Hz
	Video Parameters	Brightness, Contrast
Audio	Input	Built-in Microphone
	Output	Built-in Speaker,with a audio jack
	Audio Compression	H.264
Communication	Ethernet	One 10/100Mbps RJ-45
	Supported Protocol	HTTP,FTP,TCP/IP,UDP,SMTP,DHCP,PPPoE,DDNS,UPnP,GPRS
	Wireless Standard	IEEE 802.11b/g/n
	Data Rate	802.11b: 11Mbps(Max.) 802.11g: 54Mbps(Max.) 802.11n: 150Mbps(Max.)
	Wireless Security	WEP & WPA & WPA2 Encryption
	Infrared Light	11 IR LEDs, Night visibility up to 8 meters
	Dimension	110(L) x100(W) x108mm(H)
	Gross Weight	780g (Color Box Size:200X124X189mm)
	Net Weight	430g (accessories included)
Power	Power Supply	DC 5V/2.0A (EU,US,AU adapter or other types optional)
	Power Consumption	5Watts (Max.)
Environment	Operate Temper.	0° ~ 55°C (32°F ~ 131°F)
	Operating Humidity	20% ~ 85% non-condensing
	Storage Temper.	-10°C ~ 60° (14°F ~ 140°F)
	Storage Humidity	0% ~ 90% non-condensing
PC Requirements	CPU	2.0GHZ or above
	Memory Size	256MB or above
	Display Card	64M or above
	Supported OS	Microsoft Windows 2000/XP/Vista/Windows7-32bit/Windows7-64bit/Windows8- 32 bit/ Windows8-64bit/ mac
	Browser	IE 6.0, IE7.0, IE8.0,IE9.0, Firefox2.0,Firefox3.0, Google Chrome, Safari or other standard browsers
Certification	CE,FCC	

5.4 CE & FCC

Electromagnetic Compatibility (EMC)

FCC Statement

This device compiles with FCC Rules Part 15. Operation is subject to the following two conditions.

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is like to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

FCC Caution

Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

5.5 WARRANTY

ShenZhen FOSCAM Intelligent Technology Limited.("FOSCAM") values your business and always attempts to provide you the very best of service.

No limited hardware warranty is provided by FOSCAM unless your FOSCAM product ("product") was purchased from an authorized distributor or authorized reseller. Distributors may sell products to resellers who then sell products to end users. No warranty service is provided unless the product is returned to an authorized return center in the region where the product was first shipped by FOSCAM or to the point-of-purchase, which may have regional specific warranty implications.

If you purchase your FOSCAM product from online store, please contact the point-of-purchase and ask for return/replacement/repair service.

Hardware Warranty Information

- FOSCAM provide 2-year limited warranty for naked product and 6-month limited warranty for accessories.

Limited Hardware Warranty

- FOSCAM products are warranted to be free from manufacturing defects in materials and workmanship starting from the shipping date of FOSCAM.

This limited hardware warranty does not cover:

- **Software**, including the software added to the products through our factory-integration system, software that included in the CD,etc.
- Usage that is not in accordance with product instructions.
- Failure to follow the product instructions.
- **Abuse firmware upgrade without the authorized technician's guidance.**
- **Normal wear and tear.**

Return Procedures

- Please read FOSCAM warranty policy & policy of your reseller first before sending items back to point-of-purchase.
- Customer must first contact point-of-purchase to obtain a **Return Merchandise Authorization** (**RMA**) number before returning the product. If the product you received is suspected to be defective and the product warranty has not expired, The RMA number will allow your reseller to track your return much easier and help them expedite processing your request.
- After receiving your RMA case number, pack the item(s) very well with the original box and all the original accessories included such as power adapters, brackets, cables, manuals, and driver CD disks.
- **Write your RMA number and the return reason** (the problem of the product) on the warranty card along with the complete package to send them back.

Replacement Services

- **If customers ask for replacement service, please contact point-of-purchase and follow their policy.**
- Our technicians will inspect all items returned for replacement requests. If the retuned product is found in working order, we will return the same item received. However customers shall be responsible for all shipping & handling charges incurred for getting the units back to customers.
- If returned products are found defective, we will replace the product and assume the shipping cost for sending back the replacement unit to customers.
- If for any reason, we are unable to provide a replacement of the original returned item(s). You will have a choice for a “Substitute” item at the same equal value.
- We do not provide exchange and replacement due to normal **hardware upgrade** according the market after 14 days after the product is delivered.
- Our technicians will test the product before send out the replacement, any other demand for **more than two times** replacement for the same product during replacement limit will be rejected.
- **Replaced products are warranted from the balance of the former warranty period.**

Warranty Forfeiture

- Warranty is void if purchase from unauthorized distributor or reseller.
- **Warranty is void if trade-mark, serial tags, product stickers have been removed, altered or tampered with.**
- Warranty is void for mishandling, improper use, or defacing the product.
- **Abuse firmware upgrade without the authorized technician’s guidance.**
- Warranty is void for physical damage, altered, either internally or externally, improper or inadequate packaging when returned for RMA purposes.
- Warranty is void if damage has resulted from accident, dismantle, abuse, or service or modification by someone other than the appointed vendor, souse, fission or the spare part has been over the period of warranty.
- Warranty is void if product is damaged due to improper working environment or operation. (For example, improper temperature, humidity, unusual physical or electrical stress or interference, failure or fluctuation of electrical power, static electricity, **using wrong power adapter**, etc.)
- Warranty is void if damaged by the use of parts not manufactured or sold by FOSCAM.
- Damage caused by improper installation of third-party products.
- Warranty is void if damaged for irresistible cause, such as earthquake, fire, lightning, flood, etc.
- Product beyond limited warranty.

Shipping Fee

- If products are defective or damaged under normal use or operation in the replacement limit, distributors or resellers are responsible for the shipping cost the product back to

customers, customers should assume the shipping cost send the product to the point-of-purchase.
- During replacement limit, if customers ask for replacement due to the product does not fit for customer's personal expectation, customers should responsible for both shipping fee.
- Customers shall be responsible for both shipping fee if their product beyond the replacement limit but still in warranty limit.

Repair Service Out Of Warranty

- FOSCAM provide extra repair service for product that out of warranty, it is chargeable. The total fee contains device cost and service fee. Device cost (including accessories) is the standard uniform price provide by FOSCAM.
- Different region may have different service fee, please contact the point-of-purchase to confirm that before you ask for this service.
- Our technicians will quote the total price after detect the product, If customers refused to repair after the quotation, customers need pay for the test fee, $3.5/hour. If agree with the quotation, test will be free.
- Repaired product out of warranty will obtains 3-month warranty from the date of the product back to customers.

Limitation of Liability

- FOSCAM is not responsible for other extra warranty or commitment promised by resellers, if your reseller promised some extra commitment or warranty; please ask for written documents to protect your rights and interests.
- FOSCAM does not offer refunds under any circumstances. Please contact the point-of-purchase and follow their refund/return policy.
- FOSCAM shall not be liable under any circumstances for any consequential, incidental, special or exemplary damages arising out of or in any connection with this agreement or the products, including but not limited to lost profits, or any claim based on indemnity or contribution, or the failure of any limited or exclusive remedy to achieve its essential purpose or otherwise. Purchaser's exclusive remedy, as against FOSCAM, shall be the repair or replacement of defective parts. If FOSCAM lists a product on its website specification in error or that is no longer available for any reason, FOSCAM reserves the right to explain it without incurring any liability.

All rights reserved. FOSCAM and the FOSCAM logo are trademarks of ShenZhen FOSCAM Intelligent Technology Limited., registered in the U.S. and other countries.

6 OBTAINING TECHNICAL SUPPORT

While we hope your experience with the IPCAM network camera is enjoyable and easy to use, you may experience some issues or have questions that this User's Guide has not answered. If you have problem with FOSCAM IP camera, please first contact FOSCAM reseller for solving the problems. If our reseller cannot provide service, please contact our service department: tech@foscam.com .